

**SPLIT TYPE
ROOM AIR CONDITIONER**
Universal Floor / Ceiling
Slim Duct / Compact Cassette
Compact Wall Mounted /
Wall Mounted / Floor
INVERTER MULTI

SERVICE INSTRUCTION

Models	Indoor unit	Indoor unit	Outdoor unit
	AB*G14LVTA	AS*G07KMCC	AO*G18LAT3
	AB*G18LVT *	AS*G09KMCC	AO*G24LAT3
	AR*G07LLTA	AS*G12KMCC	AO*G30LAT4
	AR*G09LLTA	AS*G14KMCC	
	AR*G12LL* *	AR*G07LSLAP	
	AR*G14LL* *	AR*G09LSLAP	
	AR*G18LL* *	AR*G12LSLAP	
	AU*G07LVLA	AR*G14LSLAP	
	AU*G09LVLA	AR*G18LSLAP	
	AU*G12LVL *		
	AU*G14LVL *		
	AU*G18LVL *		
	AS*G07LJCA		
	AS*G09LJCA		
	AS*G12LJCA		
	AS*G18LFCA		
	AS*G24LFC *		
	AS*G07LUCA		
	AS*G09LUCA		
	AS*G12LUCA		
	AS*G14LUCA		
	AG*G09LVCA		
	AG*G12LVCA		
	AG*G14LVCA		
	AS*G07LMC*		
	AS*G09LMC*		
	AS*G12LMC*		
	AS*G14LMC*		

Refrigerant
R410A

Refer to the combination in the catalogue

FUJITSU GENERAL LIMITED

CONTENTS

1. DESCRIPTION OF EACH CONTROL OPERATION

1. CAPACITY CONTROL.....	01-01
2. AUTO CHANGEOVER OPERATION.....	01-01
3. INDOOR FAN CONTROL.....	01-03
4. LOUVER CONTROL.....	01-11
5. OUTDOOR FAN CONTROL.....	01-17
6. TIMER OPERATION CONTROL.....	01-18
7. COMPRESSOR CONTROL.....	01-21
8. ELECTRONIC EXPANSION VALVE CONTROL.....	01-22
9. TEST OPERATION CONTROL.....	01-22
10. PREVENT TO RESTART FOR 3 MINUTES (3 MINUTES ST).....	01-22
11. 4-WAY VALVE EXTENSION SELECT.....	01-23
12. AUTO RESTART.....	01-23
13. MANUAL AUTO OPERATION.....	01-23
14. COMPRESSOR PREHEATING.....	01-24
15. POWERFUL OPERATION.....	01-24
16. 10°C HEAT OPERATION.....	01-24
17. ECONOMY OPERATION.....	01-24
18. FRESH AIR CONTROL.....	01-25
19. EXTERNAL ELECTRICAL HEATER CONTROL.....	01-25
20. DRAIN PUMP OPERATION.....	01-26
21. DEFROST OPERATION CONTROL.....	01-27
22. VARIOUS PROTECTIONS.....	01-30

2. TROUBLE SHOOTING

2-1 ERROR DISPLAY.....	02-01
2-1-1 INDOOR UNIT DISPLAY.....	02-01
2-1-2 WIRED REMOTE CONTROLLER DISPLAY(2 wire remote controller).....	02-03
2-1-3 WIRED REMOTE CONTROLLER DISPLAY.....	02-04
2-1-4 OUTDOOR UNIT DISPLAY.....	02-05
2-1-5 WIRELESS LAN INDICATOR DISPLAY.....	02-06
2-1-6 MOBILE APP DISPLAY (For AIR CONDITIONER).....	02-07
2-1-7 MOBILE APP DISPLAY (In Wireless LAN Control system).....	02-09
2-2 TROUBLE SHOOTING WITH ERROR CODE.....	02-15
2-3 TROUBLE SHOOTING WITH NO ERROR CODE.....	02-49
2-4 SERVICE PARTS INFORMATION.....	02-62

3. REPLACEMENT PARTS

***Universal Floor / Ceiling
Slim Duct / Compact Cassette
Compact Wall Mounted /
Wall Mounted / Floor type
INVERTER (MULTI)***

1 . DESCRIPTION OF EACH
CONTROL OPERATION

1. CAPACITY CONTROL

Compressor frequency decides by capacity of an indoor unit, operation number of an indoor unit, set temperature, room temperature and outside temperature.

2. AUTO CHANGEOVER OPERATION

When the air conditioner is set to the Auto mode by remote controller, operation starts in the optimum mode from among the Heating, Cooling, Dry and Monitoring mode. During operation, the optimum mode is automatically switched in accordance with temperature changes. The temperature can be set between 18°C and 30°C in 1°C steps.

- ① When operation starts, indoor fan and outdoor fan are operated for around 3 minutes. Room temperature and outdoor temperature are sensed, and the operation mode is selected in accordance with the table below. <Monitoring mode>

(Table 1 : Operation mode selection table)


Room temperature (TR)	Operation mode
$TR > Ts + 2^{\circ}\text{C}$	Cooling (Automatic dry)
$Ts + 2^{\circ}\text{C} \geq TR \geq Ts - 2^{\circ}\text{C}$	*Middle zone
$TR < Ts - 2^{\circ}\text{C}$	Heating

TR : Room temperature
Ts : Setting temperature

*If it's Middle zone, operation mode of indoor unit is selected as below.

- (1). Same operation mode is selected as outdoor unit. If outdoor unit is operating in Cooling, Dry, and Heating mode, indoor unit will be operated by the same operation mode.
- (2). Selected by the outdoor temperature. If outdoor unit is operating in other than Cooling, Dry, and Heating mode, indoor unit will be operated according to the outdoor temperature as below.


(Fig. 1 : Outdoor temperature zone selection)



- ② When Cooling or Dry mode was selected at ① and air flow mode is Auto, the air conditioner operates as follow.
 - The same operation as COOLING OPERATION AND DRY OPERATION.
 - When the room temperature has remained at set temperature -1.5°C, operation is automatically switched to Dry mode.
 - If the room temperature reaches set temperature +2°C during Dry mode, operation returns to Cooling.

(Fig.2 : Auto changeover : Cooling - Dry)

(Air flow mode : Auto)

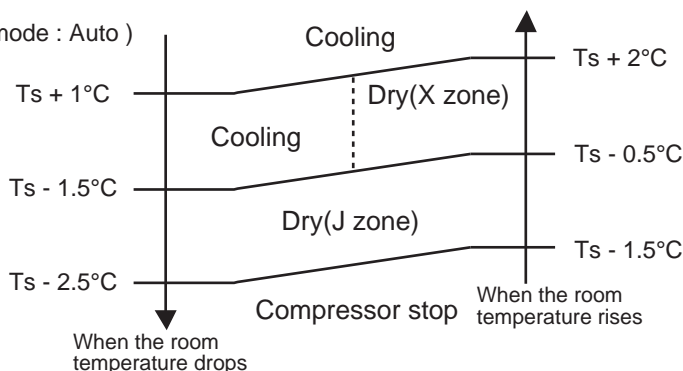


TR : Room temperature
Ts : Setting temperature

③ When Heating was selected at ①, the same operation as HEATING OPERATION of page 01-02 is performed.

④ When the compressor was stopped for 6 consecutive minutes by the temperature control function after the Cooling(Auto:Dry) or Heating mode was selected at ① above, operation is switched to Monitoring and the operation mode is selected again.

■ AUTO CHANGEOVER operation flow chart

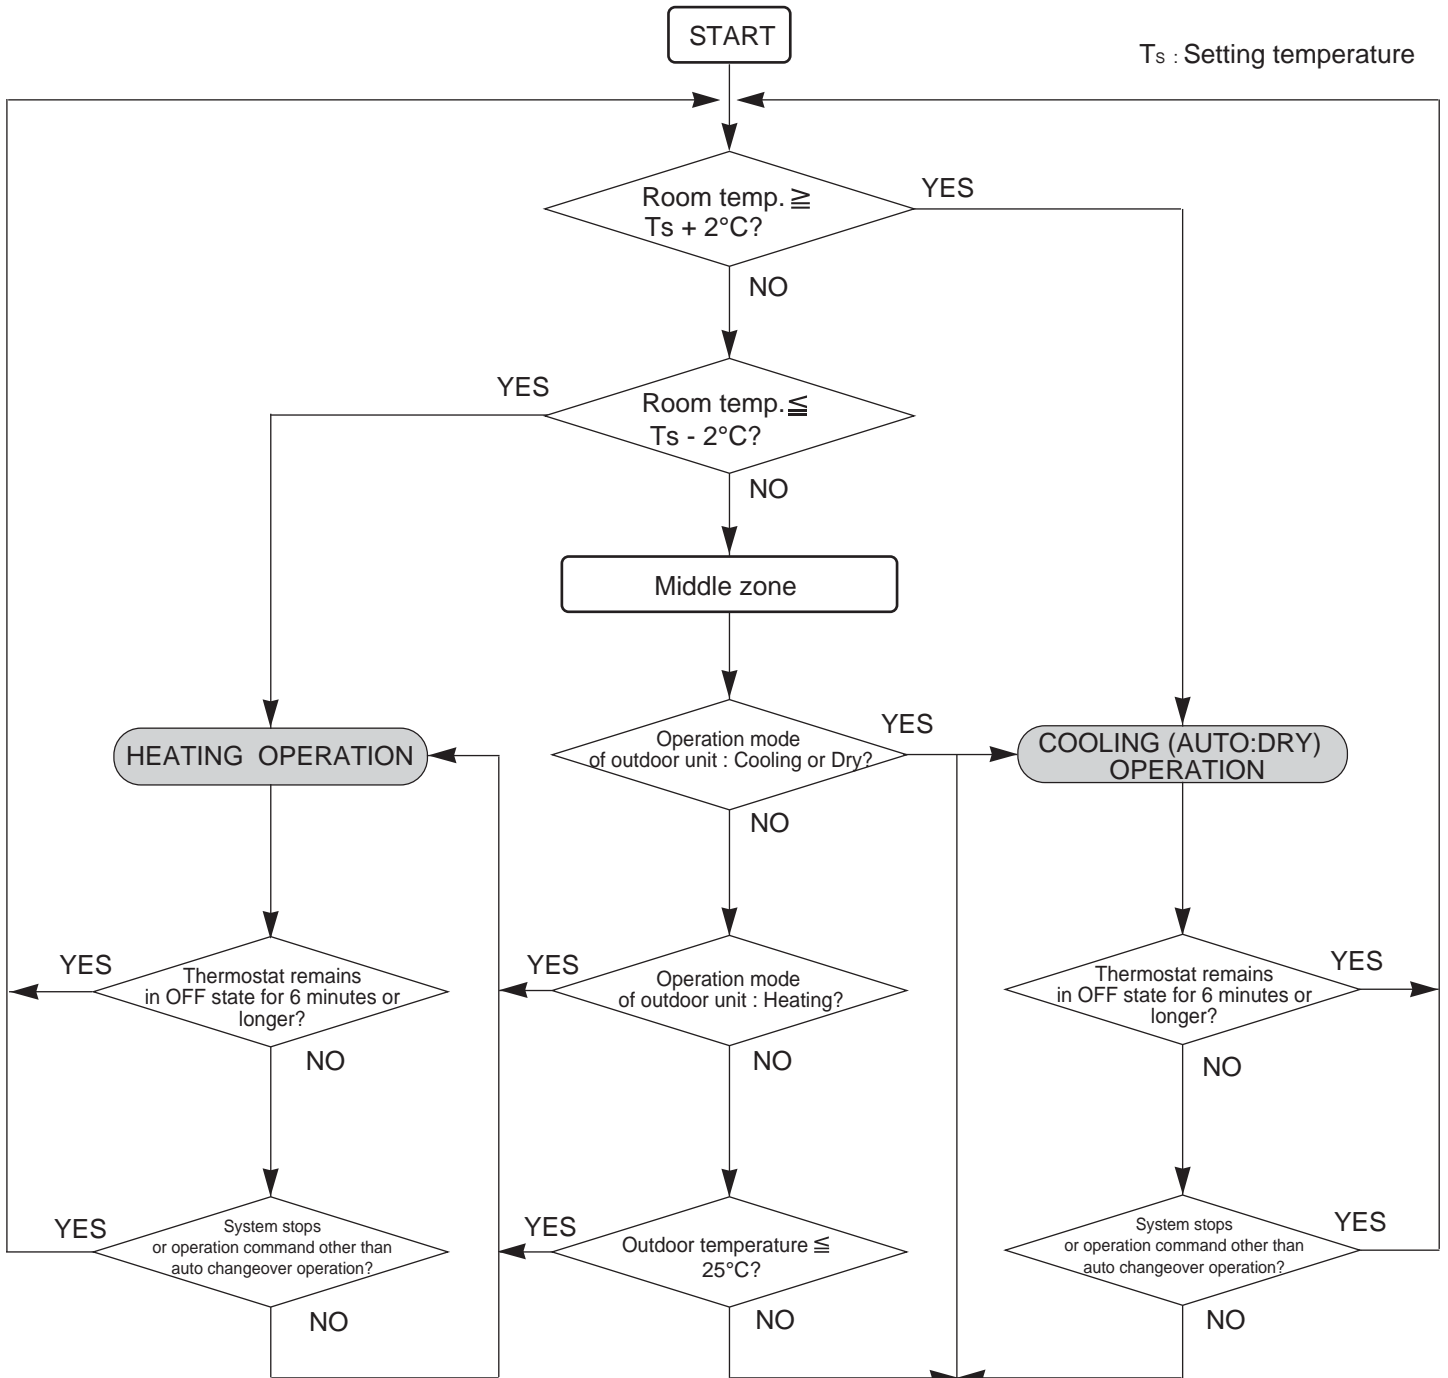

3. INDOOR FAN CONTROL

1. Fan speed

(Table 2 : Indoor fan speed table)

AS*G07LJCA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1050
	Me+	1000
	Me	950
	Lo	850
	Quiet	710
	Cool Air Prevention	600
	S-Lo	480
Cooling / Fan	Hi	1050
	Me	950
	Lo	850
	Quiet	680
	*Soft Quiet	600
Dry	Auto	X, J zone:680

AS*G09LJCA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1100
	Me+	1040
	Me	980
	Lo	850
	Quiet	710
	Cool Air Prevention	600
	S-Lo	480
Cooling / Fan	Hi	1100
	Me	980
	Lo	850
	Quiet	680
	*Soft Quiet	600
Dry	Auto	X, J zone:680

AS*G12LJCA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1200
	Me+	1130
	Me	1050
	Lo	910
	Quiet	710
	Cool Air Prevention	600
	S-Lo	480
Cooling / Fan	Hi	1200
	Me	1050
	Lo	880
	Quiet	680
	*Soft Quiet	600
Dry	Auto	X, J zone:680

AS*G18LFCA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1220
	Me+	1120
	Me	1020
	Lo	900
	Quiet	710
	Cool Air Prevention	660
	S-Lo	480
Cooling / Fan	Hi	1220
	Me	1020
	Lo	900
	Quiet	710
	*Soft Quiet	660
Dry	Auto	X, J zone:710

AS*G24LFC* (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1430
	Me+	1320
	Me	1220
	Lo	1020
	Quiet	900
	Cool Air Prevention	720
	S-Lo	480
Cooling / Fan	Hi	1480
	Me	1220
	Lo	1020
	Quiet	900
	*Soft Quiet	720
Dry	Auto	X, J zone:900

AU*G07LVLA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	590
	Me+	570
	Me	540
	Lo	490
	Quiet	440
	Cool Air Prevention	400
	S-Lo	300
Cooling / Fan	Hi	590
	Me	540
	Lo	490
	Quiet	440
	*Soft Quiet	400
Dry	Auto	X, J zone:440

*Note, during Economy operation and operation mode is Fan, air flow is 1 step downs.
(Hi > Me, Me > Lo, Quiet > Soft Quiet)

AU*G09LVLA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	590
	Me+	570
	Me	540
	Lo	490
	Quiet	440
	Cool Air Prevention	400
	S-Lo	300
Cooling / Fan	Hi	590
	Me	540
	Lo	490
	Quiet	440
	*Soft Quiet	400
Dry	Auto	X, J zone:440

AU*G12LVL* (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	650
	Me+	620
	Me	580
	Lo	520
	Quiet	460
	Cool Air Prevention	400
	S-Lo	300
Cooling / Fan	Hi	660
	Me	580
	Lo	520
	Quiet	460
	*Soft Quiet	400
Dry	Auto	X, J zone:460

AU*G14LVLA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	740
	Me+	700
	Me	670
	Lo	600
	Quiet	480
	Cool Air Prevention	400
	S-Lo	300
Cooling / Fan	Hi	730
	Me	630
	Lo	540
	Quiet	460
	*Soft Quiet	400
Dry	Auto	X, J zone:460

AU*G18LVLA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	840
	Me+	800
	Me	750
	Lo	650
	Quiet	500
	Cool Air Prevention	400
	S-Lo	300
Cooling / Fan	Hi	790
	Me	660
	Lo	570
	Quiet	460
	*Soft Quiet	400
Dry	Auto	X, J zone:460

AR*G07LL*A (Static pressure:25Pa) (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1160
	Me	1000
	Lo	940
	Quiet	880
	S-Lo	500
Cooling / Fan	Hi	1160
	Me	1000
	Lo	940
	Quiet	880
	*Soft Quiet	500
Dry	Auto	X, J zone:880

AR*G09LL*A (Static pressure:25Pa) (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1260
	Me	1160
	Lo	1060
	Quiet	960
	S-Lo	500
Cooling / Fan	Hi	1260
	Me	1160
	Lo	1060
	Quiet	960
	*Soft Quiet	500
Dry	Auto	X, J zone:960

*Note, during Economy operation and operation mode is Fan, air flow is 1 step downs.
(Hi > Me, Me > Lo, Quiet > Soft Quiet)

AR*G12LL** (Static pressure:25Pa) (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1340
	Me	1240
	Lo	1140
	Quiet	1030
	S-Lo	500
Cooling / Fan	Hi	1340
	Me	1240
	Lo	1140
	Quiet	1030
	*Soft Quiet	500
Dry	Auto	X, J zone:1030

AR*G14LL** (Static pressure:25Pa) (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1560
	Me	1400
	Lo	1240
	Quiet	1030
	S-Lo	500
Cooling / Fan	Hi	1560
	Me	1400
	Lo	1240
	Quiet	1030
	Soft Quiet	500
Dry	Auto	X, J zone:1030

AR*G18LL** (Static pressure:25Pa) (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1380
	Me	1300
	Lo	1220
	Quiet	1140
	S-Lo	600
Cooling / Fan	Hi	1380
	Me	1300
	Lo	1220
	Quiet	1140
	*Soft Quiet	600
Dry	Auto	X, J zone:1140

AB*G14LVTA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	850
	Me+	850
	Me	800
	Lo	740
	Quiet	670
	Cool Air Prevention	500
	S-Lo	300
Cooling / Fan	Hi	850
	Me	800
	Lo	740
	Quiet	670
	*Soft Quiet	500
Dry	Auto	X, J zone:670

AB*G18LVTA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Hi	1040
	Me+	1000
	Me	950
	Lo	800
	Quiet	740
	Cool Air Prevention	500
	S-Lo	300
Cooling / Fan	Hi	1040
	Me	950
	Lo	800
	Quiet	740
	*Soft Quiet	500
Dry	Auto	X, J zone:740

*Note, during Economy operation and operation mode is Fan, air flow is 1 step downs.
(Hi > Me, Me > Lo, Quiet > Soft Quiet)

•AR*G07LSLAP (Static pressure : 10pa)

Operation mode	Air flow mode	Speed (rpm)
Heating	Hi	1100
	Me	890
	Lo	810
	Quiet	750
	S-Lo	360
Cooling Fan	Hi	1100
	Me	890
	Lo	810
	Quiet	750
	S-Lo	360
Dry	Auto	750
Monitoring	S-Lo	360

•AR*G09LSLAP (Static pressure : 10pa)

Operation mode	Air flow mode	Speed (rpm)
Heating	Hi	1170
	Me	890
	Lo	810
	Quiet	750
	S-Lo	360
Cooling Fan	Hi	1170
	Me	890
	Lo	810
	Quiet	750
	S-Lo	360
Dry	Auto	750
Monitoring	S-Lo	360

•AR*G12LSLAP (Static pressure : 10pa)

Operation mode	Air flow mode	Speed (rpm)
Heating	Hi	1240
	Me	960
	Lo	850
	Quiet	730
	S-Lo	360
Cooling Fan	Hi	1240
	Me	960
	Lo	850
	Quiet	73
	S-Lo	360
Dry	Auto	730
Monitoring	S-Lo	360

•AR*G14LSLAP (Static pressure : 15pa)

Operation mode	Air flow mode	Speed (rpm)
Heating	Hi	1500
	Me	1220
	Lo	1030
	Quiet	730
	S-Lo	360
Cooling Fan	Hi	1500
	Me	1220
	Lo	1030
	Quiet	730
	S-Lo	360
Dry	Auto	730
Monitoring	S-Lo	360

•AR*G18LSLAP (Static pressure : 15pa)

Operation mode	Air flow mode	Speed (rpm)
Heating	Hi	1290
	Me	1060
	Lo	800
	Quiet	730
	S-Lo	530
Cooling Fan	Hi	1290
	Me	1060
	Lo	800
	Quiet	730
	S-Lo	530
Dry	Auto	730
Monitoring	S-Lo	530

*Note, during Economy operation and operation mode is Fan, air flow is 1 step downs.
(Hi > Me, Me > Lo, Lo > Quiet, Quiet > S-Lo)

AG*G09LVCA

(rpm)

Operation mode	Air flow mode		Fan Speed	
			Upper & Lower air flow mode	Upper air flow mode
Heating	Hi	Upper / Lower	1120/950	1230
	Me	Upper / Lower	1000/850	1090
	Lo	Upper / Lower	860/730	940
	Quiet	Upper / Lower	660/560	750
	Cool Air Prevention	Upper / Lower	660/560	680
	S-Lo	Upper / Lower	660/560	680
Cooling / Fan	Hi	Upper / Lower	1120/950	1230
	Me	Upper / Lower	960/820	1070
	Lo	Upper / Lower	820/700	910
	Quiet	Upper / Lower	660/560	750
	Soft Quiet	Upper / Lower	570/480	680
Dry	Auto	Upper / Lower	-	X, J zone:750

AG*G12LVCA

(rpm)

Operation mode	Air flow mode		Fan Speed	
			Upper & Lower air flow mode	Upper air flow mode
Heating	Hi	Upper / Lower	1240/1040	1300
	Me	Upper / Lower	1080/920	1140
	Lo	Upper / Lower	910/770	980
	Quiet	Upper / Lower	660/560	750
	Cool Air Prevention	Upper / Lower	660/560	680
	S-Lo	Upper / Lower	660/560	680
Cooling / Fan	Hi	Upper / Lower	1240/1040	1300
	Me	Upper / Lower	1050/890	1120
	Lo	Upper / Lower	860/730	930
	Quiet	Upper / Lower	660/560	750
	Soft Quiet	Upper / Lower	570/480	680
Dry	Auto	Upper / Lower	-	X, J zone:750

AG*G14LVCA

(rpm)

Operation mode	Air flow mode		Fan Speed	
			Upper & Lower air flow mode	Upper air flow mode
Heating	Hi	Upper / Lower	1330/1120	1370
	Me	Upper / Lower	1140/970	1180
	Lo	Upper / Lower	940/800	1020
	Quiet	Upper / Lower	660/560	750
	Cool Air Prevention	Upper / Lower	660/560	680
	S-Lo	Upper / Lower	660/560	680
Cooling / Fan	Hi	Upper / Lower	1330/1120	1370
	Me	Upper / Lower	1100/930	1160
	Lo	Upper / Lower	890/750	960
	Quiet	Upper / Lower	660/560	750
	Soft Quiet	Upper / Lower	570/480	680
Dry	Auto	Upper / Lower	-	X, J zone:750

AS*G07LUCA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Powerful	1030
	Hi	980
	Me+	980
	Me	910
	Lo	850
	Quiet	650
	Cool Air Prevention	610
	S-Lo	570
Cooling / Fan	Powerful	1030
	Hi	980
	Me	910
	Lo	850
	Quiet	650
	*Soft Quiet	610
	Dry	Auto

AS*G09LUCA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Powerful	1050
	Hi	1030
	Me+	1030
	Me	950
	Lo	850
	Quiet	650
	Cool Air Prevention	610
	S-Lo	570
	Cooling / Fan	Powerful
Hi		1030
Me		950
Lo		850
Quiet		650
*Soft Quiet		610
Dry		Auto

AS*G12LUCA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Powerful	1160
	Hi	1110
	Me+	1110
	Me	1030
	Lo	930
	Quiet	650
	Cool Air Prevention	610
	S-Lo	570
	Cooling / Fan	Powerful
Hi		1110
Me		1030
Lo		930
Quiet		650
*Soft Quiet		610
Dry		Auto

AS*G14LUCA (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Powerful	1230
	Hi	1180
	Me+	1180
	Me	1080
	Lo	1010
	Quiet	790
	Cool Air Prevention	610
	S-Lo	570
	Cooling / Fan	Powerful
Hi		1180
Me		1080
Lo		980
Quiet		740
*Soft Quiet		710
Dry		Auto

*Note, during Economy operation and operation mode is Fan, air flow is 1 step downs.
(Hi > Me, Me > Lo, Quiet > Soft Quiet)

AS*G07LMC* (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Powerful	1090
	Hi	1050
	Me+	1000
	Me	950
	Lo	850
	Quiet	710
	Cool Air Prevention	600
	S-Lo	480
Cooling / Fan	Powerful	1090
	Hi	1050
	Me	950
	Lo	850
	Quiet	680
	*Soft Quiet	600
Dry	Auto	X, J zone:680

AS*G09LMC* (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Powerful	1140
	Hi	1090
	Me+	1040
	Me	980
	Lo	850
	Quiet	710
	Cool Air Prevention	600
	S-Lo	480
Cooling / Fan	Powerful	1140
	Hi	1090
	Me	980
	Lo	850
	Quiet	680
	*Soft Quiet	600
Dry	Auto	X, J zone:680

AS*G12LMC* (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Powerful	1240
	Hi	1190
	Me+	1120
	Me	1050
	Lo	910
	Quiet	710
	Cool Air Prevention	600
	S-Lo	480
Cooling / Fan	Powerful	1240
	Hi	1190
	Me	1050
	Lo	880
	Quiet	680
	*Soft Quiet	600
Dry	Auto	X, J zone:680

AS*G14LMC* (rpm)

Operation mode	Air flow mode	Fan Speed
Heating	Powerful	1240
	Hi	1190
	Me+	1120
	Me	1050
	Lo	910
	Quiet	710
	Cool Air Prevention	600
	S-Lo	480
Cooling / Fan	Powerful	1240
	Hi	1190
	Me	1050
	Lo	880
	Quiet	680
	*Soft Quiet	600
Dry	Auto	X, J zone:680

*Note, during Economy operation and operation mode is Fan, air flow is 1 step downs.
(Hi > Me, Me > Lo, Quiet > Soft Quiet)

■ Wall mounted type (For KMCC)

● Fan speed

Indoor fan speed is defined as below.

Operation mode	Fan mode	Speed (rpm)			
		ASYG07KMCC	ASYG09KMCC	ASYG12KMCC	ASYG14KMCC
Heating	POWERFUL	1,210	1,250	1,270	1,360
	HIGH	1,140	1,180	1,200	1,290
	MED+	1,040	1,040	1,100	1,160
	MED	950	970	1,030	1,100
	LOW	800	810	880	910
	QUIET	630	630	630	670
	Cool air prevention	550	550	550	580
	S-LOW	400	400	400	470
Cooling/Fan	POWERFUL	1,120	1,180	1,180	1,320
	HIGH	1,050	1,110	1,110	1,250
	MED	900	920	920	1,020
	LOW	760	760	760	810
	QUIET	550	550	550	580
	Soft quiet	470*1	470*1	470*1	510*1
	S-LOW	400*2	400*2	400*2	470*2
Dry		X zone: 550 J zone: 550	X zone: 550 J zone: 550	X zone: 550 J zone: 550	X zone: 580 J zone: 580

*1: Fan mode only

*2: Cooling mode only

2. FAN OPERATION

The airflow can be switched in 5 steps such as Auto, Quiet, Lo, Me, Hi, while the indoor fan only runs.


When Fan mode is set at (Auto), it operates on (Me) Fan Speed. < All models >

3. COOLING OPERATION (Auto : Cooling)

Switch the airflow [Auto], and the indoor fan motor will run according to a room temperature, as shown in Fig 3.

On the other hand, if switched in [Hi] ~ [Quiet], the indoor motor will run at a constant airflow of [Cooling] operation modes Quiet, Lo, Me, Hi.

(Fig.3 : Airflow change - over (Cooling : Auto))

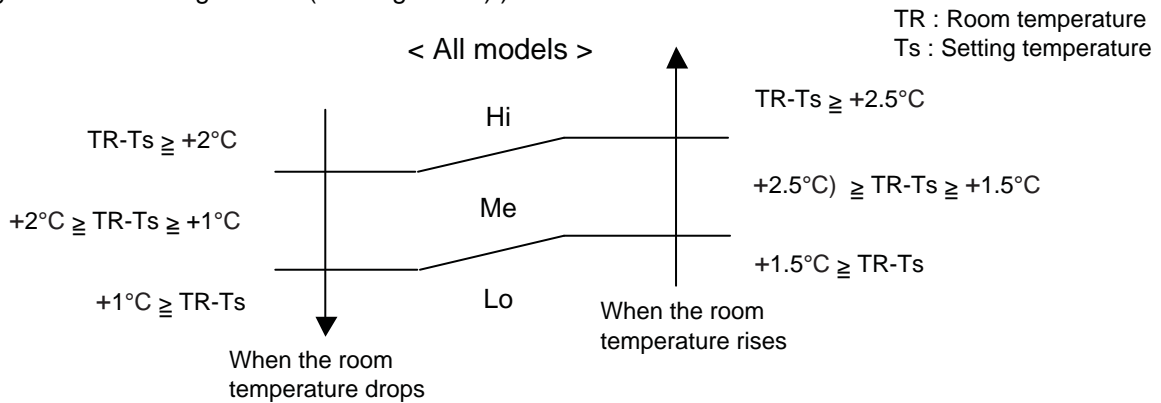


3-1 INDOOR UNIT FAN CONTROL FOR ENERGY SAVING (Cooling mode)

Switch the airflow at cooling mode, and the indoor fan motor will run as shown in Fig.4. It depends on the Function setting "Indoor unit fan control for energy saving."

4. DRY OPERATION (Auto : Dry)

During the dry operation, the fan speed setting can not be changed, it operates automatically as shown in Fig. 4. Room temperature variation which the room temperature sensor of the indoor unit body has detected.

(Fig. 4 : Indoor fan control)

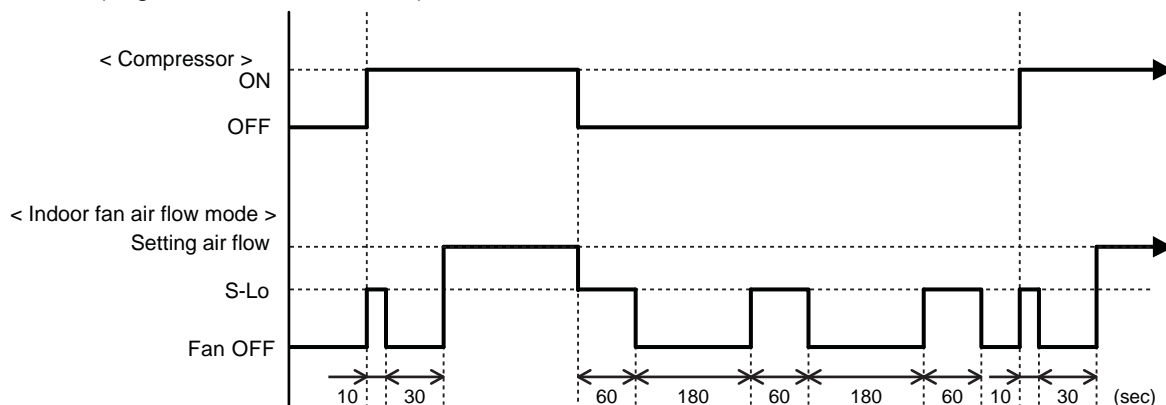


5. HEATING OPERATION (Auto : Heating)

Switch the airflow [Auto], and the indoor fan will run according to a room temperature, as shown in Fig 5.

On the other hand, if switched in [Hi] ~ [Quiet], the indoor fan will run at a constant airflow of [Heat] operation modes Quiet, Lo, Me, Hi, as shown in Table 2.

(Fig.5 : Airflow change - over (Heating : Auto))

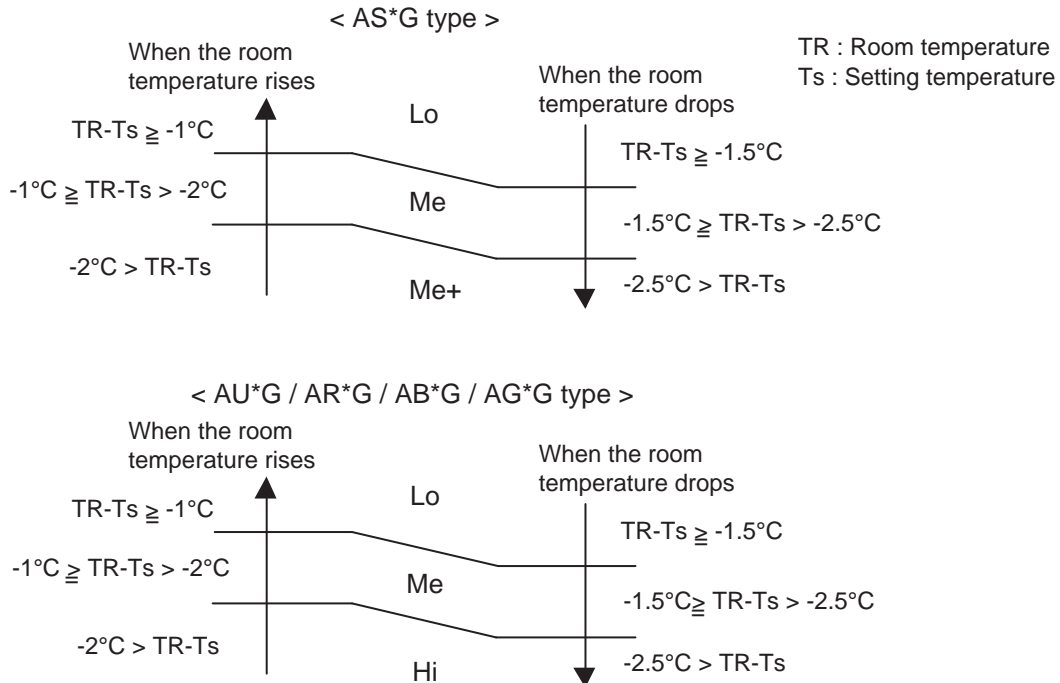


6. COOL AIR PREVENTION CONTROL (For Heating and 10°C heat operation)

The maximum value of the indoor fan speed is set as shown in Fig 6, based on the detected temperature by the indoor heat exchanger sensor in heating mode.


Field setting is necessary at AR and AU type as "Cool air prevention : effective".

(Fig.6 : Airflow change - over for cool air prevention)


During NORMAL HEATING OPERATION

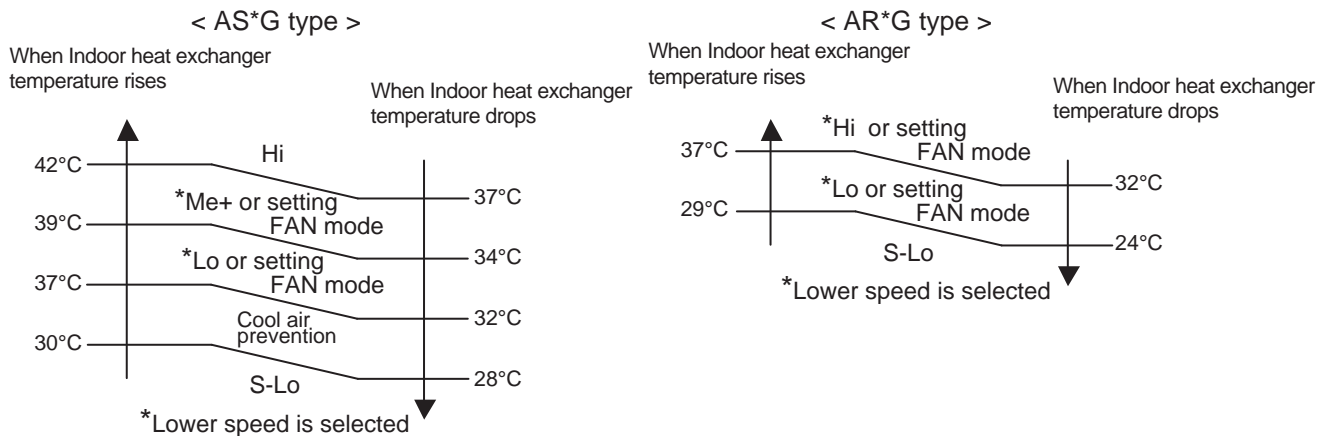

< AB*G / AU*G type >

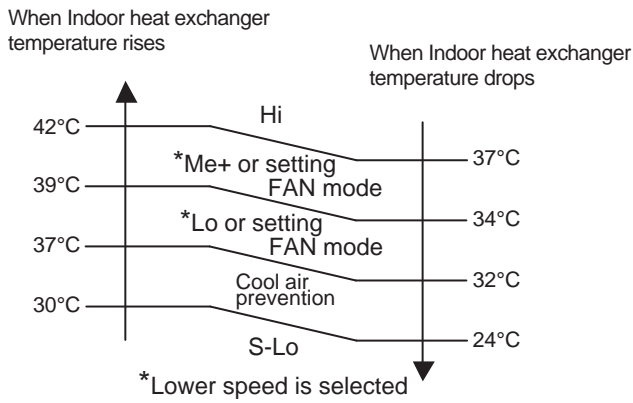


< AG*G type >

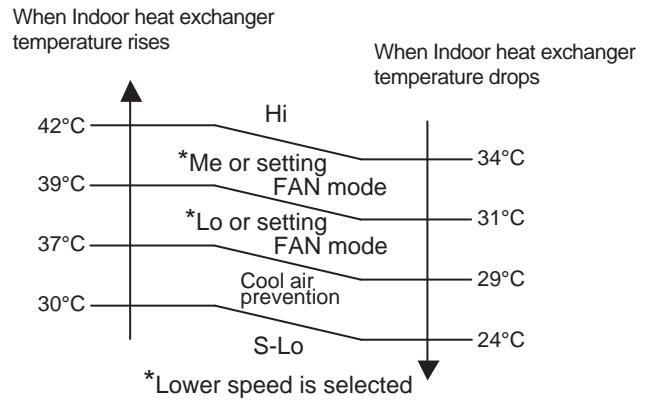


During 10°C HEAT OPERATION


< AS*G / AU*G / AB*G type >

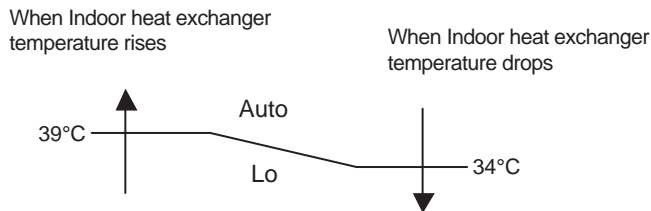

< AR*G type >

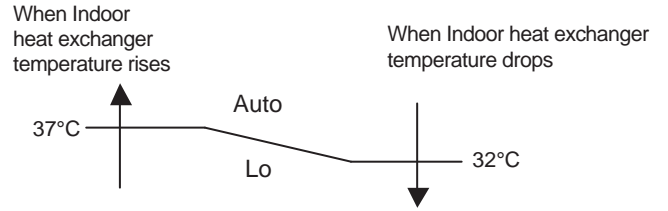

< AG*G type >

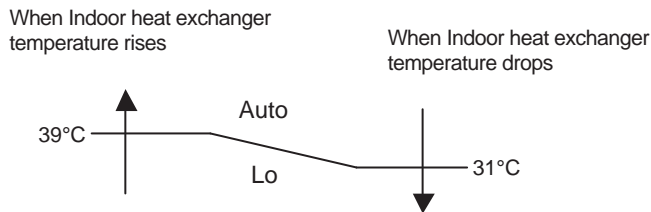

4. LOUVER CONTROL

For Compact Wall Mounted Type, Wall Mounted Type < AS*G07/09/12LJCA,18/24LFCA >

1. VERTICAL LOUVER CONTROL

(Function Range)

Each time the button is pressed, the air direction range will change as follow:

(Fig.7 : Vertical Air Direction Range)


<Compact Wall Mounted Type> <Wall Mounted Type>

① ⇄ ② ⇄ ③ ⇄ ④ ⇄ ⑤ ⇄ ⑥


(Table9 : Recommended Operation Range)

Cooling / Heating / Dry mode / Fan mode


① ⇄ ② ⇄ ③ ⇄ ④ ⇄ ⑤ ⇄ ⑥

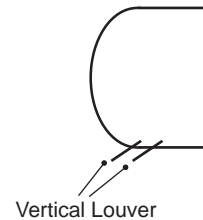

Vertical Louver

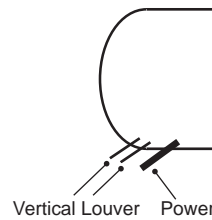

Vertical Louver Power Diffuser

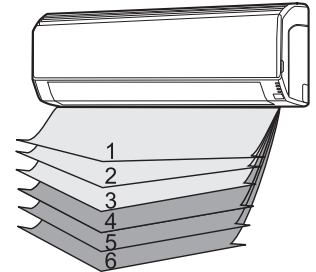

Use the air direction adjustments within the ranges shown above.

- The vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.
 - Cooling / Dry mode : Horizontal flow ①
 - Heating mode : Downward flow AS*G07/09/12LJCA : ⑥, AS*G18/24LFCA : ⑤
- When the temperature of the air being blown out is low at the start of heating operation or during defrosting, the airflow direction temporarily becomes ① to prevent cold air being blown onto the body.
- During use of the Cooling and Dry modes, do not set the Air Flow Direction Louver in the Heating range (④~⑥) for long period of time, since water vapor may condense near the outlet louvers and drop of water may drip from the air conditioner. During the Cooling and Dry modes, if the Air Flow Direction Louvers are left in the heating range for around 30 minutes, they will automatically return to position ③.

2. HORIZONTAL LOUVER CONTROL (For AS*G18/24LFCA)


(Function Range)

Each time the button is pressed, the air direction range will change as follows.


(Fig.8 : Horizontal Air Direction Range)

Cooling / Heating / Dry / Fan mode

① ⇄ ② ⇄ ③ ⇄ ④ ⇄ ⑤



Horizontal Louver

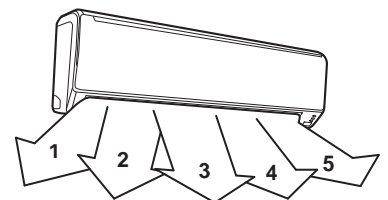

3. SWING OPERATION

Vertical Airflow Swing Operation

When the swing signal is received from the remote controller, the vertical louver starts to swing.

(Swinging Range)

Cooling / Dry / Fan mode(①⇄③) : ① ⇄ ④

Heating / Fan mode(④⇄⑥) : AS*G07/09/12LJCA [④ ⇄⑥], AS*G18/24LFCA [③ ⇄⑥]

- When the indoor fan is S-Lo or Stop mode, the swing operation is interrupted and it stops at either upper end or bottom end.

Horizontal Airflow Swing Operation (For AS*G18/24LFCA)

When the swing signal is received from the remote controller, the horizontal louver starts to swing.

(Swinging Range)

Cooling / Heating / Dry / Fan mode : ① ⇄ ⑤

- When the indoor fan is S-Lo or Stop mode, the swing operation is interrupted and it stops at either upper end or bottom end.

Vertical and Horizontal Airflow Swing Operation

- When the horizontal swing signal is input from remote control, the combination of the vertical and horizontal swing operation is performed.

※ Power Diffuser doesn't swing in any swing operation.

For Wall Mounted Type < AS*G07/09/12/14LUCA >


1. VERTICAL LOUVER CONTROL

(Function Range)

Each time the button is pressed, the air direction range will change as follow:

① ↔ ② ↔ ③ ↔ ④ ↔ ⑤ ↔ ⑥ ↔ ⑦

(Fig.9 : Air Direction Range)

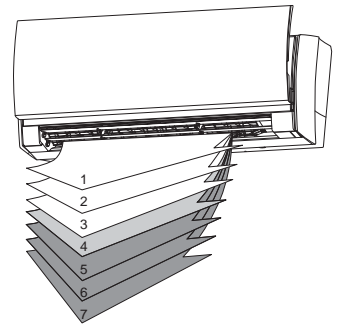

Types of Air flow Direction Setting:

①, ②, ③ : During Cooling/Dry modes


④, ⑤, ⑥, ⑦ : During Heating

The Remote Controller's display does not change.

- Use the air direction adjustments within the ranges shown above.
- The vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.
 - Cooling / Dry mode : Horizontal flow ①
 - Heating mode : Downward flow ⑥
- During AUTO mode operation, for the first a few minutes after beginning operation, air-flow will be horizontal 1; the air direction cannot be adjusted during this period. The air flow direction setting will temporarily become 1 when the temperature of the air -flow is low at the start of the Heating mode.

2. ADJUST THE RIGHT-LEFT LOUVERS

- Move the Right-Left louvers to adjust air flow in the direction you prefer.

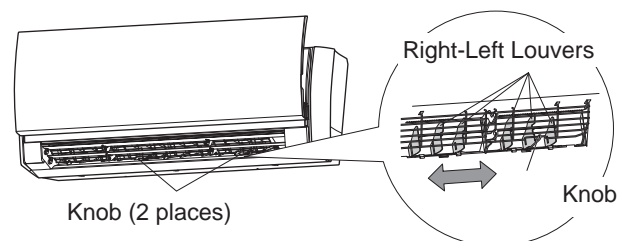

3. SWING OPERATION

To select Vertical Airflow Swing Operation

When the swing signal is received from the remote controller, the vertical louver starts to swing.

(Table9 : Swinging Range)

	Range
Cooling / Dry mode Fan mode (①~④)	① ↔ ④
Heating mode Fan mode (④~⑦)	④ ↔ ⑦

- The SWING operation may stop temporarily when the air conditioner's fan is not operating, or when operating at very low speeds.

To select Horizontal Airflow Swing Operation


(No function)

For Wall Mounted Type < LMCA / LMCE >

1. VERTICAL LOUVER CONTROL

(Function Range)

Each time the button is pressed, the air direction range will change as follow:



The Remote Controller's display does not change.

- If you set the angle to position 4.7 for more than 30 minutes in COOL or DRY mode, they automatically return to position 3.
In COOL or DRY mode, if the angle is set to position 4.7 for many hours, condensation may be formed, and the drips may wet your property.


- Use the air direction adjustments within the ranges shown above.

- The vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.

Cooling / Dry mode : Horizontal flow ①
Heating mode : Downward flow ⑦


- During AUTO or Heating mode operation, for the first a few minutes after beginning operation, air-flow will be horizontal 1; the air direction cannot be adjusted during this period.
The air flow direction setting will temporarily become 1 when the temperature of the air -flow is low at the start of the Heating mode.

Fig.11 : Air Direction Range

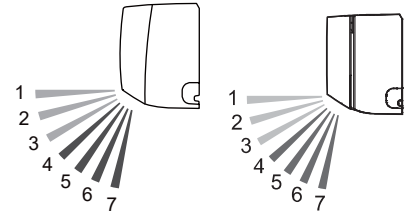

2. ADJUST THE RIGHT-LEFT LOUVERS

- Move the Right-Left louvers to adjust air flow in the direction you prefer.

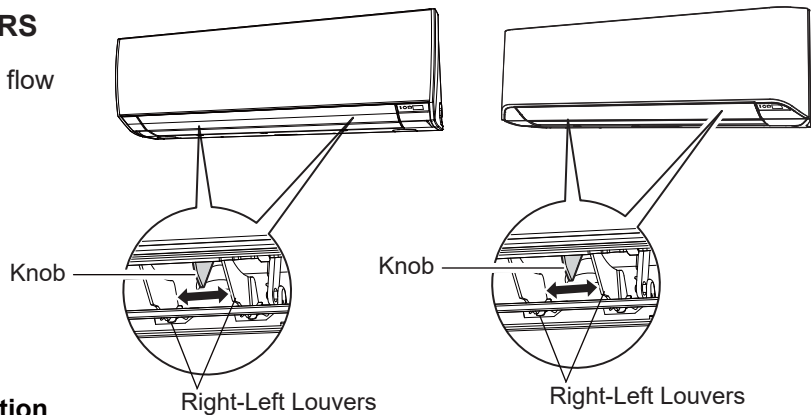

2. SWING OPERATION

To select Vertical Airflow Swing Operation

When the swing signal is received from the remote controller, the vertical louver starts to swing.

(Table4 : Swinging Range)

	Range
Cooling / Dry mode Fan mode (①~③)	① ↔ ③
Heating mode Fan mode (④~⑦)	④ ↔ ⑦

- The SWING operation may stop temporarily when the air conditioner's fan is not operating, or when operating at very low speeds.

To select Horizontal Airflow Swing Operation

(No function)

For Compact Cassette Type < AU*G07/09/12/14/18 >

1. VERTICAL LOUVER CONTROL

(Function Range)


Each time the button is pressed, the air direction range will change as follows:

① ⇄ ② ⇄ ③ ⇄ ④

(Operation Range)

Cooling / Heating / Dry / Fan mode : ①—②—③—④

(Fig.10 : Air Direction Range)

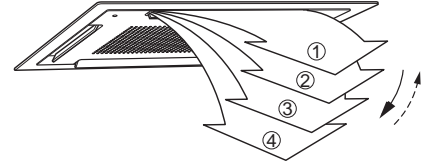

Use the air direction adjustments within the ranges shown above.

- The vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.

Cooling / Dry / Fan mode : Horizontal flow ①

Heating mode : Downward flow ④

- During AUTO mode operation, for the first minute after start-up, air-flow will be horizontal ①; the air direction cannot be adjusted during this period.

2. SWING OPERATION

When the swing signal is received from the remote controller, the vertical louver starts to swing. The range of swing depends on the set airflow direction.

(Swinging Range)

Cooling / Heating / Dry / Fan mode : ① ⇄ ④

- When the indoor fan is either at S-Lo or Stop mode, the swinging operation is interrupted and it stops at either upper end or bottom end.
(Stop mode means Operation stop.)

For Floor / Ceiling Type < AB*G14/18 >


1-1. VERTICAL LOUVER CONTROL

(Function Range)


Each time the button is pressed, the air direction range will change as follows:



(Fig.11 : Air Direction Range : Ceiling installation)

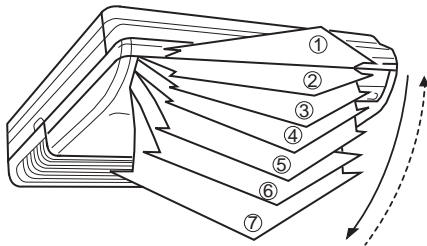

(Fig.12 : Air Direction Range : Floor installation)

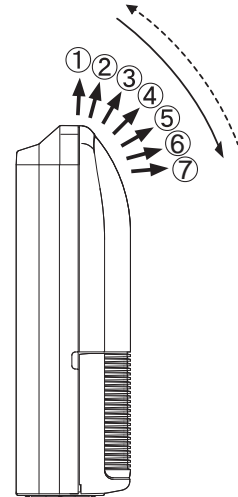

(Operation Range)

Cooling / Heating / Dry / Fan mode : ① - ② - ③ - ④ - ⑤ - ⑥ - ⑦

Use the air direction adjustments within the ranges shown above.

- The vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.

Cooling / Dry / Fan mode : Horizontal flow ①

Heating mode : Downward flow ⑦

- The indoor fan motor starts after the louver reaches to the setting position.

1-2. SWING OPERATION

When the swing signal is received from the remote controller, the vertical louver starts to swing. The range of swing depends on the set airflow direction.

(Swinging Range)

Cooling / Dry / Fan mode : ① ⇔ ④

Heating mode : ③ ⇔ ⑦

- When the indoor fan is either at S-Lo or Stop mode, the swinging operation is interrupted and it stops at either upper end or bottom end.
(Stop mode means Operation stop.)

2-1. HORIZONTAL LOUVER CONTROL



(Function Range)

Each time the button is pressed, the air direction range will change as follows:

① ↔ ② ↔ ③ ↔ ④ ↔ ⑤

(Fig.13 : Air Direction Range : Ceiling installation)

(Fig.14 : Air Direction Range : Floor installation)

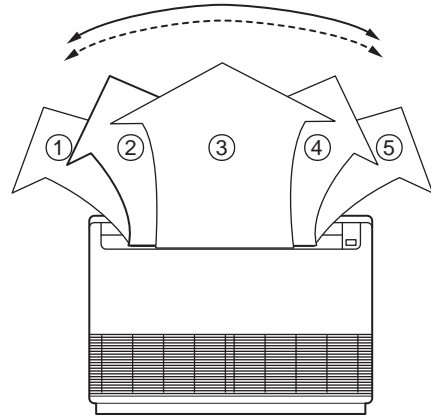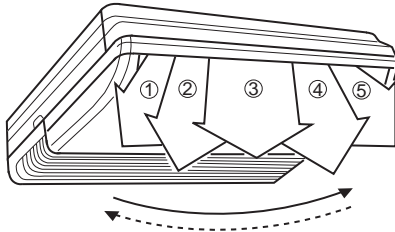

(Operation Range)

Cooling / Heating / Dry / Fan mode : ① - ② - ③ - ④ - ⑤

Use the air direction adjustments within the ranges shown above.

2-2. SWING OPERATION

When the swing signal is received from the remote controller, the horizontal louver starts to swing. The range of swing depends on the set airflow direction.

(Swinging Range)

Cooling / Heating / Dry / Fan mode : ① ↔ ⑤

- When the indoor fan is either at S-Lo or Stop mode, the swinging operation is interrupted and it stops at either upper end or bottom end.
(Stop mode means Operation stop.)

For Floor Type < AG*G09/12/14 >


1. VERTICAL LOUVER CONTROL

(Function and Operation Range)

Each time the button is pressed,
the air direction range will change as follows:

(Fig.15 : Air Direction Range)

① ⇄ ② ⇄ ③ ⇄ ④ ⇄ ⑤

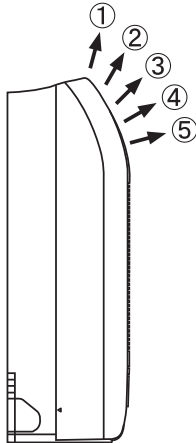

Use the air direction adjustments within the ranges shown above.

- The vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.
Cooling / Dry / Fan mode : Horizontal flow ①
Heating mode : Downward flow ④
- When the temperature of the air being blown out is low at the start of heating operation or during defrosting, the airflow direction temporarily becomes ① to prevent cold air being blown onto the body.
- During Monitor operation in AUTO CHANGEOVER mode, the airflow direction automatically becomes ①, and it cannot be adjusted.

2. SWING OPERATION

When the swing signal is received from the remote controller, the vertical louver starts to swing .

(Swinging Range)

Cooling / Heating / Dry / Fan mode : ① ⇄ ⑤

- When the indoor fan is either at S-Lo or Stop mode, the swinging operation is interrupted and it stops at either upper end or bottom end.

5. OUTDOOR FAN CONTROL

1. Outdoor Fan Motor

Following table 3 shows the fan speed of the outdoor unit.

(Table 3 : Fan speed of the outdoor unit)

	Cooling	Heating
AO*G18LAT3	780/ 730/ 400/ 300/ 250/ 200 rpm	780/ 730/ 660/ 400/ 300/ 250/ 200 rpm
AO*G24LAT3		
AO*G30LAT4	850/ 820/ 780/ 400/ 300/ 200 rpm	850/ 780/ 400/ 300/ 200 rpm

* It runs at 500rpm for 20 seconds after starting up the outdoor fan.

【AO*G18/ 24LAT3】

When the outdoor heat exchanger temperature is lower than 1°C,
the fan speed switches to 780rpm on heating mode.

【AO*G30LAT4】

When the outdoor heat exchanger temperature is lower than 2°C,
the fan speed switches to 850rpm on heating mode.

6. TIMER OPERATION CONTROL

6-1 WIRELESS REMOTE CONTROLLER

The table 4 shows the available timer setting based on the product model.


(Table 4 : Timer setting)

ON TIMER / OFF TIMER	PROGRAM TIMER	SLEEP TIMER	*WEEKLY TIMER
○	○	○	○


* For AS*G07/ 09/ 12/ 14LUCA Type
AS*G07/ 09/ 12/ 14KMCC

1. ON / OFF TIMER

- OFF timer : When the clock reaches the set time, the air conditioner will be turned off.

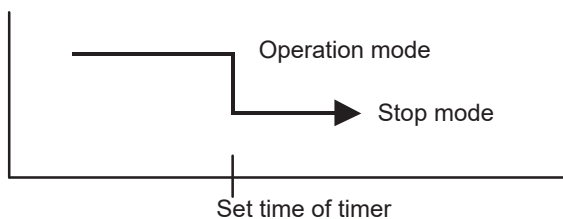


- ON timer : When the clock reaches the set time, the air conditioner will be turned on.

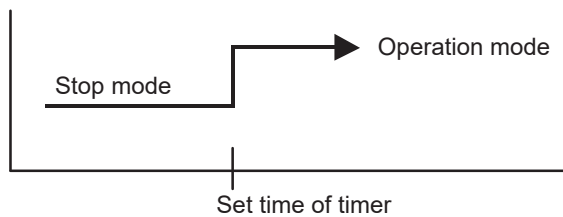

2. PROGRAM TIMER

- The program timer allows the OFF timer and ON timer to be used in combination one time.

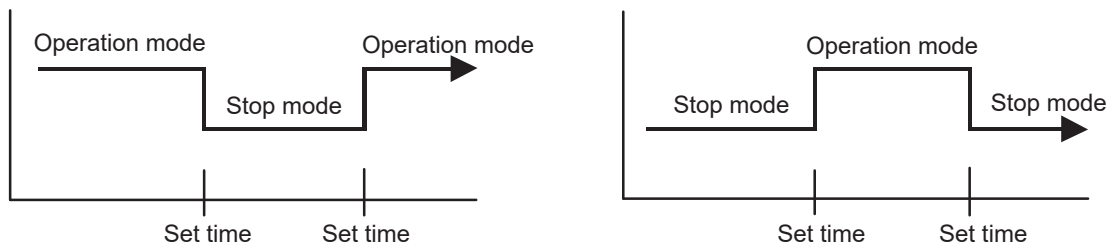

- Operation will start from the timer setting (either OFF timer or ON timer) whichever is closest to the clock's current timer setting.
The order of operations is indicated by the arrow in the remote control unit's display.
- SLEEP timer operation cannot be combined with ON timer operation.

3. SLEEP TIMER


If the sleep is set, the room temperature is monitored and the operation is stopped automatically. If the operation mode or the set temperature is change after the sleep timer is set, the operation is continued according to the changed setting of the sleep timer from that time ON.

In the cooling operation mode

When the sleep timer is set, the setting temperature is increased 1°C.

It increases the setting temperature another 1°C after 1 hour.

After that, the setting temperature is not changed and the operation is stopped at the time of timer setting.

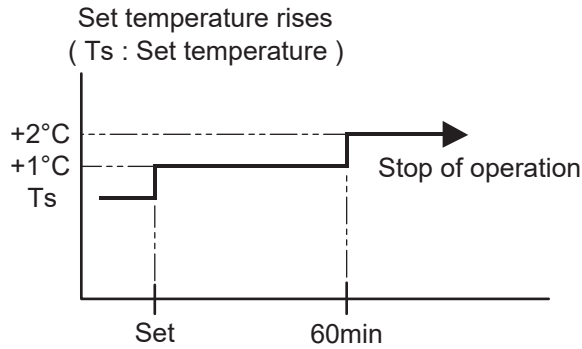


In the heating operation mode

When the sleep timer is set, the setting temperature is decreased 1°C.

It decreases the setting temperature another 1°C every 30 minutes.


Upon lowering 4deg C, the setting temperature is not changed and the operation stops at the time of timer setting.

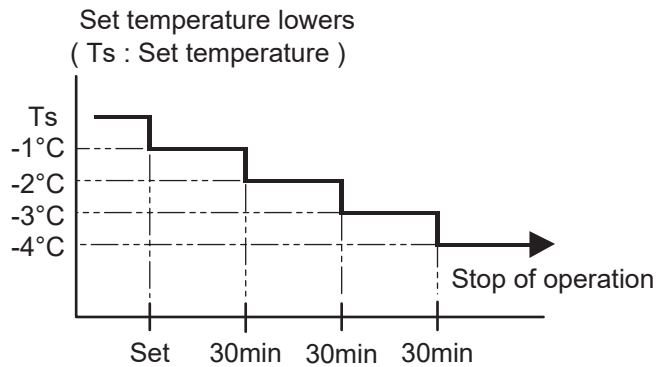

4. WEEKLY TIMER (For AS*G07/ 09/ 12/ 14LUCA Type) AS*G07/ 09/ 12/ 14KMCC

This timer function can set operation times of the each day of the week.

All days can be set together, the weekly timer can be used to repeat the timer setting for all of the days.

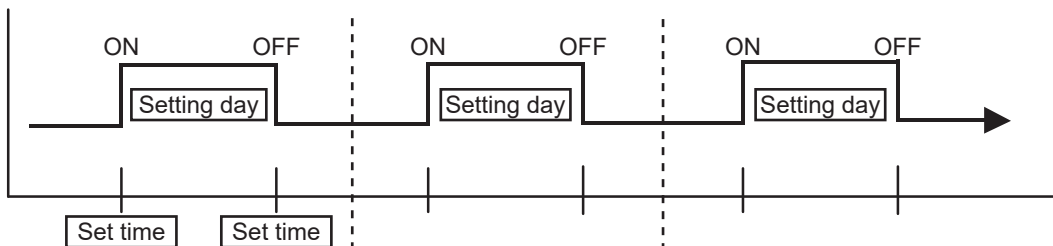

6-2 WIRED REMOTE CONTROLLER

The Table 5 shows the available timer setting based on the product model.

(Table 5 : Timer setting)

ON TIMER / OFF TIMER	WEEKLY TIMER	TEMPERATURE SET BACK TIMER
○	○	○


1. ON TIMER / OFF TIMER

Same to 6-1 **ON / OFF TIMER** and shown in those.

2. WEEKLY TIMER

This timer function can set operation times of the each day of the week.


All days can be set together, the weekly timer can be used to repeat the timer setting for all of the days.

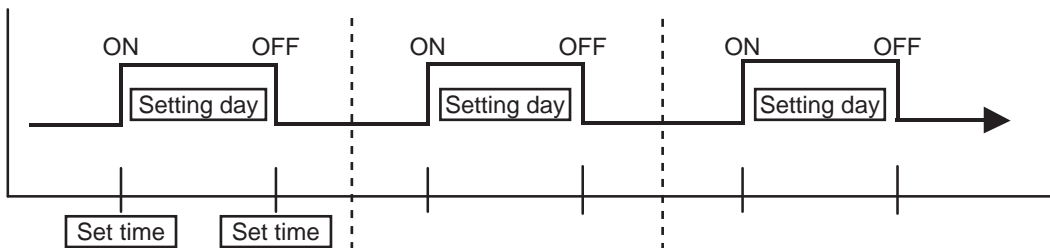

3. TEMPERATURE SET BACK TIMER

This timer function can change setting temperature of setting operation times of the each day of the week.

This can be together with other timer setting.

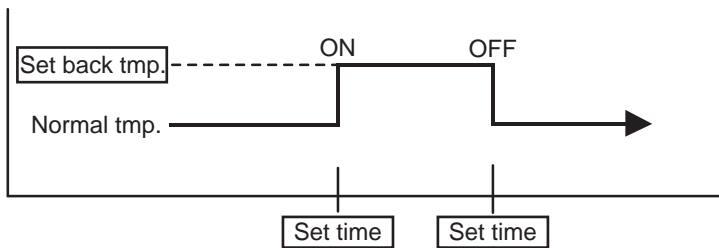

7. COMPRESSOR CONTROL

1. OPERATION FREQUENCY RANGE

The operation frequency of the compressor is different based on the operation mode as shown in the table 6.

(Table 6 : Compressor Operation Frequency Range)


	Cooling		Heating	
	Min	Max	Min	Max
AO*G18LAT3	20rps	100rps	24rps	110rps
AO*G24LAT3				
AO*G30LAT4	20rps	90rps	20rps	95rps

2. OPERATION FREQUENCY CONTROL AT START UP

For AO*G18/ 24LAT3

The compressor frequency soon after the start-up is controlled as shown in the figure 16.


(Fig.16 : Compressor Control at Start-up)

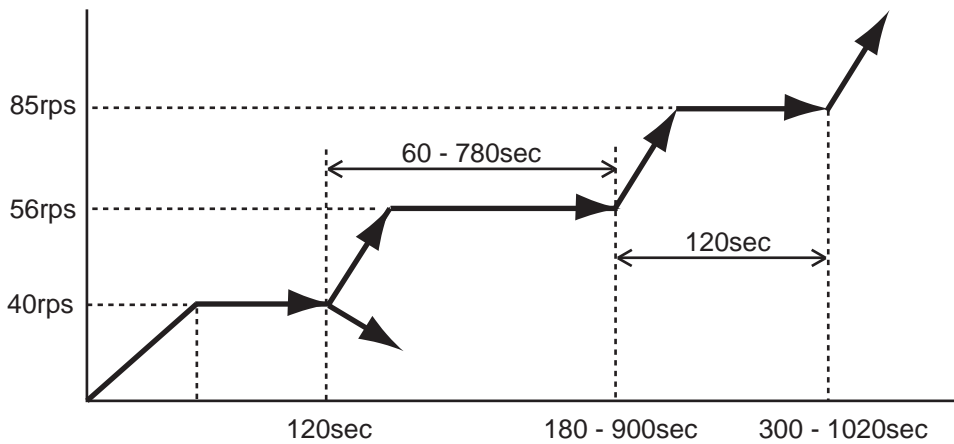

For AO*G30LAT4

The compressor frequency soon after the start-up is controlled as shown in Figure 17.

(Fig.17 : Compressor Control at Start-up)

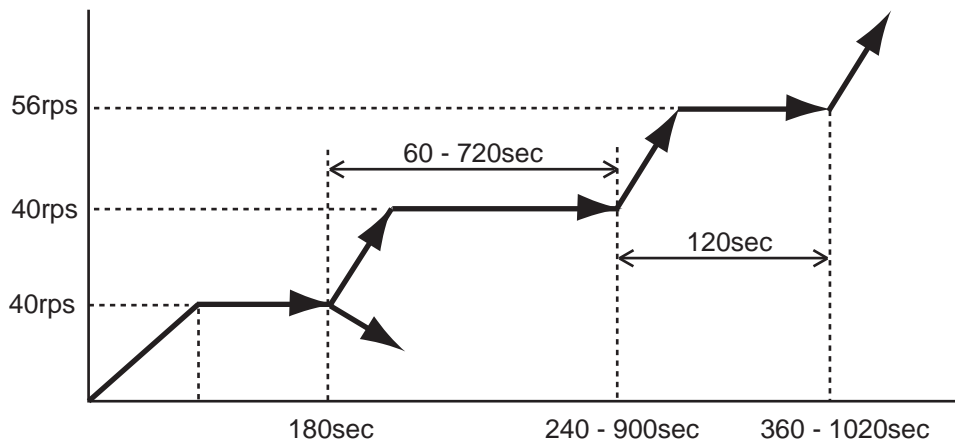

8. ELECTRONIC EXPANSION VALVE CONTROL

The most proper opening of the electronic expansion valve is calculated and controlled under the present operating condition based on the Table7.

The compressor frequency, the temperatures detected by the discharge temperature sensor and the outdoor temperature sensor.

(Table7 : The pulse range of the electronic expansion valve control)

	Operation mode	Pulse range
AO*G18/ 24LAT3 AO*G30LAT4	Cooling /Dry mode	50 ~ 480
	Heating mode	30 ~ 480

* At the time of supplying the power to the outdoor unit, the initialization of the electronic expansion valve is operated (1000 pulses are input to the closing direction).

9. TEST OPERATION CONTROL

▪ With Wireless Remote Controller (with TEST RUN button)

Under the condition where the air conditioner runs, press the TEST RUN button, and the test operation control mode will appear.

During test running, the operation lamp and timer lamp of the air conditioner body twinkle simultaneously. Set the test operation mode, and the compressor will continue to run regardless of whether the room temperature sensor detects.

The test operation mode is released if 60 minutes have passed after setting up the test operation.

▪ With Wired Remote Controller (without TEST RUN button)

Under the condition where the air conditioner stops, press the MASTER CONTROL button and the FAN CONTROL button simultaneously for 5 seconds or more, and the test operation control mode will appear.

During test running, " a ! " will display on the remote controller display.

Set the test operation mode, and the compressor will continue to run regardless of whatever the room temperature sensor detects.

The test operation mode is released if 60 minutes have passed after setting up the test operation.

10. PREVENT TO RESTART FOR 3 MINUTES (3 MINUTES ST)

The compressor won't enter operation status for 3 minutes after the compressor is stopped, even if any operation is given.

11. 4-WAY VALVE EXTENSION SELECT

At the time when the air conditioner is switched from the Cooling mode to Heating mode, the compressor is stopped, and the 4-way valve is switched in 3 minutes later after the compressor stopped.

12. AUTO RESTART

When the power was interrupted by a power failure, etc. during operation, the operation contents at that time are memorized and when power is recovered, operation is automatically resumed with the memorized operation contents.

(Table 8 : Operation contents memorized when the power is interrupted)

	Wireless remote controller	Wired remote controller (When Memory Backup : Disable)	Wired remote controller (When Memory Backup : Enable)	
Operation mode	○	○	○	
Set temperature	○	○	○	
Set air flow	○	○	○	
Thermistor detected position	—	×	○	
Timer mode	○	×	OFF Timer	×
			ON Timer	×
			WEEKLY Timer	○
			Temperature SET BACK Timer	○

○ : Memorize
 × : Not memorize

*It is necessary to set on the DIP-SW1-No,6 of the wired remote controller, to enable the memory backup. Refer to the installation manual of wired remote controller for details.

13. MANUAL AUTO OPERATION

If MANUAL / AUTO Button is pushed continuous from 3 seconds to 10 seconds, manual auto operation will start.

If the remote control is lost or battery power dissipated, this function will work without the remote control.

(Table 9 : Manual auto operation control)

Functions	All models
OPERATION MODE	Auto changeover
SETTING TEMP.	24°C
FAN MODE	Auto
VERTICAL LOUVER	NORMAL
HORIZONTAL LOUVER	NORMAL
TIMER MODE	Continuous (No timer setting available)
SWING OPERATION	OFF
ECONOMY	OFF

14. COMPRESSOR PREHEATING

When the outdoor heat exchanger temperature is lower than Operation temperature (Refer to Table 10) and the heating operation has been stopped for 3 hours, power is applied to the compressor and the compressor is heated.

(By heating the compressor, warm air is quickly discharged when operation is started.)

When operation was started, and when the outdoor temperature rises to Release temperature or greater, preheating is over.

(Table 10 : Preheating Operation / Release Temperature)

Before 24 hour		After 24 hour	
Operation temperature	Release temperature	Operation temperature	Release temperature
3°C	7°C	0°C	4°C

15. POWERFUL OPERATION

The POWERFUL OPERATION functions by pressing POWERFUL button on the remote controller. The indoor unit & outdoor unit will operate at maximum power as shown in Table11.

(Table11)

	Powerful operation
COMPRESSOR FREQUENCY	Maximum
FAN CONT. MODE	Powerful
SETTING LOUVER	Cooling/ Dry : 3, Heating : 5

Release Condition is as follows.

[Cooling / Dry]

- Room temperature \leq Setting temperature - 1.5°C or Operation time has passed 20 minutes.

[Heating]

- Room temperature \geq Setting temperature +1.5°C or Operation time has passed 20 minutes.

16. 10°C HEAT OPERATION

10°C HEAT operation performs as below when pressing 10°C HEAT button or Weekly timer setting on the remote controller.

(Table 12 : 10°C HEAT operation)

Mode	Heating
Setting temperature	10°C
Fan mode	Auto
LED display	Economy
Defrost operation	Operate as normal

17. ECONOMY OPERATION

The ECONOMY operation functions by pressing ECONOMY button on the remote controller.

At the maximum output, ECONOMY Operation is approximately 70% of normal air conditioner operation for cooling and heating.

The ECONOMY operation is almost the same operation as below settings.


(Table 13)

Mode	Cooling/ Dry	Heating
Target temperature	Setting temp.+1°C	Setting temp.-1°C

18. FRESH AIR CONTROL(For AU / AR type)

The fan motor for Fresh Air is operated in synchronization with the indoor fan operation as shown in Figure 18.

(Fig. 18 : Fresh Air control)

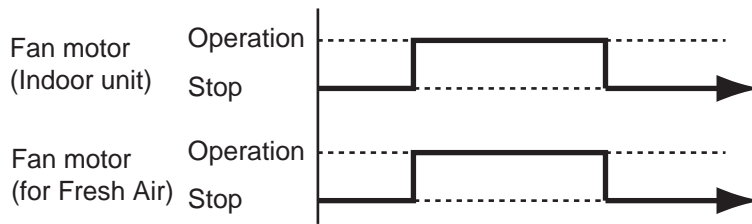

*It needs the external relay and power supply.

19. EXTERNAL ELECTRICAL HEATER CONTROL (For AR type)

The External Electrical Heater is operated as below.

< Heater : ON condition >


When all of the following conditions are met, external electrical heater will operate according to Figure 19.

System type	Heatpump
Operation mode	Heating
Compressor	ON
Indoor fan	ON (S-Lo is excluded)

< Heater : OFF condition >

- 1). When one of the ON conditions is not met.
- 2). When Defrost operation or Oil recovery operation starts

(Fig. 19 : External electrical heater control)

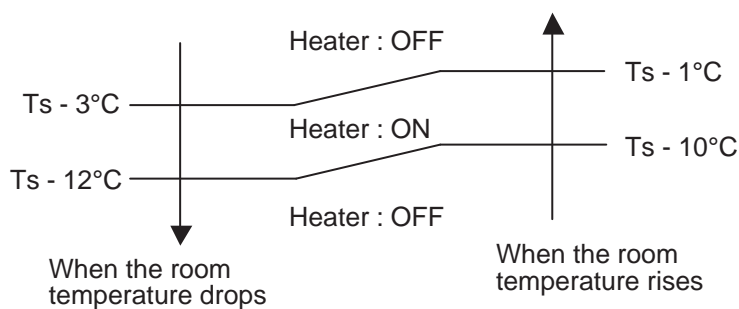


▪ T_s : Setting temperature

20. DRAIN PUMP OPERATION(For AU / AR type)


During Cooling / Dry mode

1. When the compressor starts, the drain pump starts simultaneously.
2. The drain pump operates continuously for 3 minutes after the compressor is turned off.
3. When the compressor stops by the "Anti- freezing protection", the drain pump is turned off in 1 hour after the compressor stops.
4. When the water level in the drain pan rises up and then the float switch functions:
 - ① The compressor, indoor and outdoor fan motor operation are stopped.
 - ② Drain pump operates continuously for 3 minutes after the float switch is turned off.
 - ③ The indoor unit fan motor operates after the float switch is turned off.
5. When the float switch turns ON continuously for 3 minutes, "FAILURE INDICATION" operates. (It is necessary to turn off power for release it.)
6. When the float switch turns OFF less than 3 minutes, the unit starts Cooling operation.

(Fig. 20 : Detail of Drain Pump Operation in Cooling / Dry)

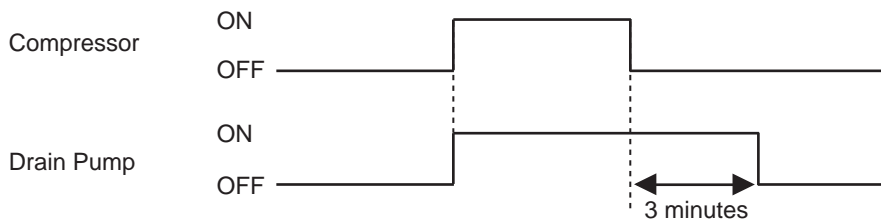


<Float Switch turns OFF less than 3 minutes>

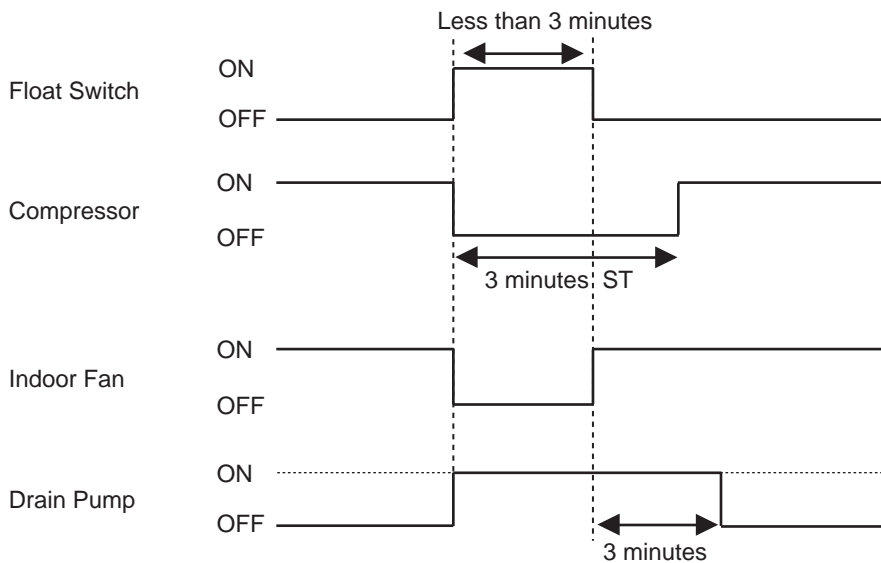

During HEATING / FAN mode / Stop operation

1. When the water level in the drain pan rises up and then the float switch functions:
 - ① Drain pump operates continuously for 3 minutes after the float switch is turned off. (Almost condensing water may be drained)
2. When the float switch turns ON continuously for 3 minutes, "FAILURE INDICATION" operates. Thereafter, even if the float switch turns OFF, the "FAILURE INDICATION" is not released. (It is necessary to turn off power for release it.)

(Fig. 21 : Detail of Drain Pump Operation in Heating)

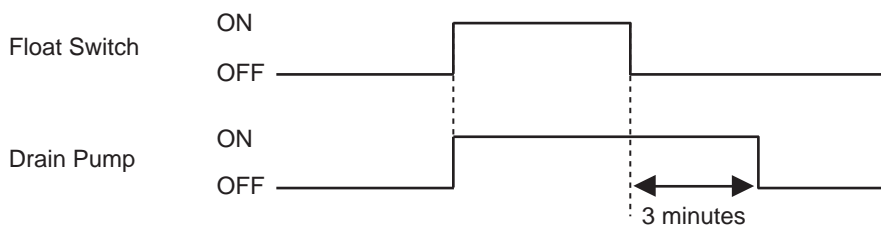

21. DEFROST OPERATION CONTROL

1. CONDITION OF STARTING THE DEFROST OPERATION

The defrost operation starts when the outdoor heat exchanger temperature sensor detects the temperature lower than the values shown in Table 14-1, 14-2, 14-3.

1-1 NORMAL DEFROST

For AO*G18/ 24LAT3

(Table 14-1 : Condition of starting defrost operation)

Normal defrost	Compressor integrating operation :Less than 45min.	Compressor integrating operation :45min and over	
		Less than 6 min. *1 or 10min. *2	After 6 min. *1 or 10min. *2
	Does not operate		-8°C *3 -12°C *4 -14°C *5 -16°C *6

- *1. It means contiguous operation time.
- *2. Compressor stop time:
Below 20min. → Select 6min.
Above 20min. → Select 10min.
- *3. Outdoor temp. > 3°C
- *4. Outdoor temp. > -1°C
- *5. Outdoor temp. > -5°C
- *6. Outdoor temp. ≤ -5°C

For AO*G30LAT4

(Table 14-2 : Condition of starting defrost operation)

Normal defrost	Compressor integrating operation :Less than 45min.	Compressor integrating operation :45min and over	
		Less than 6 min. *1 or 10min. *2	After 6 min. *1 or 10min. *2
	Does not operate		-10°C *3 -12°C *4

- *1. It means contiguous operation time.
- *2. Compressor stop time:
Below 20min. → Select 6min.
Above 20min. → Select 10min.
- *3. Outdoor temp. > -1°C
- *4. Outdoor temp. ≤ -1°C

1-2. INTEGRATING DEFROST

For AO*G18/ 24LAT3, AO*G30LAT4

(Table 14-3 : Condition of starting defrost operation)

Integrating defrost	Compressor integrating operation time	
	More than 210 minutes (For continuous operation)	Less than 10 minutes * (For intermittent operation)
	When the compressor is stopped, If detected outside air temp. at 2°C	OFF count of the compressor 40 times (at outside air temp. < 2°C)

- *If the compressor continuous operation time is less than 10 minutes, the OFF number of the compressor is counted.
If any defrost operated, the compressor OFF count is cleared.

2. CONDITION OF THE DEFROST OPERATION COMPLETION

Defrost operation is released when the conditions become as shown in Table 15-1, 15-2.

For AO*G18/ 24LAT3

(Table 15-1 : Defrost release condition)

Release Condition
Outdoor heat exchanger temperature sensor value is higher than 10°C or Compressor operation time has passed 15 minutes.

For AO*G30LAT4


(Table 15-2 : Defrost release condition)

Release Condition
Outdoor heat exchanger temperature sensor value is higher than 12°C or Compressor operation time has passed 15 minutes.


3. Defrost Flow Chart

The defrosting shall proceed by the integrating operation time, outdoor temperature and outdoor heat exchanger temperature as follows.

For AO*G18/ 24LAT3

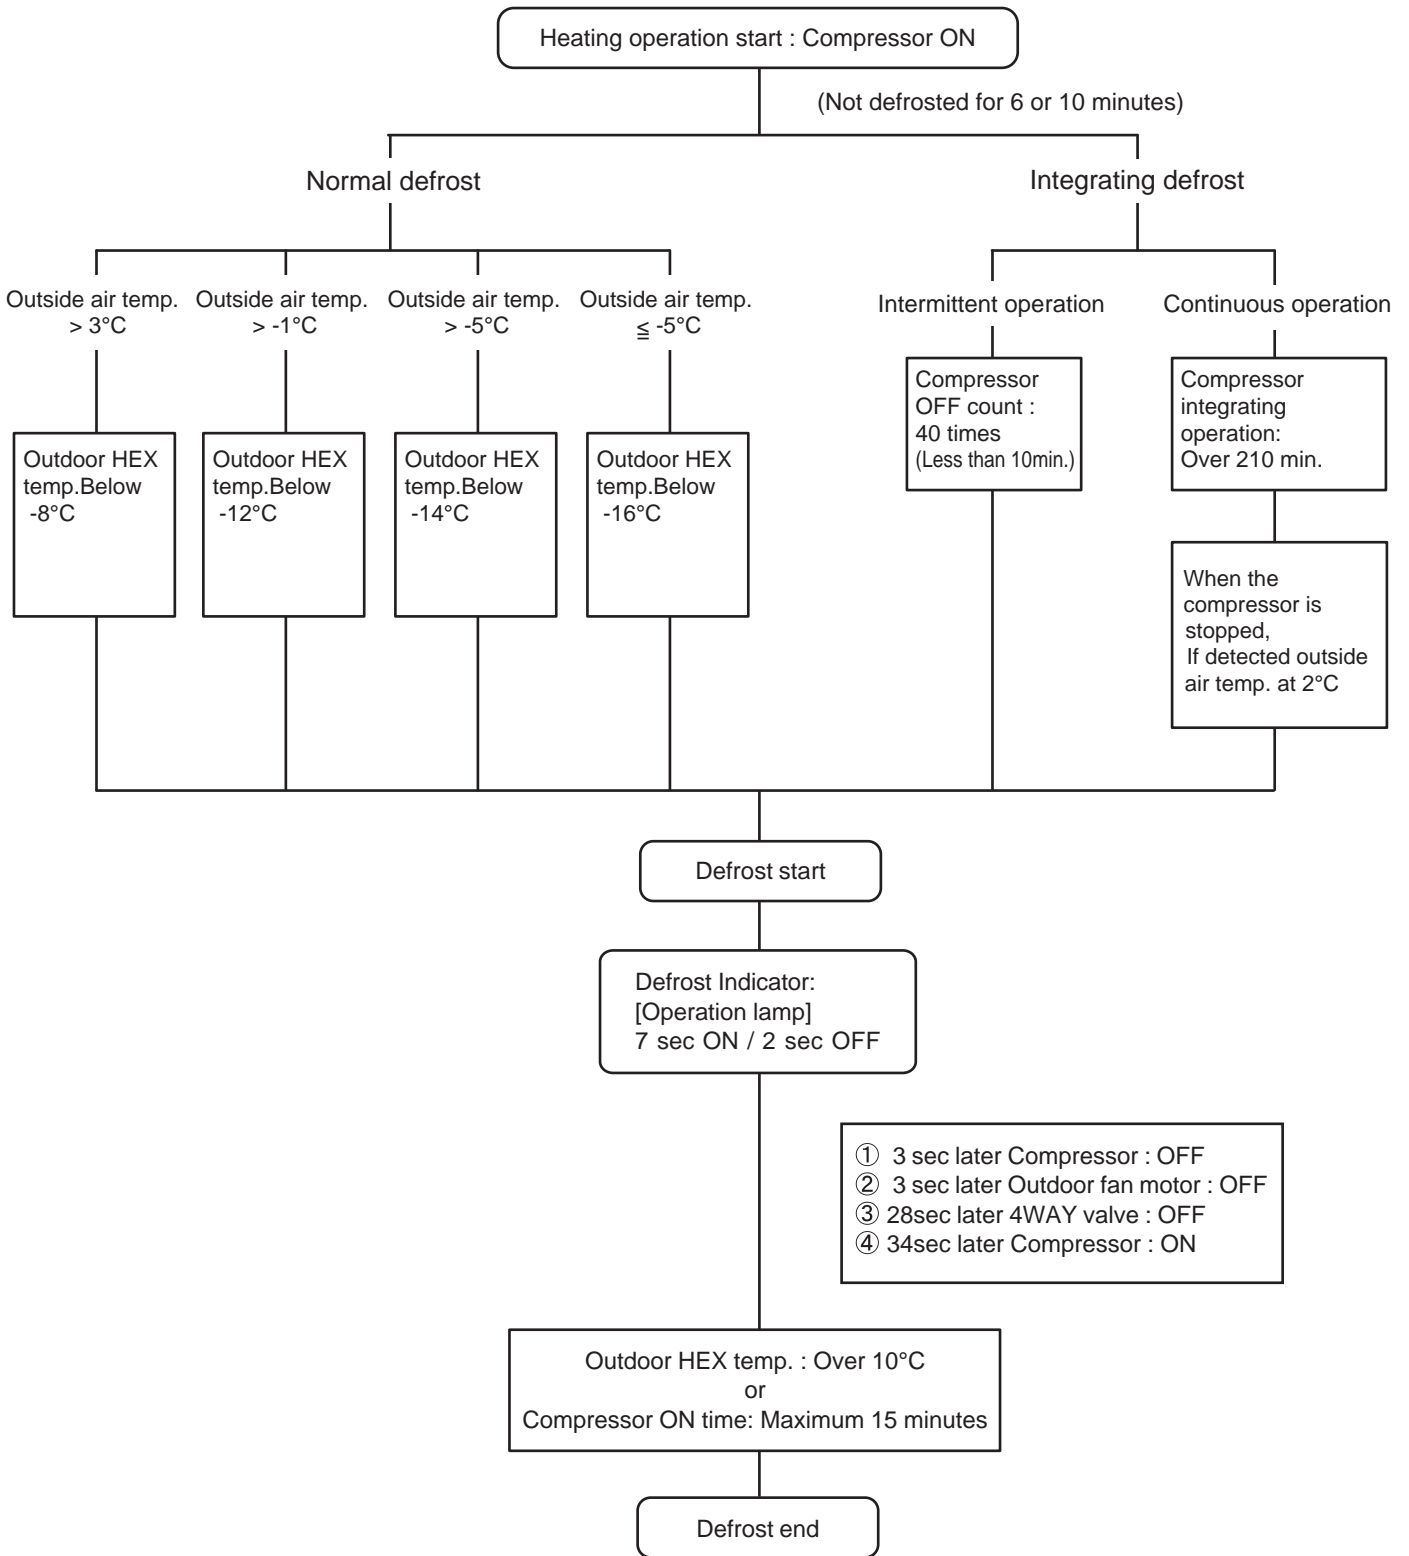

For AO*G30LAT4

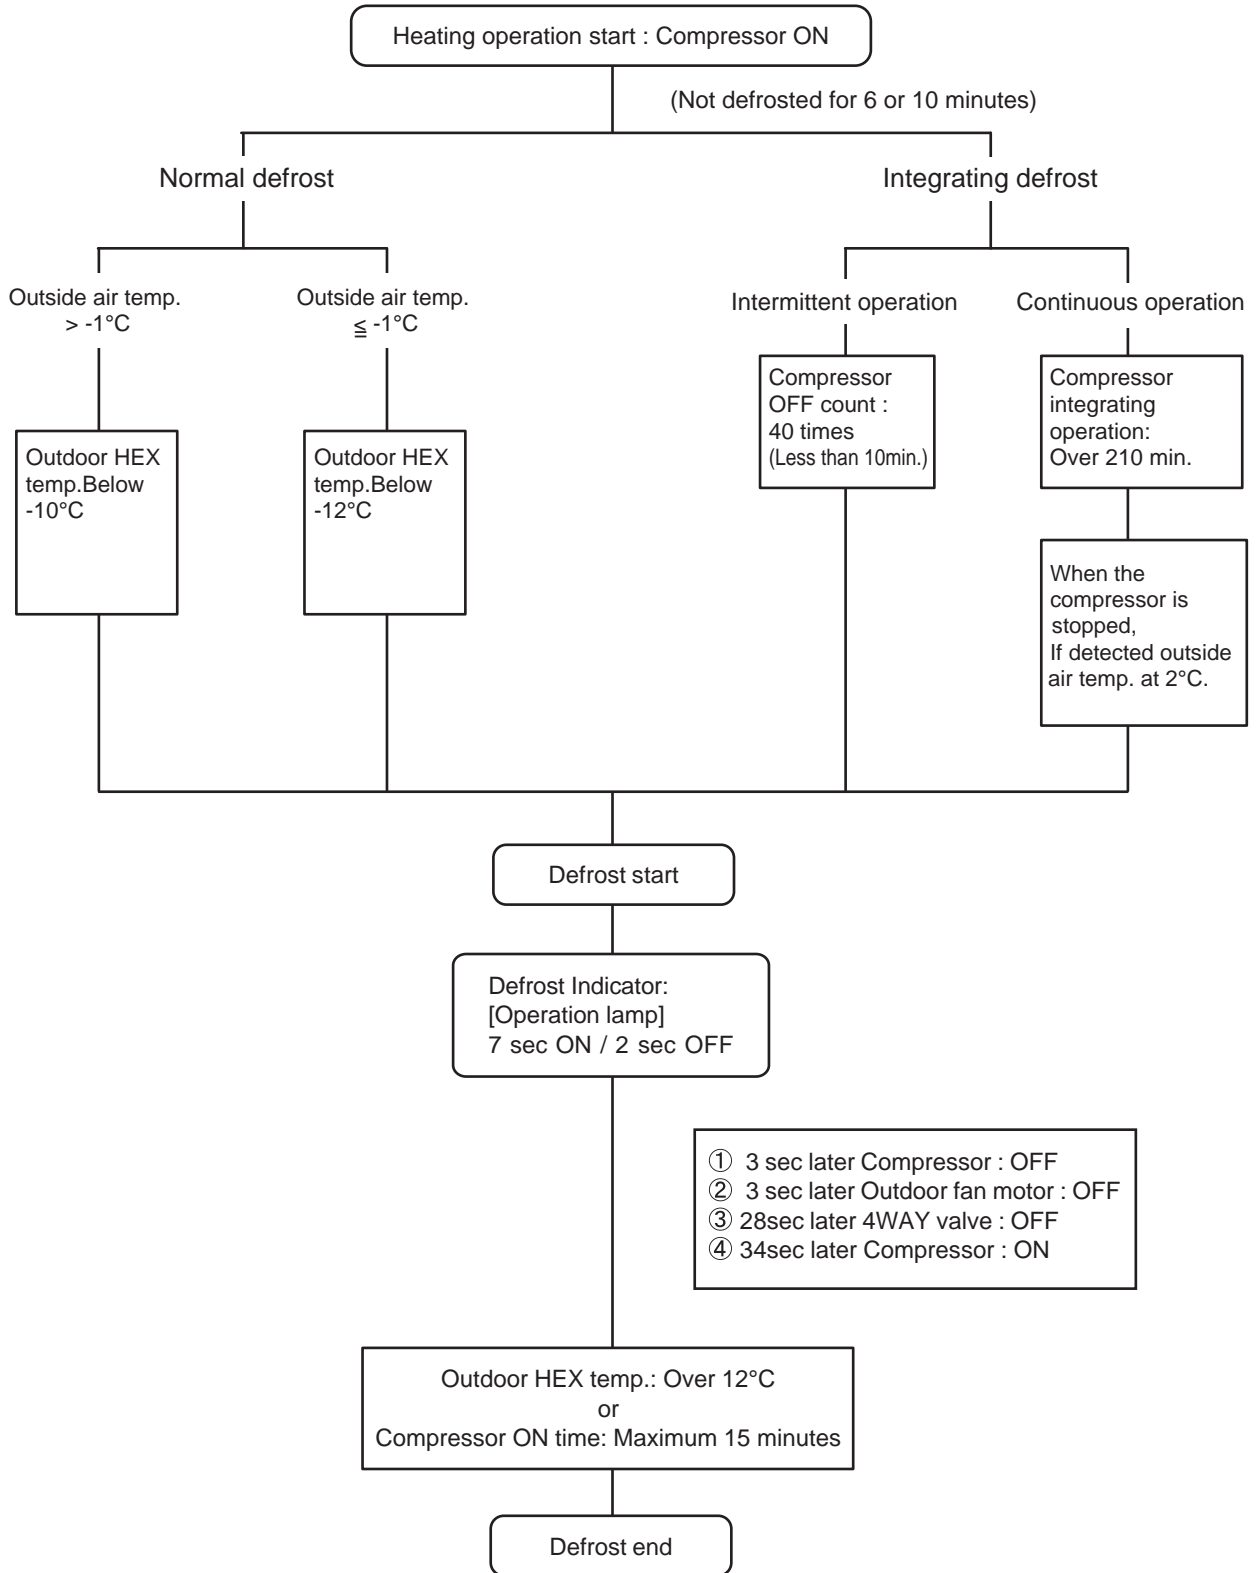

22. VARIOUS PROTECTIONS

1. DISCHARGE GAS TEMPERATURE OVER RISE PREVENTION CONTROL

The discharge gas thermosensor (discharge thermistor : Outdoor side) will detect discharge gas temperature.

When the discharge temperature becomes higher than □ ,the compressor frequency is decreased 20rps, and it continues to decrease the frequency for 20rps every 120 seconds until the temperature becomes lower than □.

When the discharge temperature becomes lower than □,the control of the compressor frequency is released.

When the discharge temperature becomes higher than □ ,the compressor stops.

When the discharge temperature becomes lower than 80°C ,the compressor operates.

(Table 16 : Discharge Temperature Over Rise Prevention Control / Release Temperature)

	Temperature I	Temperature II	Temperature III
AO*G18/ 24LAT3	105°C	95°C	110°C
AO*G30LAT4	110°C	100°C	115°C

2. CURRENT RELEASE CONTROL

The compressor frequency is controlled so that the outdoor unit input current does not exceeds the current limit value that was set up with the outdoor temperature.

The compressor frequency returns to the designated frequency of the indoor unit at the time when the frequency becomes lower than the release value.

3. ANTI-FREEZING CONTROL (Cooling mode)

When the indoor unit heat exchanger and 2-way valve temperature becomes lower than □ ,the compressor frequency is decreased 20rps, and it continues to decrease the frequency for 20rps every 120 seconds until the temperature becomes higher than □.

This operation is not released until both the temperature of the indoor unit heat exchanger and 2-way valve temperature exceed the release temperature.

(Table 17 : Anti-freezing Protection Operation / Release Temperature)

Outside air Temperature	Temperature I		Temperature II	
	Indoor Heat Ex. Temperature	2-way valve Temperature	Indoor Heat Ex. Temperature	2-way valve Temperature
≥ 12°C	3°C	2°C	6°C	5°C
< 12°C	3°C	2°C	13°C	12°C

4. COOLING PRESSURE OVER RISE PROTECTION


When the outdoor unit heat exchange sensor temperature rises to 70.5 ±3°C) or greater, the compressor is stopped and error display is indicated.

5. HIGH TEMPERATURE RELEASE CONTROL (HEATING MODE)

On heating mode, the compressor frequency is controlled as following based on the detection value of the indoor heat exchanger temperature sensor.

(Fig 22 : Heating Overload Protection Control)

Indoor heat exchange temperature

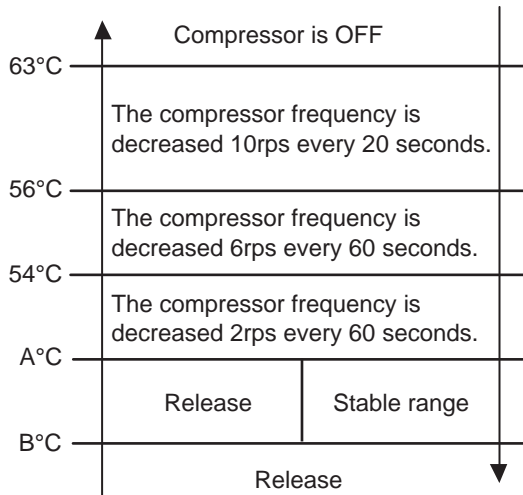

Outdoor heat exchange temperature	In one operation of the indoor unit : Qu air than		All indoor unit opeate, : Qu air	
	A°C	B°C	A°C	B°C
$-9^{\circ}\text{C} \leq \text{Th}$	52°C	50°C	48°C	46°C
$-11^{\circ}\text{C} \leq \text{Th} < -9^{\circ}\text{C}$	52°C	50°C	48°C	46°C
$-13^{\circ}\text{C} \leq \text{Th} < -11^{\circ}\text{C}$	52°C	48°C	48°C	46°C
$-15^{\circ}\text{C} \leq \text{Th} < -13^{\circ}\text{C}$	50°C	46°C	48°C	46°C
$\text{Th} < -15^{\circ}\text{C}$	48°C	44°C	48°C	46°C

6. HIGH PRESSURE PROTECTION

- When the pressure switch becomes OFF (Open : higher than 4.2 MPa), the compressor is stopped. It is released when the pressure switch becomes ON (Close : lower than 3.2 MPa) after 3 minutes of compressor stop.
- When the pressure switch is opened for 10 seconds from power on, all of outdoor unit operation is stopped. The outdoor unit will start up if the pressure switch is returned to ON after 10 seconds has passed.

When 10 minutes (Cooling) or 3 minutes (Heating) has passed from the compressor stop and pressure switch becomes ON, protection is released and the compressor will restart.

7. COMPRESSOR TEMPERATURE PROTECTION

Compressor temperature sensor is monitoring the compressor temperature. When the compressor temperature sensor detects higher than Temperature I, the compressor is stopped.

When 3 minutes has passed from the compressor stop and the compressor temperature sensor detects lower than Temperature II, protection is released and the compressor will restart.

	Temperature I	Temperature II
AO*G18/ 24LAT3	110°C	80°C
AO*G30LAT4	125°C	

***Universal Floor / Ceiling
Slim Duct / Compact Cassette
Compact Wall Mounted /
Wall Mounted / Floor type
INVERTER (MULTI)***

2 . TROUBLE SHOOTING

2-1 ERROR DISPLAY

2-1-1 INDOOR UNIT AND WIRED REMOTE CONTROLLER DISPLAY

Please refer the flashing pattern as follows.

The Operation, Timer, Economy lamps operate as follows according to the error contents.



Error Contents	Indoor Unit Display			Wired Remote Controller Display	Trouble shooting
	Operation (Green)	Timer (Orange)	Economy (Green)		
Serial communication error	1 times	1 times	Continuous	11	1,2
Wired remote controller communication error	1 times	2 times	Continuous	12	3
External Communication Error	1 times	8 times	Continuous	18	4
Indoor unit capacity error	2 times	2 times	Continuous	22	5
Address Setting Error In Wired Remote Controller System	2 times	6 times	Continuous	26	6
Connection Unit Number Error (Indoor unit Wired remote controller Error)	2 times	9 times	Continuous	29	7
Indoor unit model information error EEPROM access abnormal	3 times	2 times	Continuous	32	8
Manual auto switch error	3 times	5 times	Continuous	35	9
Indoor Unit (Communication circuit) WRC Error	3 times	10 times	Continuous	3A	10
Indoor room thermistor error	4 times	1 times	Continuous	41	11
Indoor heat ex. thermistor error	4 times	2 times	Continuous	42	12
Indoor unit fan motor error	5 times	1 times	Continuous	51	13
Drain pump error	5 times	3 times	Continuous	53	14
Damper (Open/Close) detection limit switch error	5 times	7 times	Continuous	57	15
Damper (Open/Close) simultaneous detection limit switch error	5 times	7 times	Continuous	57	16
Intake grille error	5 times	8 times	Continuous	58	17
Outdoor unit model information error	6 times	2 times	Continuous	62	18
Active filter error	6 times	4 times	Continuous	64	19
IPM error	6 times	5 times	Continuous	65	20
Discharge thermistor error	7 times	1 times	Continuous	71	21
Compressor thermistor error	7 times	2 times	Continuous	72	22
Heat ex. thermistor error	7 times	3 times	Continuous	73	23
Outdoor thermistor error	7 times	4 times	Continuous	74	24
2-way valve thermistor error	7 times	6 times	Continuous	76	25

Error Contents	Indoor Unit Display			Wired Remote Controller Display	Trouble shooting
	Operation (Green)	Timer (Orange)	Economy (Green)		
3-Way Valve Thermistor Error	7 times	6 times	Continuous	76	26
Heat sink thermistor error	7 times	7 times	Continuous	77	27
High Pressure Sensor Error	8 times	6 times	Continuous	86	28
Over Current Error	9 times	4 times	Continuous	94	29
Compressor Control Error	9 times	5 times	Continuous	95	30
Outdoor Unit Fan Motor Error	9 times	7 times	Continuous	97	31
4-Way Valve Error	9 times	9 times	Continuous	99	32
Discharge Temp. Error	10 times	1 times	Continuous	A1	33
Compressure Temp. Error	10 times	3 times	Continuous	A3	34

2-1-2 WIRED REMOTE CONTROLLER DISPLAY

(2 wire remote controller)

1. With "Monitor Mode Screen" displayed, press and hold the [MENU] button, [<] button and [ENTER] button simultaneously for at least 2 seconds. Setting item selection screen is displayed.
2. Select the number of the item to be set with the [<] or [>] button; press the [ENTER] button to switch to the Setting Screen. Please refer to the table below for the settings of each part number. For details concerning settings, see the description of the setting concerned.
3. Return to this screen after setting the various items. Return to "Monitor Mode Screen" if the [MENU] button, [<] button and [ENTER] button pressed and held simultaneously for at least 2 seconds.

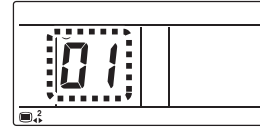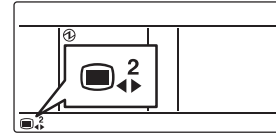

On the various Setting Screens, setting is interrupted and the display returns to "Monitor Mode Screen" if the [MENU] button, [<] button and [ENTER] button pressed and held simultaneously for at least 2 seconds.


Note

Selectable items differ according to settings when equipment is set up. Operation does not proceed to items that cannot be selected.

4. Check the error

This appears automatically on the display if an error occurs.

If an error occurs, the following display will be shown. ("▲" will appear in the "Monitor Mode Screen")

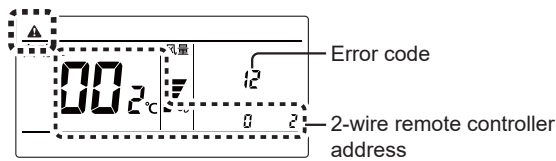


Ex. Error code display

2-1-3 WIRED REMOTE CONTROLLER DISPLAY

1. SELF - DIAGNOSIS

When "Er" in Temperature Display is displayed, inspection of the air conditioning system is necessary. Please consult authorized service personnel.

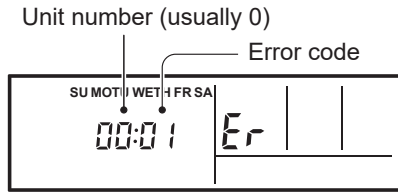



ex. Self-diagnosis check

2. ERROR CODE HISTORY DISPLAY


Up to 16 memorized error codes may be displayed for the indoor unit connected to the remote controller.

1. Stop the air conditioner operation.

2. Press the SET TEMPERATURE buttons ∇ , \blacktriangle simultaneously for 3 seconds or more to start the self-diagnosis.

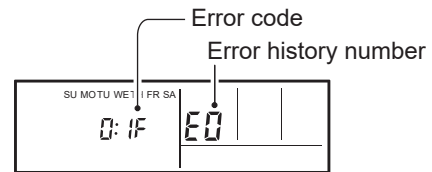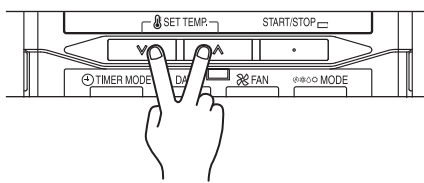

3. Press the SET TEMPERATURE button to select the error history number.

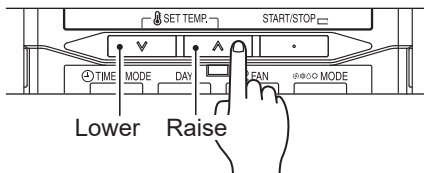

↔ 0 ↔ 1 ↔ 2 ↔ 3 ↔ 4 ↔ 5 ↔ 6 ↔ 7 ↔
↔ F ↔ E ↔ d ↔ c ↔ b ↔ A ↔ 9 ↔ 8 ↔

4. Press the SET TEMPERATURE buttons ∇ , \blacktriangle simultaneously for 3 seconds or more or there is no key input for 60 seconds to stop the display.

2-1-4 OUTDOOR UNIT DISPLAY


1. ERROR DISPLAY

Error Contents	LED1	LED2	LED3	LED4	Trouble shooting
Serial Communication Error (Outdoor unit to Indoor unit A)	1 time	OFF	OFF	OFF	2
Serial Communication Error (Outdoor unit to Indoor unit B)	OFF	1 time	OFF	OFF	
Serial Communication Error (Outdoor unit to Indoor unit C)	OFF	OFF	1 time	OFF	
Serial Communication Error (Outdoor unit to Indoor unit D)	OFF	OFF	OFF	1 time	
Discharge Thermistor Error	2 times	OFF	OFF	OFF	21
Heat Ex. Thermistor Error	3 times	OFF	OFF	OFF	23
Outdoor Thermistor Error	4 times	OFF	OFF	OFF	24
2-way Valve Thermistor Error (for Indoor unit A)	5 times	OFF	OFF	OFF	25
2-way Valve Thermistor Error (for Indoor unit B)	OFF	5 times	OFF	OFF	
2-way Valve Thermistor Error (for Indoor unit C)	OFF	OFF	5 times	OFF	
2-way Valve Thermistor Error (for Indoor unit D)	OFF	OFF	OFF	5 times	
3-way Valve Thermistor Error (for Indoor unit A)	6 times	OFF	OFF	OFF	26
3-way Valve Thermistor Error (for Indoor unit B)	OFF	6 times	OFF	OFF	
3-way Valve Thermistor Error (for Indoor unit C)	OFF	OFF	6 times	OFF	
3-way Valve Thermistor Error (for Indoor unit D)	OFF	OFF	OFF	6 times	
Compressor Thermistor Error	7 times	OFF	OFF	OFF	22
Heat Sink Thermistor Error	8 times	OFF	OFF	OFF	27
High Pressure switch 1 Error	9 times	OFF	OFF	OFF	28
High Pressure switch 2 Error	10 times	OFF	OFF	OFF	
Indoor Unit Capacity Error	11 times	OFF	OFF	OFF	5
Over Current Error	12 times	OFF	OFF	OFF	29
Compressor Control Error	13 times	OFF	OFF	OFF	30
IPM Error	14 times	OFF	OFF	OFF	20
Outdoor Unit fan motor Error	15 times	OFF	OFF	OFF	31
Discharge Temp. Error	18 times	OFF	OFF	OFF	33
Compressor Temp. Error	19 times	OFF	OFF	OFF	34
4-way Valve Error	20 times	OFF	OFF	OFF	32
Outdoor Unit PCB Model Information Error	21 times	OFF	OFF	OFF	18
Active Filter Error	22 times	OFF	OFF	OFF	19

: Flashing


2. ERROR DISPLAY METHOD

Outdoor LED Blink (1 to 22 times) 0.5sec ON / 0.5sec OFF blinking

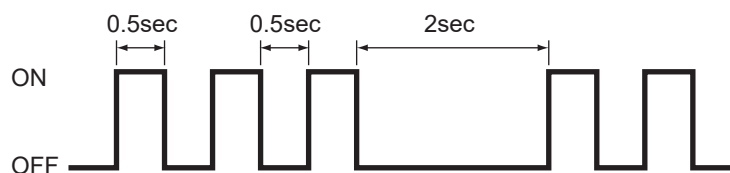


2-1-5 WIRELESS LAN INDICATOR DISPLAY

1. WIRELESS LAN CONTROL system layout

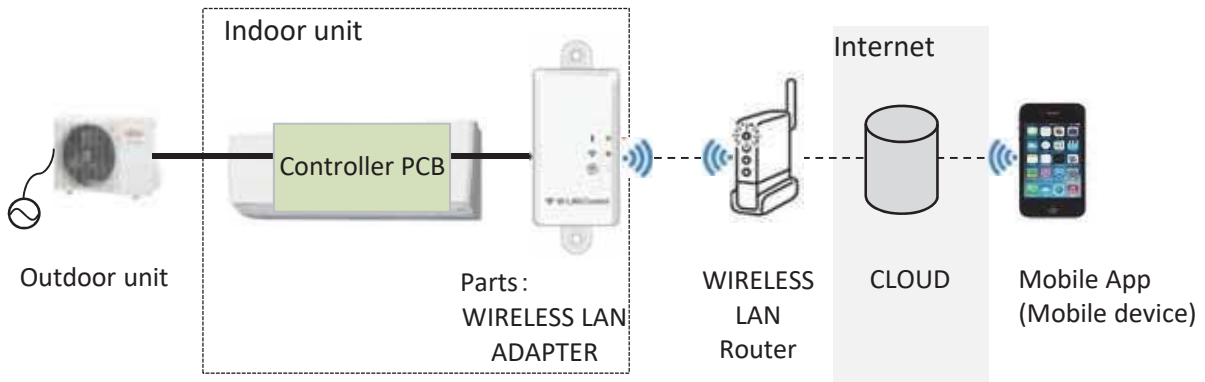

2. NAME OF PARTS

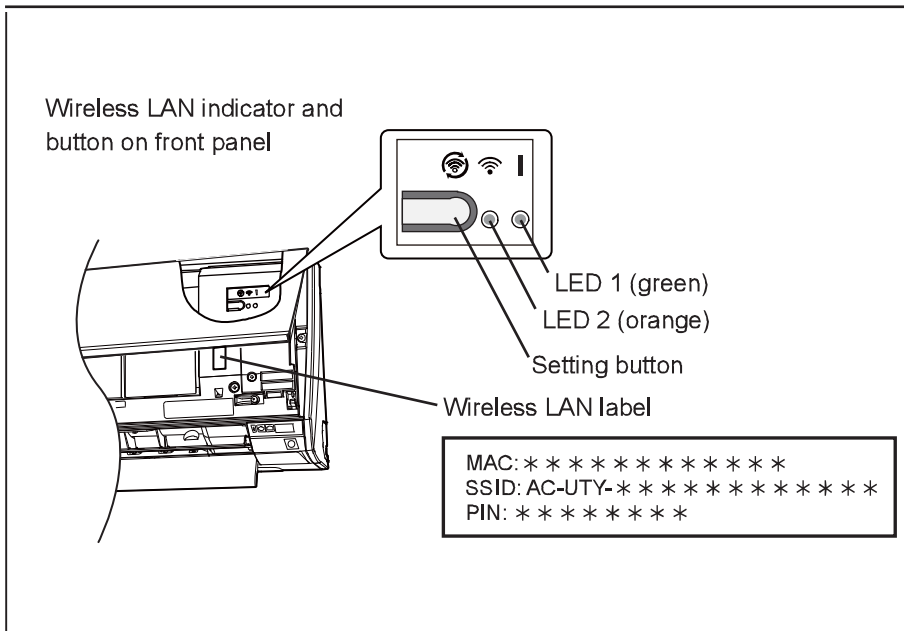

3. WIRELESS LAN ADAPTER INDICATOR

Please refer the flashing pattern as follows.

LED 1 (green) and LED 2 (orange) operate as follow according to the error contents.


*The status LED1(Green) ON: The communication between the Indoor unit and the adaptor is normal.


Error Contents	Wireless LAN adapter Indicator		Error Code	Trouble shooting
	LED 1 (Green)	LED 2 (Orange)		
External Communication Error (Communication Error of between Indoor Unit to Wireless LAN adapter)	Flashing Fast	ON	18	41
Wireless LAN adapter Error	Flashing Fast	Flashing Fast	No Error	42
Network Communication Error (Communication Error of between Wireless LAN Router to Wireless LAN adapter)	ON	Flashing Fast	No Error	43
Communication Error ("Trou. 41" and "Trou. 43" are simultaneous Error)	Flashing Fast	Flashing Fast	18	44
Wireless LAN adapter Non-Energized	OFF	OFF	18	45

Flashing Fast : Repeating 0.5 seconds ON / 0.5 seconds OFF

2-1-6 MOBILE APP DISPLAY (For AIR CONDITIONER)

1. ERROR DISPLAY

If there is an abnormality on the air conditioning, you will see  is as follows.

When you tap the "Error button"  on the home screen, Error Code and Error Name is displayed.

For Android



For iOS



2. ERROR CODE

Error message	Error Code	Trouble shooting
Serial communication error between indoor/outdoor units	11.1	1
	11.2	
	11.3	2
	11.4	
Remote controller communication error	12.1	3
External communication error	18.1	4
Indoor unit capacity abnormal	22.1	5
Indoor unit address setting error	26.4	6
	26.5	
Connection unit number error in wired remote controller system	29.1	7
Indoor unit main PCB error	32.1	8
Indoor unit manual auto switch error	35.1	9
Indoor unit communication circuit (wired remote controller) error	3A.1	10
Indoor unit room temp. thermistor error	41.1	11
Indoor unit heat ex. temp. thermistor error	42.2	12
Indoor unit fan motor 1 error	51.1	13
	51.2	
Indoor unit water drain abnormal	53.1	14
Indoor unit damper error	57.1	15,16
	57.2	
	57.3	
Indoor unit intake grille position error	58.1	17
Outdoor unit main PCB error	62.1	18
	62.2	
	62.3	
	62.8	
Outdoor unit active filter/PFC circuit error	64.1	19
	64.3	
	64.4	
	64.8	
Outdoor unit IPM error	65.3	20
Outdoor unit discharge temp. thermistor error	71.1	21
Outdoor unit compressor temp. thermistor error	72.1	22
Outdoor unit heat ex. temp. thermistor error	73.3	23
Outside air temp. thermistor error	74.1	24
Outdoor unit operating valve thermistor error	76.1	25
	76.2	26
Outdoor unit heat sink temp. thermistor error	77.1	27
Outdoor unit pressure sensor error	86.1	28
Outdoor unit trip detection	94.1	29
Outdoor unit compressor motor control error	95.1	30
	95.3	
Outdoor unit fan motor 1 error	97.3	31
Outdoor unit 4-way valve error	99.1	32
Outdoor unit discharge temperature 1 error	A1.1	33
Outdoor unit compressor temperature error	A3.1	34

2-1-7 MOBILE APP DISPLAY (In Wireless LAN Control system)

1. ERROR DISPLAY

If there is an abnormality on the Wireless LAN control system, you will see is as follows.
Error messages will disappear at 5 seconds. Then return to normal display.

For Android



For iOS



2. ERROR MESSAGES LIST

■ Mobile app errors

Registration Errors (For Android)

Error messages	Causes	Solutions
Wi-Fi must be enabled to set up new device	The user has disabled Wi-Fi on their mobile device.	Enable Wi-Fi from the Android setting.
We weren't able to sign you onto null. Please go to the Wi-Fi settings and join the network from there. Return to the app when you're done.	The mobile device and air conditioner are connected to different Wi-Fi networks when attempting to register.	Connect the mobile device to the same network as the air conditioner, then retry the registration.
Could not connect to the device at this time. Please reset the device and try again.	The air conditioner is not connected to Wi-Fi.	Check if the router connected to the air conditioner has internet access. (You can check by connecting the mobile device to the router, then opening the website.) If there is no access, connect the router to the internet.
	Mobile device is not connected to the same network as the air conditioner.	Connect the mobile device to the same network as the air conditioner, then retry the registration.
The device failed to connect with service.	Your internet access may be down or a firewall may be blocking requests to the service.	Check if the router connected to the air conditioner has internet access. (You can check by connecting the mobile device to the router, then opening the website.) If there is no access, connect the router to the internet, then retry the registration.

Error messages	Causes	Solutions
<p>Could not register the device. Make sure the device is ready for registration.</p>	<p>The air conditioner is not connected to the router.</p>	<p>Enter the Wi-Fi setting on the mobile device, then check if the SSID of the air conditioner (AC-UTY-*****)) is connected. If the air conditioner is connected, retry the registration.</p>
	<p>The router the air conditioner is connected to, has no internet access.</p>	<p>Check if the router connected to the air conditioner has internet access. (You can check by connecting the mobile device to the router, then open the website.) If there is no access, connect the router to the internet, then retry the registration.</p>
	<p>The air conditioner is already registered.</p>	<p>If there is a mobile device that has already been registered to the air conditioner, unregister by using the registered mobile device. Retry the registration with the mobile device you wish to register.</p> <p>If you do not own the mobile device registered to the air conditioner (lost, property of previous owner, etc.), please ask your maker service to unregister the mobile device. Please notify the MAC address of the WLAN adapter as written on the Wireless LAN label.</p>
	<p>*If the problem persists even if the all of the above is conducted, please contact your dealer or authorized service personnel. When asking for advice, please notify the MAC address of the WLAN adapter as written on the Wireless LAN label.</p>	

Registration Errors (For iOS)

Error messages	Causes	Solutions
You need an internet connection to add new devices.	The user has disabled Wi-Fi on their mobile device.	Enable Wi-Fi from the iOS setting.
Could not register same LAN device. Make sure both devices are in the same LAN and try again to register.	The mobile device and air conditioner are connected to different Wi-Fi networks when attempting to register.	Connect the mobile device to the same network as the air conditioner, then retry the registration.
No registrable device was found. Make sure Wi-Fi setup was successful. This method only works if the Wi-Fi was recently performed.	The air conditioner is not connected to Wi-Fi.	Check if the router connected to the air conditioner has internet access. (You can check by connecting the mobile device to the router, then opening the website.) If there is no access, connect the router to the internet.
	Mobile device is not connected to the same network as the air conditioner.	Connect the mobile device to the same network as the air conditioner, then tap register button.
Could not register the device. Make sure the device is ready for registration.	The air conditioner is not connected to the router.	Enter the Wi-Fi setting on the mobile device, then check if the SSID of the air conditioner (AC-UTY-***** ***) is connected. If the air conditioner is connected, retry the registration.

Error messages	Causes	Solutions
<p>Could not register the device. Make sure the device is ready for registration.</p>	<p>The router the air conditioner is connected to, has no internet access.</p>	<p>Check if the router connected to the air conditioner has internet access. (You can check by connecting the mobile device to the router, then opening the website.) If there is no access, connect the router to the internet, then retry the registration.</p>
	<p>The air conditioner is already registered.</p>	<p>If there is a mobile device that has already been registered to the air conditioner, unregister by using the registered mobile device. Retry the registration with the mobile device you wish to register.</p> <p>If you do not own the mobile device registered to the air conditioner (lost, property of previous owner, etc.), please ask your maker service to unregister the mobile device. Please notify the MAC address of the WLAN adapter as written on the Wireless LAN label.</p>
	<p>*If the problem persists even if the all of the above is conducted, please contact your dealer or authorized service personnel. When asking for advice, please notify the MAC address of the WLAN adapter as written on the Wireless LAN label.</p>	

General Errors (For Android)

Error messages	Causes	Solutions
No connectivity to Wi-Fi or the cloud. Please check your network connection.	The mobile device has no internet access.	Connect the mobile device to the internet.
An error occurred while trying to update your profile. Please try again later.		
Device is offline and cannot be modified.	The router the air conditioner is connected to, has no internet access.	Check if the router connected to the air conditioner has internet access. (You can check by connecting the mobile device to the router, then opening the website.) If there is no access, connect the router to the internet.
	The air conditioner is not connected to the router.	Check the LED indicators on the WLAN adapter. If the Green or Orange LED lamp is flashing or off, please check the TROUBLESHOOTING "State of the Wireless LAN indicators".

General Errors (For iOS)

Error messages	Causes	Solutions
Failed to change password.	The mobile device has no internet access.	Connect the mobile device to the internet.
Cloud not determine service reachability.		
Failed to update property.		
Could not retrieve schedules.		
The operation couldn't be completed. Operation timed out.		
"Device name" is offline. (Device name varies depending on the air conditioner)	The router the air conditioner is connected to has no internet access.	Check if the router connected to the air conditioner has internet access. (You can check by connecting the mobile device to the router, then opening the website to check access.) If there is no access, connect the router to the internet.
	The air conditioner is not connected to the router.	Check the LED indicators on the WLAN adapter. If the Green or Orange LED lamp is flashing or off, please check the TROUBLESHOOTING "State of the Wireless LAN indicators".

Sign-in Errors (For Android/iOS)

Error messages	Causes	Solutions
Could not reach service.	The mobile device has no internet access.	Connect the mobile device to the internet.

2-2 TROUBLE SHOOTING WITH ERROR CODE

Trouble shooting 1
OUTDOOR UNIT Error Method:
Serial communication error
(Serial reverse transfer error)

Indicate or Display:

Outdoor Unit : No indication
 Indoor Unit : Operation lamp: 1 time Flash, Timer lamp: 1 time Flash
 Economy lamp : Continuous flash.
ERROR CODE : [E : 11]

Detective Actuators:

Outdoor unit Main PCB
 Outdoor unit fan motor

Detective details:

When the indoor unit cannot receive the serial signal from Outdoor unit more than 2minutes after power ON, or the indoor unit cannot receive the serial signal more than 15seconds during normal operation.

Forecast of Cause:

1. Connection failure
2. External cause
3. Main PCB failure
4. Active filter module failure
5. Filter PCB failure
6. Outdoor unit fan motor failure

Check Point 1-1 : Reset the power and operate

- Does error indication reappear?

YES

Check Point 2 : Check connection

- Check any loose or removed connection line of between indoor unit and outdoor unit.
 >> **If there is an abnormal condition, correct it by referring to Installation Manual or Data & Technical Manual.**
- Check connection condition in control unit.
 (If there is loose connector, open cable or mis-wiring)

OK

Check Point 3 : Check the voltage of power supply


- Check the voltage of power supply
 >> **Check if AC198V(AC220V-10%) - 264V(AC240V+10%) appears at outdoor unit terminal L - N.**



OK

Check Point 4 : Check serial signal (Reverse transfer signal)


- Check serial signal (Reverse transfer signal)
 >> **Check if indicated value swings between AC70V and AC130V at outdoor unit terminal 1 - 3.**
 >> **If it is abnormal, Check the parts as follows.**
 - Outdoor unit fan motor (PARTS INFORMATION 5)
 - Active filter module (PARTS INFORMATION 6)
 - Filter PCB (Check the wire of CN34)
 >> **If Outdoor fan motor is abnormal, replace Outdoor unit fan motor and Main PCB.**
 >> **If Active filter module or IPM is abnormal, replace it.**
 >> **If the parts are normal, replace Main PCB.**

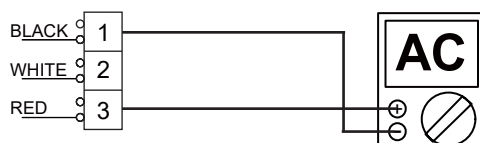

<p>Trouble shooting 2 INDOOR UNIT Error Method: Serial communication error (Serial forward transfer error)</p>	<p>Indicate or Display: Outdoor Unit : LED 1 : 1 time Flash (for Indoor unit A) LED 2 : 1 time Flash (for Indoor unit B) LED 3 : 1 time Flash (for Indoor unit C) LED 4 : 1 time Flash (for Indoor unit D) Indoor Unit : Operation lamp: 1 time Flash, Timer lamp: 1 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 11]</p>
---	---

<p>Detective Actuators: Indoor unit Controller PCB</p>	<p>Detective details: When the outdoor unit cannot properly receive the serial signal from indoor unit for 10 seconds or more.</p>
--	--

Forecast of Cause:
1. Connection failure 2. External cause 3. Controller PCB failure

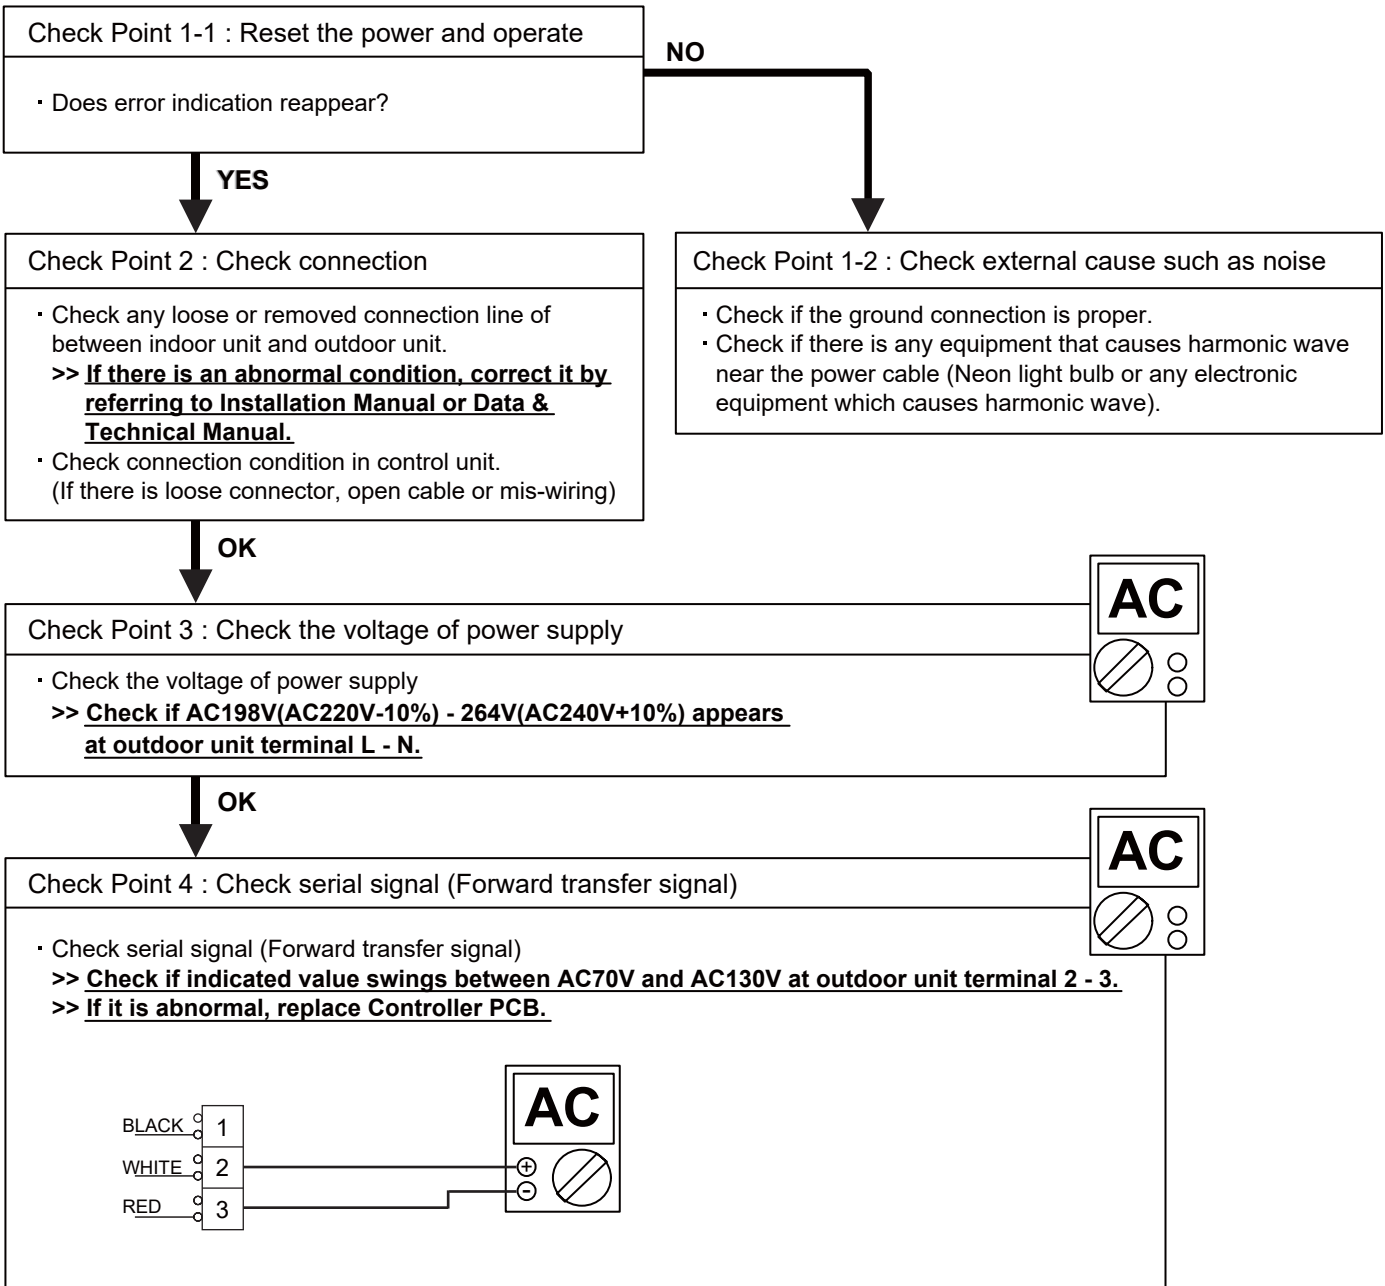

<p>Trouble shooting 3 INDOOR UNIT Error Method: Wired Remote Controller Communication Error</p>	<p>Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 1 time Flash, Timer lamp: 2 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 12]</p>
--	--

<p>Detective Actuators: Indoor unit controller PCB Wired remote controller(Optional)</p>	<p>Detective details: When the indoor unit cannot properly receive the signal from Wired Remote Controller for 1 minutes or more.</p>
---	---

Forecast of Cause:
1. Connection failure 2. Wired Remote Controller failure 3. Controller PCB failure

Check Point 1 : Check the connection of terminal

Check & correct the followings.
• Check the connection of terminal between Wired Remote Controller and indoor unit, and check if there is a disconnection of the cable.



<p>Check Point 2 : Check Wired Remote Controller and Controller PCB</p>	
<p>• Check Voltage at terminal 1-3 of Controller PCB or Communication PCB. (Power supply to Remote Control) Compact Cassette, Slim Duct, Universal Floor, Ceiling Type : CN14 Wall Mount : CN16 Compact Wall Mount Type : CNC01 (UTY-TWBXF)</p> <p>>> If it is DC12V, Remote Control is failure. (Controller PCB is normal) >> Replace Remote Control >> If it is DC 0V, Controller PCB is failure. (Check Remote Control once again) >> Replace Controller PCB</p>	
<p>For AR* G07/09/12/14/18LSLAP</p> <p>• Check Voltage at CN300 (terminal 1-3) of Controller PCB.(3 wire remote controller) • Check Voltage at CN300 (terminal 1-2) of Controller PCB.(2 wire remote controller) (Power supply to Remote control)</p> <p>>> If it is DC12V, Remote Control is failure. (Controller PCB is normal) >> Replace Remote Control >> If it is DC 0V, Controller PCB is failure. (Check Remote Control once again) >> Replace Controller PCB</p>	

For AR*GLSLAP**

<p>Trouble shooting 4 <u>INDOOR UNIT Error Method:</u> External Communication Error</p>	<p><u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 1 time Flash, Timer lamp: 8 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 18]</p>
--	---

<p><u>Detective Actuators:</u> External communication error</p>	<p><u>Detective details:</u> After receiving a signal from the same a signal has not been received for 15sec</p>
---	--

<p><u>Forecast of Cause:</u> 1. Connection failure 2.Controller PCB failure</p>

<p>Check Point 1 : Check the connection</p> <ul style="list-style-type: none"> • Check any loose or removed connection of between the controller PCB >>If there is an abnormal condition, correct it by refer to installation manual or the technical manual. • Check the condition condition on the controller PCB (If there is loose connector, open cable or miss-wiring)



<p>Check Point 2: Replace external I/O PCB</p> <p>▶ <u>If Check Point 1 do not improve the symptom.</u></p>
--



<p>Check Point 3: Replace Controller PCB</p> <p>▶ <u>If Check Point 2 do not improve the symptom, change Controller PCB.</u></p>

<p>Trouble shooting 5 <u>INDOOR UNIT Error Method:</u> Indoor unit capacity error</p>	<p><u>Indicate or Display:</u> Outdoor Unit : LED 1 : 11 time Flash Indoor Unit : Operation lamp: 2 time Flash, Timer lamp: 2 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 22]</p>
---	---

<p><u>Detective Actuators:</u> All indoor unit</p>	<p><u>Detective details:</u> The total capacity of the indoor unit if it is install beyond.</p>
--	---

<p><u>Forecast of Cause :</u> 1. The selection of indoor units is incorrect 2. Main PCB (Outdoor unit) failure</p>

<p>Check Point 1 : Check the total capacity of indoor unit</p>
<p>• Check the total capacity of the connected indoor units. >> <u>If abnormal condition is found, correct it by referring to Installation Manual or Design & Technical Manual.</u></p>



<p>Check Point 2 : Replace Main PCB</p>
<p>▶ <u>If Check Point 1 do not improve the symptom, replace Main PCB of Outdoor unit.</u></p>

For AR*G**LSLAP

<p>Trouble shooting 6 <u>INDOOR UNIT Error Method:</u> Address Setting Error In Wired Remote Controller System</p>	<p><u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 2 time Flash, Timer lamp: 6 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 26]</p>
---	--

<p><u>Detective Actuators:</u> Wired remote controller (2-Wire) Indoor unit Controller PCB circuit</p>	<p><u>Detective details:</u> When the address number set by auto setting and manual setting are mixed in one RC group. When the duplicated address number exists in one RC group.</p>
---	--

<p><u>Forecast of Cause:</u> 1. Wrong wiring of RCgroup 2. Wrong remote address setting 3. Indoor unit controller PCB failure 4. Remote controller failure</p>

<p>Check Point 1 :Wire installation</p>
<p><input type="checkbox"/> Wrong wire connection in RCgroup (Please refer to the installation manual)</p>



<p>Check Point 2 : Wrong RCgroup setting</p>
<p><input type="checkbox"/> The given address number by auto setting (00) and the manual set number (Except 00) were not existing in one RCG. <input type="checkbox"/> The remote controller address setting by U.I. were not existing same address. <input type="checkbox"/> The duplicated address number is not existing in one RCgroup</p>



<p>Check Point 3 : Check Indoor unit controller PCB</p>
<p><input type="checkbox"/> Check if controller PCB damage <input type="checkbox"/> Change controller PCB and check the Error after setting remote controller address</p>

For AR*GLSLAP**

<p>Trouble shooting 7 <u>INDOOR UNIT Error Method:</u> Connection Unit Number Error (Indoor unit in Wired RC Error)</p>	<p><u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 2 time Flash, Timer lamp: 9 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 29]</p>
--	--

<p><u>Detective Actuators:</u> Wired remote controller (2-Wire) Indoor unit Controller PCB circuit</p>	<p><u>Detective details:</u> When the number of connecting indoor units are out of specified rule.</p>
---	--

<p><u>Forecast of Cause:</u> 1. Wrong wiring / Number of I.U, RC in RCgroup 2. Indoor unit controller PCB defective</p>

<p>Check Point 1 : Wire installation</p>
<p><input type="checkbox"/> Wrong number of connecting indoor unit</p>




<p>Check Point 2 : Check Indoor unit controller PCB</p>
<p><input type="checkbox"/> Check if controller PCB damage <input type="checkbox"/> Check if controller PCB and check the Error after setting remote controller address</p>

Trouble shooting 8 INDOOR UNIT Error Method: Indoor unit model information error EEPROM access abnormal	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 3 time Flash, Timer lamp: 2 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 32]
--	--

Detective Actuators: Indoor unit Controller PCB	Detective details: When power is on and there is some below case. ① When model information of EEPROM is incorrect. ② When the access to EEPROM failed.
---	--

Forecast of Cause: 1. External cause 2. Defective connection of electric components 3. Controller PCB failure

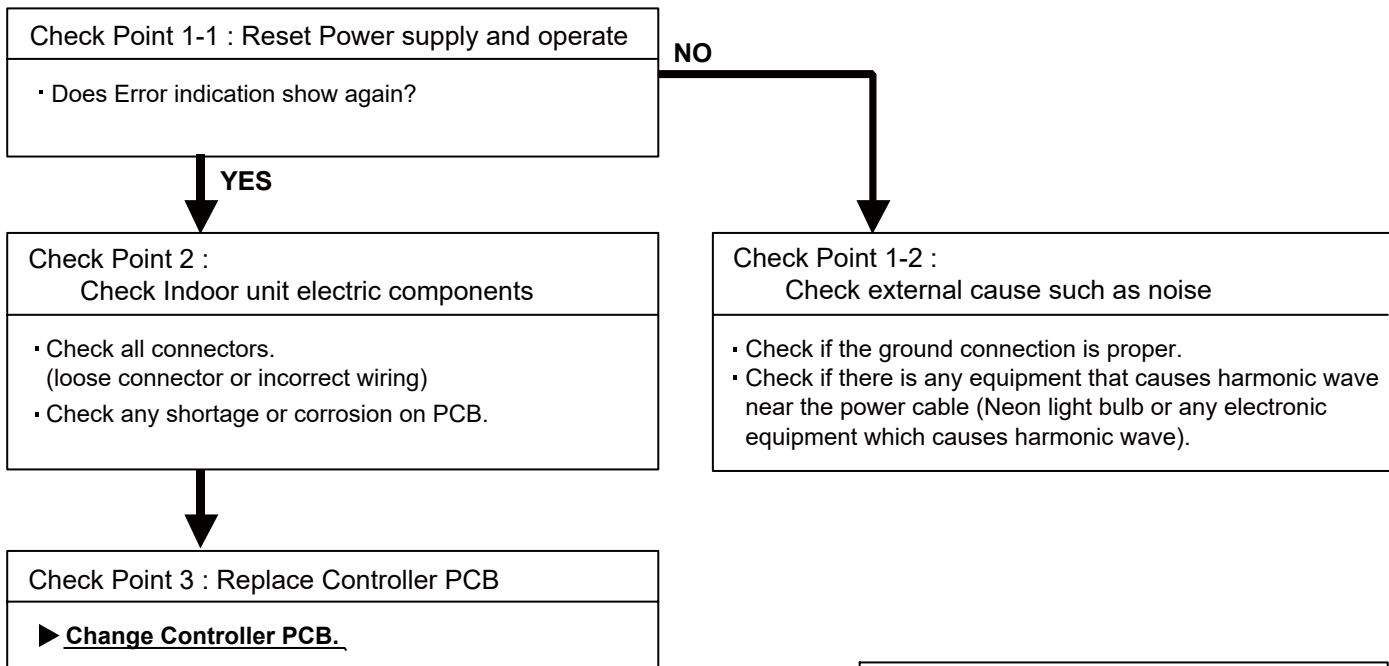



Note : EEPROM

EEPROM(Electronically Erasable and Programmable Read Only Memory) is a non-volatile memory which keeps memorized information even if power is turned off. It can change the contents electronically. To change the contents, it uses higher voltage than normal, and it can not change a partial contents. (Rewriting shall be done upon erasing the all contents.) There is a limit in a number of rewriting.

<p>Trouble shooting 9 <u>INDOOR UNIT Error Method:</u> Manual auto switch error</p>	<p><u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 3 time Flash, Timer lamp: 5 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 35]</p>
--	--

<p><u>Detective Actuators:</u> Indoor unit Controller PCB Indicator PCB Manual auto switch</p>	<p><u>Detective details:</u> When the Manual auto switch becomes ON for consecutive 60 or more seconds.</p>
--	---

<p><u>Forecast of Cause :</u> 1. Manual auto switch failure 2. Controller PCB and Indicator PCB failure</p>
--

<p>Check Point 1 : Check the Manual auto switch</p>	
<ul style="list-style-type: none"> • Check if Manual auto switch is kept pressed. • Check ON/OFF switching operation by using a meter. <p>>> <u>If Manual auto switch is disabled (on/off switching), replace it.</u></p>	



<p>Check Point 2 : Replace Controller PCB and Indicator PCB</p>
<p>▶ <u>If Check Point 1 do not improve the symptom, replace Controller PCB and Indicator PCB.</u></p>

For AR*GLSLAP**

<p>Trouble shooting 10 <u>INDOOR UNIT Error Method:</u> Indoor Unit (Communication Circuit) WRC Error</p>	<p><u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 3 time Flash, Timer lamp: 10 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 3A]</p>
--	---

<p><u>Detective Actuators:</u> Indoor unit Controller PCB circuit</p>	<p><u>Detective details:</u> Detect the communication error of microcomputer and communication PCB.</p>
---	---

<p><u>Forecast of Cause:</u> 1.Communication PCB defective 2. Indoor unit controller PCB defective</p>

Check Point 1 : Check the connection of terminal

After turning off the power supply, check & correct the followings

- Indoor unit - Check the connection the communication PCB and the controller PCB



Check Point 2 : Replace the communication PCB

If the Check point 1 is ok, replace the communication PCB



Check Point 3 : Replace the controller PCB

If condition is doesn't change, replace the controller PCB

Trouble shooting 11 INDOOR UNIT Error Method: Indoor room thermistor error	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 4 time Flash, Timer lamp: 1 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 41]
---	---

Detective Actuators: Indoor unit Controller PCB Room temperature thermistor	Detective details: Room temperature thermistor is open or short is detected always.
--	---

Forecast of Cause : 1. Connector failure connection 2. Thermistor failure 3. Controller PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is loose or removed
- Check erroneous connection
- Check if thermistor cable is open

>>Reset Power when reinstalling due to removed connector or incorrect wiring.




Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Rough value)

Temperature (°C)	-10	-5	0	5	10	15	20	25
Resistance Value (kΩ)	58.2	44.0	33.6	25.2	20.2	15.8	12.5	10.0

Temperature (°C)	30	35	40	45
Resistance Value (kΩ)	8.0	6.5	5.3	4.3




► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Controller PCB (DC5.0V)

Make sure circuit diagram of each indoor unit and check terminal voltage at Thermistor (DC5.0V)



- Duct circuit diagram (Connector connection)

CN5	1 1	GRAY	H/E (MID) Thermistor
	2 2	GRAY	
CN7	1		Room Temp. Thermistor
	2		
CN8	1 1	BLACK	
	2 2	BLACK	
- Small size Wall mount circuit diagram(Connector connection)

CN4	1 1	BLACK	H/E Thermistor
	2 2	BLACK	
	3 3	BLACK	
	4 4	BLACK	Room Temp. Thermistor
- Cassette circuit diagram (Connector connection)

CN5	1 1	GRAY	H/E (MID) Thermistor
	2 2	GRAY	
CN8	1 1	BLACK	Room Temp. Thermistor
	2 2	BLACK	
- Wall mount Scircuit diagram (Direct soldering to PCB)

CN3	1	RED	1 1	BLACK	H/E Thermistor
	2	WHITE	2 2	BLACK	
			3 3		Room Temp. Thermistor
CN1	1	BLACK			
	2	BLACK			
- Universal floor / ceiling circuit diagram (Connector connection)

CN5	1 1	BLACK	1 1	GRAY	H/E (MID) Thermistor
	2 2	BLACK	2 2	GRAY	
CN7	1				Room Temp. Thermistor
	2				
CN8	1 1	BLACK			
	2 2	BLACK			
- Floor circuit diagram (Connector connection and Direct soldering to PCB)

CN3	1 1	GRAY	H/E (MID) Thermistor
	2 2	GRAY	
CN1	1	BLACK	Room Temp. Thermistor
	2	BLACK	
- Mini duct circuit diagram (Direct soldering to PCB)

CN6	1 1	GRAY	H/E (MID) Thermistor
	2 2		
	3 3	GRAY	
CN9	1 1		Float Switch
	2 2		
	3 3		
CN8	1 1	BLACK	Room Temp. Thermistor
	2 2	BLACK	

► If the voltage does not appear, replace Controller PCB.

Trouble shooting 12 INDOOR UNIT Error Method: Indoor heat ex. thermistor error	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 4 time Flash, Timer lamp: 2 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 42]
---	---

Detective Actuators: Indoor unit Controller PCB Heat exchanger (MID) thermistor	Detective details: Heat exchanger (MID) thermistor is open or short is detected always.
--	---

Forecast of Cause : 1. Connector failure connection 2. Thermistor failure 3. Controller PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is loose or removed
- Check erroneous connection
- Check if thermistor cable is open

>>Reset Power when reinstalling due to removed connector or incorrect wiring.



Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Rough value)

Temperature (°C)	-30	-20	-10	-5	0	5	10	15	20
Resistance Value (kΩ)	1131.9	579.6	312.3	233.2	176.0	134.2	103.3	80.3	62.9

Temperature (°C)	25	30	35	40	45	50	55	60	63
Resistance Value (kΩ)	49.7	39.6	31.7	25.6	20.8	17.1	14.1	11.6	10.4

▶ **If Thermistor is either open or shorted, replace it and reset the power.**



Check Point 3 : Check voltage of Controller PCB (DC5.0V)

Make sure circuit diagram of each indoor unit and check terminal voltage at Thermistor (DC5.0V)

- Duct circuit diagram (Connector connection)
- Small size Wall mount circuit diagram(Connector connection)
- Cassette circuit diagram (Connector connection)
- Wall mount Scircuit diagram (Direct soldering to PCB)
- Universal floor / ceiling circuit diagram (Connector connection)
- Floor circuit diagram (Connector connection and Direct soldering to PCB)
- Mini duct circuit diagram (Direct soldering to PCB)

▶ **If the voltage does not appear, replace Controller PCB.**

Trouble shooting 13 INDOOR UNIT Error Method: Indoor unit fan motor error	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 5 time Flash, Timer lamp: 1 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 51]
--	--

Detective Actuators: Indoor unit Controller PCB Indoor unit fan motor	Detective details: When the condition that actual frequency of Indoor Fan is below 1/3 of target frequency is continued more than 56 seconds.
--	---

Forecast of Cause: 1. Fan rotation failure 2. Fan motor winding open 3. Motor protection by surrounding temperature rise 4. Control PCB failure 5. Indoor unit fan motor failure 6. Power supply PCB

Check Point 1 : Check rotation of Fan
<ul style="list-style-type: none"> · Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor) >>If Fan or Bearing is abnormal, replace it.



Check Point 2 : Check ambient temp. around motor
<ul style="list-style-type: none"> · Check excessively high temperature around the motor. (If there is any surrounding equipment that causes heat) >>Upon the temperature coming down, restart operation.



Check Point 3 : Check Indoor unit fan motor
<ul style="list-style-type: none"> · Check Indoor unit fan motor. (PARTS INFORMATION 4) >>If Indoor unit fan motor is abnormal, replace Indoor unit fan motor.



Check Point 4 : Replace Controller PCB
<ul style="list-style-type: none"> ▶ <u>If Check Point 1- 3 do not improve the symptom, replace Controller PCB.</u>



Check Point 5 : Replace Controller PCB
<ul style="list-style-type: none"> ▶ <u>If Check Point 4 do not improve the symptom,replace Controller PCB.</u>


<p>Trouble shooting 14 <u>INDOOR UNIT Error Method:</u> Drain pump error</p>	<p><u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 5 time Flash, Timer lamp: 3 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 53]</p>
---	--

<p><u>Detective Actuators:</u> Indoor unit Controller PCB Float switch</p>	<p><u>Detective details:</u> When Float switch is ON for more than 3 minutes.</p>
---	---

<p><u>Forecast of Cause :</u> 1. Float switch failure 2. Shorted connector/wire 3. Controller PCB failure 4. Drain pump failure 5. Hose clogging</p>

Check Point 1 : Check Float switch

- Check operation of float switch. (any blocking by dust, etc.)
- Remove Float switch and check ON/OFF switching operation by using a meter.
>>If Float switch is abnormal, replace it.

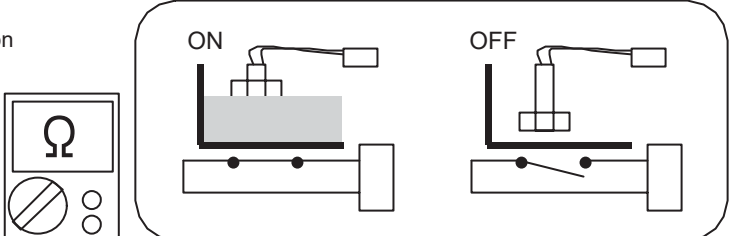

OK

Check Point 2 : Check Connector (CN 9) / Wire

- Check loose contact of CN9 /shorted wire (pinched wire).
>>Replace Float switch if the wire is abnormal

OK

Check Point 3 : Check Drain hose

- Check Drain hose .
>>If there is Hose clogging. Please clear the clog.

OK

Check Point 4 : Check Controller PCB


- ▶ If Check Point 1 ~ 3 do not improve the symptom, change Controller PCB and execute the check operation again.**

Attention!!
Wall mount / Small size wall mount type does not have a float switch.
In this case, replace Controller PCB and set up the original address.
Please refer to.

Trouble shooting 15 INDOOR UNIT Error Method: Damper(Open/Close) detection limit switch error	Indicate or Display: Outdoor Unit : No indication Indoor Unit : Operation lamp: 5 time Flash, Timer lamp: 7 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 57]
--	--

Detective Actuators: Indoor unit Controller PCB Limit switch Damper	Detective details: When limit switch were not able to detect the close though the damper close. (Upper air flow) When limit switch were not able to detect the open though the damper open. (Upper & Lower air flow)
---	---

Forecast of Cause : 1. Limit switch failure 2. Shorted connector/ wire 3. Damper faulure 4. Controller PCB failure

Check Point 1 : Check Limit switch <ul style="list-style-type: none"> • Check operation of limit switch. (any blocking by dust, etc.) • Remove Limit switch and check ON/OFF switching operation by using a meter. >>If Limit switch is detective, replace it.	
---	---



Check Point 2 : Check Connector (CN18) / Wire <ul style="list-style-type: none"> • Check loose contact of CN18 /shorted wire (pinched wire). >>Replace Limit switch if the wire is abnormal



Check Point 3 : Check Damper <ul style="list-style-type: none"> • Check the obstruction of damper movement. • Check the damper movement. >>Replace Damper if the damper is abnormal
--




Check Point 4 : Replace Controller PCB ▶ If Check Point 1~ 3 do not improve the symptom, change Controller PCB.
--

Trouble shooting 16 <u>INDOOR UNIT Error Method:</u> Damper(Open/Close) simultaneous detection limit switch error	<u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 5 time Flash, Timer lamp: 7 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 57]
--	---

<u>Detective Actuators:</u> Indoor unit Controller PCB Limit switch	<u>Detective details:</u> When the limit switch detects open and close at the simultaneous.
--	---

<u>Forecast of Cause :</u> 1. Limit switch failure 2. Shorted connector/ wire 3. Controller PCB failure

Check Point 1 : Check Limit switch <ul style="list-style-type: none"> • Check operation of limit switch. (any blocking by dust, etc.) • Remove Limit switch and check ON/OFF switching operation by using a meter. >><u>If Limit switch is detective, replace it.</u>	
--	---



Check Point 2 : Check Connector (CN18) / Wire <ul style="list-style-type: none"> • Check loose contact of CN18 /shorted wire (pinched wire). >><u>Replace Limit switch if the wire is abnormal</u>
--




Check Point 3 : Replace Controller PCB ▶ <u>If Check Point 1 & 2 do not improve the symptom, change Controller PCB.</u>
--

Trouble shooting 17 <u>INDOOR UNIT Error Method:</u> Intake grille error	<u>Indicate or Display:</u> Outdoor Unit : No indication Indoor Unit : Operation lamp: 5 time Flash, Timer lamp: 8 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 58]
---	---

<u>Detective Actuators:</u> Indoor unit Controller PCB Micro switch	<u>Detective details:</u> When the Micro switch is detected open while running the compressor.
--	--

<u>Forecast of Cause :</u> 1. Micro switch failure 2. Shorted connector/ wire 3. Controller PCB failure

Check Point 1 : Check Limit switch <ul style="list-style-type: none"> • Check operation of Micro switch. (any blocking by dust, etc.) • Remove Micro switch and check ON/OFF switching operation by using a meter. >><u>If Micro switch is detective, replace it.</u>	
--	---



Check Point 2 : Check Connector (CN11) / Wire <ul style="list-style-type: none"> • Check loose contact of CN11 /shorted wire (pinched wire). >><u>Replace Micro switch if the wire is abnormal</u>
--




Check Point 3 : Replace Controller PCB ▶ <u>If Check Point 1 & 2 do not improve the symptom, change Controller PCB.</u>
--

<p>Trouble shooting 18 <u>OUTDOOR UNIT Error Method:</u> Outdoor unit model information error</p>	<p><u>Indicate or Display:</u> Outdoor Unit : LED 1 : 21 time Flash Indoor Unit : Operation lamp: 6 time Flash, Timer lamp: 2 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 62]</p>
--	--

<p><u>Detective Actuators:</u> Outdoor unit Main PCB</p>	<p><u>Detective details:</u> When power is on and there is some below case. ① When model information of EEPROM is incorrect. ② When the access to EEPROM failed.</p>
--	--

<p><u>Forecast of Cause:</u> 1. External cause 2. Defective connection of electric components 3. Main PCB failure</p>

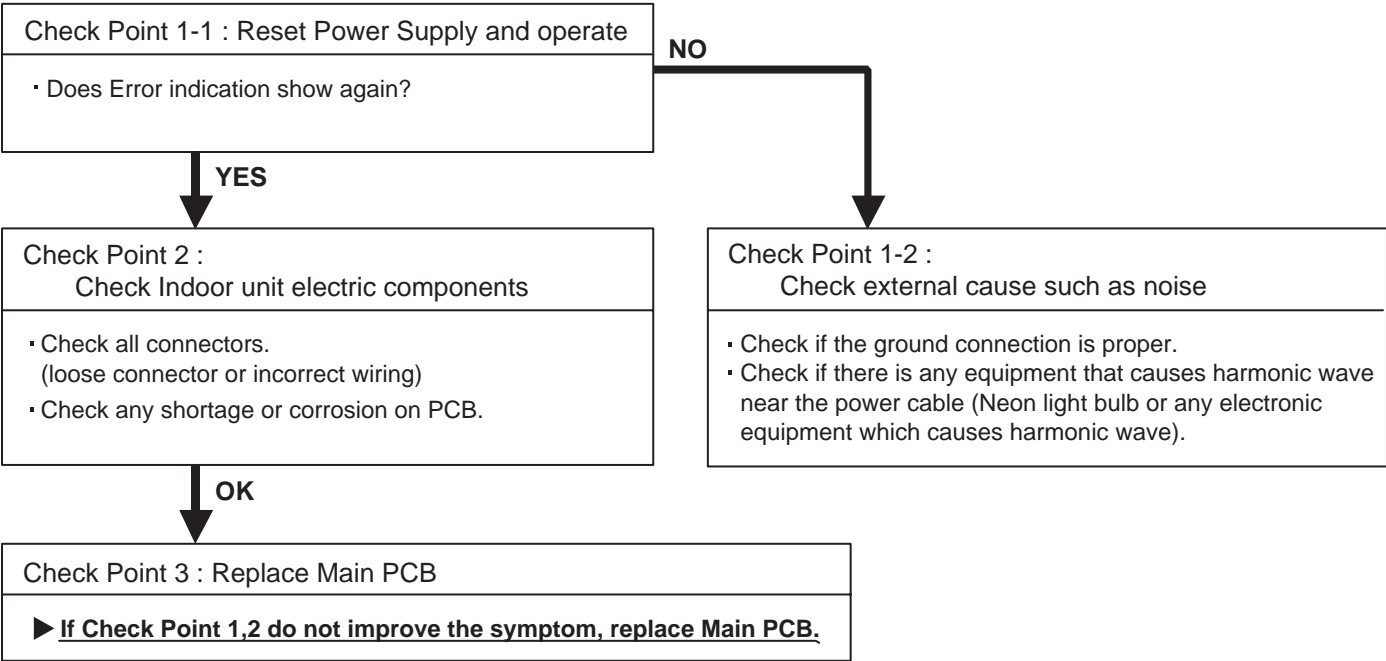

Note : EEPROM

EEPROM(Electronically Erasable and Programmable Read Only Memory) is a non-volatile memory which keeps memorized information even if power is turned off. It can change the contents electronically. To change the contents, it uses higher voltage than normal, and it can not change a partial contents. (Rewriting shall be done upon erasing the all contents.) There is a limit in a number of rewriting.

Trouble shooting 19 OUTDOOR UNIT Error Method: Active filter error	Indicate or Display: Outdoor Unit : LED 1 : 22 time Flash (for Indoor unit A) Indoor Unit : Operation lamp: 6 time Flash, Timer lamp: 4 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 64]
---	--

Detective Actuators: Outdoor unit Main PCB Active filter module	Detective details: ① When inverter input DC voltage is higher than 425V or lower than 80V. ② When a momentary power cut off occurred on low voltage
--	--

Forecast of Cause : 1. External cause 2. Connector connection failure 3. Main PCB failure 4. Active filter module failure

Check Point 1 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)
<ul style="list-style-type: none"> • Instant drop : Check if there is a large load electric apparatus in the same circuit. • Momentary power failure : Check if there is a defective contact or leak current in the power supply circuit. • Noise : Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave) Check the complete insulation of grounding.



Check Point 2 : Check connection of Connector
<ul style="list-style-type: none"> • Check if connector is removed. • Check erroneous connection. • Check if cable is open. <p>>>Upon correcting the removed connector or mis-wiring, reset the power.</p>



Check Point 3 : Check Active filter module
<ul style="list-style-type: none"> • Check Active filter module. (PARTS INFORMATION 6) <p>>>If Active filter module is abnormal, replace it.</p>



Check Point 4 : Replace Main PCB
<p>▶ If Check Point 1 - 3 do not improve the symptom, change Main PCB.</p>

<p>Trouble shooting 20 <u>OUTDOOR UNIT Error Method:</u> IPM error</p>	<p><u>Indicate or Display:</u> Outdoor Unit : LED 1 : 14 time Flash (for Indoor unit A) Indoor Unit : Operation lamp: 6 time Flash, Timer lamp: 5 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 65]</p>
--	---

<p><u>Detective Actuators:</u> Outdoor unit Main PCB</p>	<p><u>Detective details:</u> When the signal from FO terminal of IPM in Main PCB is "L"(=0V) while the compressor stops.</p>
---	---

<p><u>Forecast of Cause :</u> 1. Main PCB failure</p>
--

<p>Check Point 1 : Replace Main PCB</p>
<p>▶ <u>Change Main PCB.</u></p>

Trouble shooting 21 OUTDOOR UNIT Error Method: Outdoor discharge thermistor error	Indicate or Display: Outdoor Unit : LED 1 : 2 time Flash (for Indoor unit A) Indoor Unit : Operation lamp: 7 time Flash, Timer lamp: 1 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 71]
--	---

Detective Actuators: Outdoor unit Main PCB Discharge pipe temperature thermistor	Detective details: When the discharge pipe temperature thermistor open or short-circuit is detected at power ON or while running the compressor.
---	--

Forecast of Cause :
 1. Connector connection failure 2. Thermistor failure 3. Main PCB failure


Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value



Thermistor Characteristics (Approx. value)


Temperature(°C)	-30	-20	-10	0	10	20	30	40	50
Resistance Value (kΩ)	1013.1	531.6	292.9	168.6	100.9	62.5	40.0	26.3	17.8

Temperature(°C)	60	70	80	90	100	110	120
Resistance Value (kΩ)	12.3	8.7	6.3	4.6	3.4	2.6	2.0

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)



Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

The diagram shows five thermistor locations with their corresponding terminal connections:

- THERMISTOR (HEAT SINK):** Connected to terminal CN25 via a BLACK wire.
- THERMISTOR (COMPRESSOR):** Connected to terminal CN26 via a BROWN wire.
- THERMISTOR (OUTDOOR):** Connected to terminal CN23 via a BLUE wire.
- THERMISTOR (PIPE):** Connected to terminal CN22 via a BLACK wire.
- THERMISTOR (DISCHARGE):** Connected to terminal CN21 via a BROWN wire.

► If the voltage does not appear, replace Main PCB.

Trouble shooting 22 OUTDOOR UNIT Error Method: Compressor thermistor error	Indicate or Display: Outdoor Unit : LED 1 : 7 time Flash (for Indoor unit A) Indoor Unit : Operation lamp: 7 time Flash, Timer lamp: 2 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 72]
---	---

Detective Actuators: Outdoor unit Main PCB Compressor temperature thermistor	Detective details: When the compressor temperature thermistor open or short-circuit is detected at power ON or while running the compressor.
---	--

Forecast of Cause :
 1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Ω

Thermistor Characteristics (Rough value)

Temperature(°C)	-30	-20	-10	0	10	20	30	40	50
Resistance Value (k Ω)	1013.1	531.6	292.9	168.6	100.9	62.5	40.0	26.3	17.8

Temperature(°C)	60	70	80	90	100	110	120
Resistance Value (k Ω)	12.3	8.7	6.3	4.6	3.4	2.6	2.0

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)

DC

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

► If the voltage does not appear, replace Main PCB.

<p>Trouble shooting 23 OUTDOOR UNIT Error Method: Heat ex. thermistor error</p>	<p>Indicate or Display: Outdoor Unit :LED 1 : 3 time Flash (for Indoor unit A) Indoor Unit : Operation lamp: 7 time Flash, Timer lamp: 3 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 73]</p>
--	---

<p>Detective Actuators: Outdoor unit Main PCB Heat exchanger temperature thermistor</p>	<p>Detective details: When the heat exchanger temperature thermistor open or short-circuit is detected at power ON or while running the compressor.</p>
--	---

Forecast of Cause :
1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)

Temperature(°C)	-30	-20	-10	0	10	20	30	40	50
Resistance Value (kΩ)	95.6	50.3	27.8	16.1	9.6	6.0	3.8	2.5	1.7

Temperature(°C)	60	70	80
Resistance Value (kΩ)	1.2	0.8	0.6

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

► If the voltage does not appear, replace Main PCB.

Trouble shooting 24 OUTDOOR UNIT Error Method: Outdoor thermistor error	Indicate or Display: Outdoor Unit : LED 1 : 3 time Flash (for Indoor unit A) Indoor Unit : Operation lamp: 7 time Flash, Timer lamp: 4 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 74]
--	---

Detective Actuators: Outdoor unit Main PCB Outdoor temperature thermistor	Detective details: When the outdoor temperature thermistor open or short-circuit is detected at power ON or while running the compressor.
--	---

Forecast of Cause :
 1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)

Temperature(°C)	-30	-20	-10	0	10	20	30	40
Resistance Value (kΩ)	224.3	115.2	62.3	35.2	20.7	12.6	8.0	5.2

Temperature(°C)	50	60	70	80
Resistance Value (kΩ)	3.5	2.4	1.6	1.2

► **If Thermistor is either open or shorted, replace it and reset the power.**



Check Point 3 : Check voltage of Main PCB (DC5.0V)

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

► **If the voltage does not appear, replace Main PCB.**

<p>Trouble shooting 25</p> <p>OUTDOOR UNIT Error Method:</p> <p>2-way valve thermistor error</p>	<p>Indicate or Display:</p> <p>Outdoor Unit : LED 1 : 5 time Flash (for Indoor unit A) LED 2 : 5 time Flash (for Indoor unit B) LED 3 : 5 time Flash (for Indoor unit C) LED 4 : 5 time Flash (for Indoor unit D)</p> <p>Indoor Unit : Operation lamp: 7 time Flash, Timer lamp: 6 time Flash Economy lamp: Continuous flash.</p> <p>ERROR CODE : [E : 76]</p>
---	--

<p>Detective Actuators:</p> <p>Outdoor unit Main PCB 2-way valve temperature thermistor</p>	<p>Detective details:</p> <p>When the 2-way valve temperature thermistor open or short-circuit is detected at power ON or while running the compressor.</p>
--	--

Forecast of Cause :

1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)

Temperature(°C)	-30	-20	-10	0	10	20	30	40
Resistance Value (kΩ)	1131.9	579.6	312.3	176.0	103.3	62.9	39.6	25.6

Temperature(°C)	50	60	70	80
Resistance Value (kΩ)	17.1	11.6	8.1	5.8

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

VALVE THERMISTOR A, B

CN39	1	BLACK	1 1	RED		2-WAY VALVE A
	3	WHITE	2 2			
	4	WHITE	3 3	YELLOW		3-WAY VALVE A
	5	WHITE	4 4			
	6	WHITE	5 5	BLUE		2-WAY VALVE B
	7	WHITE	6 6			
	8	WHITE	7 7	BLACK		3-WAY VALVE B
	9	WHITE	8 8			

WHITE

VALVE THERMISTOR D (For AO*G30LAT4)

CN40	1	BLACK	1 1	GRAY		2-WAY VALVE C
	2	RED	2 2			
	4	RED	3 3	BROWN		3-WAY VALVE C
	5	RED	4 4			
	6	RED	5 5	ORANGE		2-WAY VALVE D
	7	RED	6 6			
	8	RED	7 7	GREEN		3-WAY VALVE D
	9	RED	8 8			

RED

► If the voltage does not appear, replace Main PCB.

Trouble shooting 26 OUTDOOR UNIT Error Method: 3-way valve thermistor error	Indicate or Display: Outdoor Unit : LED 1 : 6 time Flash (for Indoor unit A) LED 2 : 6 time Flash (for Indoor unit B) LED 3 : 6 time Flash (for Indoor unit C) LED 4 : 6 time Flash (for Indoor unit D) Indoor Unit : Operation lamp: 7 time Flash, Timer lamp: 6 time Flash Economy lamp: Continuous flash. ERROR CODE : [E : 76]
--	---

Detective Actuators: Outdoor unit Main PCB 3-way valve temperature thermistor	Detective details: When the 3-way valve temperature thermistor open or short-circuit is detected at power ON or while running the compressor.
--	---

Forecast of Cause :
1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)

Temperature(°C)	-30	-20	-10	0	10	20	30	40
Resistance Value (kΩ)	1131.9	579.6	312.3	176.0	103.3	62.9	39.6	25.6

Temperature(°C)	50	60	70	80
Resistance Value (kΩ)	17.1	11.6	8.1	5.8

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

VALVE THERMISTOR A, B

1	BLACK	1 1						
3	WHITE	2 2	RED		2-WAY VALVE A			
4	WHITE	3 3	YELLOW		3-WAY VALVE A			
5	WHITE	4 4						
6	WHITE	5 5	BLUE		2-WAY VALVE B			
7	WHITE	6 6						
8	WHITE	7 7	BLACK		3-WAY VALVE B			
9	WHITE	8 8						

WHITE

VALVE THERMISTOR D (For AO*G30LAT4)

1	BLACK	1 1						
2	RED	2 2	GRAY		2-WAY VALVE C			
4	RED	3 3	BROWN		3-WAY VALVE C			
5	RED	4 4						
6	RED	5 5	ORANGE		2-WAY VALVE C			
7	RED	6 6						
8	RED	7 7	GREEN		3-WAY VALVE C			
9	RED	8 8						

► If the voltage does not appear, replace Main PCB.

Trouble shooting 27 OUTDOOR UNIT Error Method: Heat sink thermistor error	Indicate or Display: Outdoor Unit : LED 1 : 8 time Flash (for Indoor unit A) Indoor Unit : Operation lamp: 7 time Flash, Timer lamp: 7 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 77]
--	---

Detective Actuators: Outdoor unit Main PCB Heat sink temperature thermistor	Detective details: When the heat sink temperature thermistor open or short-circuit is detected at power ON or while running the compressor.
--	---

Forecast of Cause :
 1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Ω

Thermistor Characteristics (Approx. value)

Temperature(°C)	-30	-20	-10	0	10	20	30	40
Resistance Value (k Ω)	92.3	49.2	27.5	16.1	9.7	6.1	3.9	2.6

Temperature(°C)	50	60	70	80	90	100
Resistance Value (k Ω)	1.8	1.2	0.9	0.6	0.5	0.4

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)

DC


Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

► If the voltage does not appear, replace Main PCB.

Trouble shooting 28 OUTDOOR UNIT Error Method: High pressure switch error	Indicate or Display: Outdoor Unit : LED 1 : 9 time Flash (for Indoor unit A) LED 1 : 10 time Flash (for Indoor unit B) Indoor Unit : Operation lamp: 8 time Flash, Timer lamp: 6 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 86]
--	---

Detective Actuators: Outdoor unit Main PCB Pressure switch	Detective details: When the pressure switch open is detected in 10 seconds after the power is turned on.
---	--

Forecast of Cause :
1. Connector connection failure 2. Pressure switch failure 3. Main PCB failure

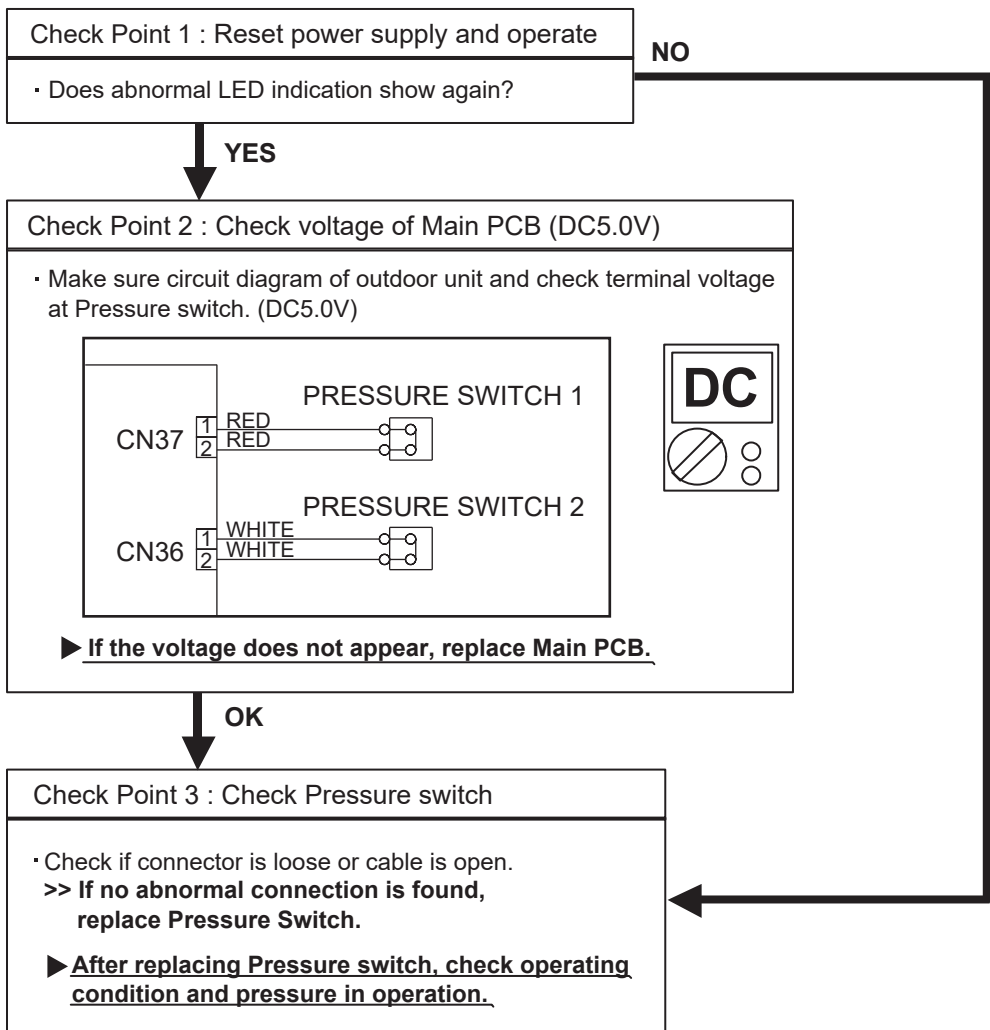

• Characteristics of pressure switch

• PRESSURE SWITCH 1 (CN37)		• PRESSURE SWITCH 2 (CN36)	
	Pressure switch 1		Pressure switch 2
Contact : Short ⇒ Open	4.2 ± 0.1MPa	Contact : Short ⇒ Open	3.7 ⁺⁰ / _{-0.2} MPa
Contact : Open ⇒ Short	3.2 ± 0.15MPa	Contact : Open ⇒ Short	2.9 ± 0.2MPa

<p>Trouble shooting 29 OUTDOOR UNIT Error Method: Over current error</p>	<p>Indicate or Display: Outdoor Unit : LED 1 : 12 time Flash (for Indoor unit A) Indoor Unit : Operation lamp: 9 time Flash, Timer lamp: 4 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 94]</p>
---	---

<p>Detective Actuators: Outdoor unit Main PCB Compressor</p>	<p>Detective details:</p> <ol style="list-style-type: none"> ① When more than normal operating current to IPM in Main PCB flows, the compressor stops. ② After the compressor restarts, if the same operation is repeated within 40sec, the compressor stops again. ③ If ① and ② repeats 5 times, the compressor stops permanently.
---	---

<p>Forecast of Cause :</p> <ol style="list-style-type: none"> 1. Defective connection of electric components 2. Outdoor fan operation failure 3. Outdoor heat exchanger clogged 4. Compressor failure 5. Main PCB failure

<p>Check Point 1 : Check connections of Outdoor unit electrical components</p> <ul style="list-style-type: none"> · Check if the terminal connection is loose. · Check if connector is removed. · Check erroneous connection. · Check if cable is open. <p>>>Upon correcting the removed connector or mis-wiring, reset the power.</p>



<p>Check Point 2 : Check Outdoor fan, Heat exchanger</p> <ul style="list-style-type: none"> · Is there anything obstructing the air distribution circuit? · Is there any clogging of Outdoor Heat Exchanger? · Is the Fan rotating by hand when operation is off ? <p>>> If the fan motor is locked, replace it.</p>
--



<p>Check Point 3 : Check Outdoor fan</p> <ul style="list-style-type: none"> · Check Outdoor fan motor. (Refer to Trouble shooting 31) <p>>> If the fan motor is failure, replace it.</p>
--



<p>Check Point 4 : Check Compressor</p> <ul style="list-style-type: none"> · Check Compressor. (PARTS INFORMATION 2)



<p>Check Point 5 : Replace Main PCB</p> <p>▶ If Check Point 1 ~ 4 do not improve the symptom, change Main PCB.</p>

<p>Trouble shooting 30 <u>OUTDOOR UNIT Error Method:</u> Compressor control error</p>	<p><u>Indicate or Display:</u> Outdoor Unit : LED 1 : 13 time Flash (for Indoor unit A) Indoor Unit : Operation lamp: 9 time Flash, Timer lamp: 5 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 95]</p>
--	--

<p><u>Detective Actuators:</u> Outdoor unit Main PCB Compressor</p>	<p><u>Detective details:</u></p> <ol style="list-style-type: none"> ① While running the compressor, if the detected rotor location is out of phase with actual rotor location more than 90°, the compressor stops. ② After the compressor restarts, if the same operation is repeated within 40sec, the compressor stops again. ③ If ① and ② repeats 5 times, the compressor stops permanently.
--	---

<p><u>Forecast of Cause :</u> 1. Defective connection of electric components 2. Main PCB failure 3. Compressor failure</p>
--

<p>Check Point 1 : Check connection of around the Compressor components</p>
<p>For Compressor Terminal, Main PCB</p> <ul style="list-style-type: none"> ▪ Check if connector is removed. ▪ Check erroneous connection. ▪ Check if cable is open. <p>(Refer to PARTS INFORMATION 2)</p> <p>>><u>Upon correcting the removed connector or mis-wiring, reset the power.</u></p>



<p>Check Point 2: Replace Main PCB</p>
<p>▶ <u>If Check Point 1 do not improve the symptom, change Main PCB.</u></p>



<p>Check Point 3: Replace Compressor</p>
<p>▶ <u>If Check Point 2 do not improve the symptom, change Compressor.</u></p>

Trouble shooting 31 OUTDOOR UNIT Error Method: Outdoor unit fan motor error	Indicate or Display: Outdoor Unit : LED 1 : 15 time Flash (for Indoor unit A) Indoor Unit : Operation lamp: 9 time Flash, Timer lamp: 7 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 97]
--	--

Detective Actuators: Outdoor unit Main PCB Outdoor unit fan motor	Detective details: ① When outdoor fan rotation speed is less than 100rpm in 20 seconds after fan motor starts, fan motor stops. ② After fan motor restarts, if the same operation within 60sec is repeated 3 times in a row, compressor and fan motor stops. ③ If ① and ② repeats 5 times in a row, compressor and fan motor stops permanently.
--	---

Forecast of Cause: 1. Fan rotation failure 2. Motor protection by surrounding temperature rise 3. Main PCB failure 4. Outdoor unit fan motor failure

Check Point 1 : Check rotation of Fan
· Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor) >>If Fan or Bearing is abnormal, replace it.

↓
OK

Check Point 2 : Check ambient temp. around motor
· Check excessively high temperature around the motor. (If there is any surrounding equipment that causes heat) >>Upon the temperature coming down, restart operation.

↓
OK

Check Point 3 : Check Outdoor unit fan motor
· Check Outdoor unit fan motor. (PARTS INFORMATION 5) >>If Outdoor Fan Motor is abnormal, replace Outdoor fan motor and Main PCB.

↓
OK

Check Point 4 : Check Output Voltage of Main PCB	<div style="border: 1px solid black; padding: 2px; display: inline-block;">DC</div>						
· Check outdoor unit circuit diagram and the voltage. (Measure at Main PCB side connector)							
	<table border="1"> <thead> <tr> <th>Read wire</th> <th>DC voltage</th> </tr> </thead> <tbody> <tr> <td>Red - Black</td> <td>280V (AC220V-10%) ~ 373V (AC240+10%)</td> </tr> <tr> <td>White - Black</td> <td>15 ± 1.5V</td> </tr> </tbody> </table>	Read wire	DC voltage	Red - Black	280V (AC220V-10%) ~ 373V (AC240+10%)	White - Black	15 ± 1.5V
Read wire	DC voltage						
Red - Black	280V (AC220V-10%) ~ 373V (AC240+10%)						
White - Black	15 ± 1.5V						
▶ If the voltage is not correct, replace Main PCB.							

Trouble shooting 32 OUTDOOR UNIT Error Method: 4-way valve error	Indicate or Display: Outdoor Unit : LED 1 : 20 time Flash (for Indoor unit A) Indoor Unit : Operation lamp: 9 time Flash, Timer lamp: 9 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : 99]
---	--

Detective Actuators: Indoor unit Controller PCB Heat exchanger temperature thermistor Room temperature thermistor 4-way valve	Detective details: When the indoor heat exchanger temperature is compared with the room temperature, and either following condition is detected continuously two times, the compressor stops. <ul style="list-style-type: none"> ▪ Cooling or Dry operation [Indoor heat exchanger temp.] - [Room temp.] > 10°C ▪ Heating operation [indoor heat exchanger temp.] - [Room temp.] < -10°C If the same operation is repeated 5 times, the compressor stops permanently.
--	---

Forecast of Cause : 1. Connector connection failure 2. Thermistor failure 3. Coil failure 4. 4-way valve failure 5. Main PCB failure 6. Controller PCB failure

Check Point 1 : Check connection of Connector <ul style="list-style-type: none"> ▪ Check if connector is removed. ▪ Check erroneous connection. ▪ Check if thermistor cable is open. >> Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Check thermistor of Indoor unit <ul style="list-style-type: none"> ▪ Isn't it fallen off the holder? ▪ Is there a cable pinched? >> Check characteristics of thermistor, (Refer to Trouble shooting 11,12), If defective, replace the thermistor.
--



Check Point 3 : Check the solenoid coil and 4-way valve [Solenoid coil] <ul style="list-style-type: none"> ▪ Remove CN30 from PCB and check the resistance value of coil. Resistance value is about 1.4kΩ >> If it is Open or abnormal resistance value, replace Solenoid Coil. [4-way valve] <ul style="list-style-type: none"> ▪ Check each piping temperature, and the location of the valve by the temperature difference. >> If the value location is not proper, replace 4-way valve.
--



Check Point 4 : Check the voltage of 4-way valve <ul style="list-style-type: none"> ▪ Check the CN 30 voltage of Main PCB Check if AC198V(AC220V-10%) - 264V(AC240V+10%) appears at CN 30 of Main PCB. [Heating operation] >> If it is not voltage, Replace Main PCB. [Cooling operation] >> If it is voltage, Replace Main PCB.




Check Point 5 : Replace Controller PCB ▶ If Check Point 1- 4 do not improve the symptom, replace Controller PCB of Indoor unit .

Trouble shooting 33 <u>OUTDOOR UNIT Error Method:</u> Discharge temp. error	<u>Indicate or Display:</u> Outdoor Unit : LED 1 : 18 time Flash (for Indoor unit A) Indoor Unit : Operation lamp: 10 time Flash, Timer lamp: 1 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : A1]
--	--

<u>Detective Actuators:</u> Outdoor unit Main PCB Discharge temperature thermistor	<u>Detective details:</u> "Protection stop by "discharge temperature $\geq 110^{\circ}\text{C}$ (18,24type) / 115°C (30type) during compressor operation"" generated 2 times within 24 hours.
---	---


<u>Forecast of Cause :</u>	1. 3-way valve not opened 2. EEV defective, strainer clogged 3. Outdoor unit operation failure, foreign matter on heat exchanger 4. Discharge temperature thermistor failure 5. Insufficient refrigerant 6. Main PCB failure
-----------------------------------	---

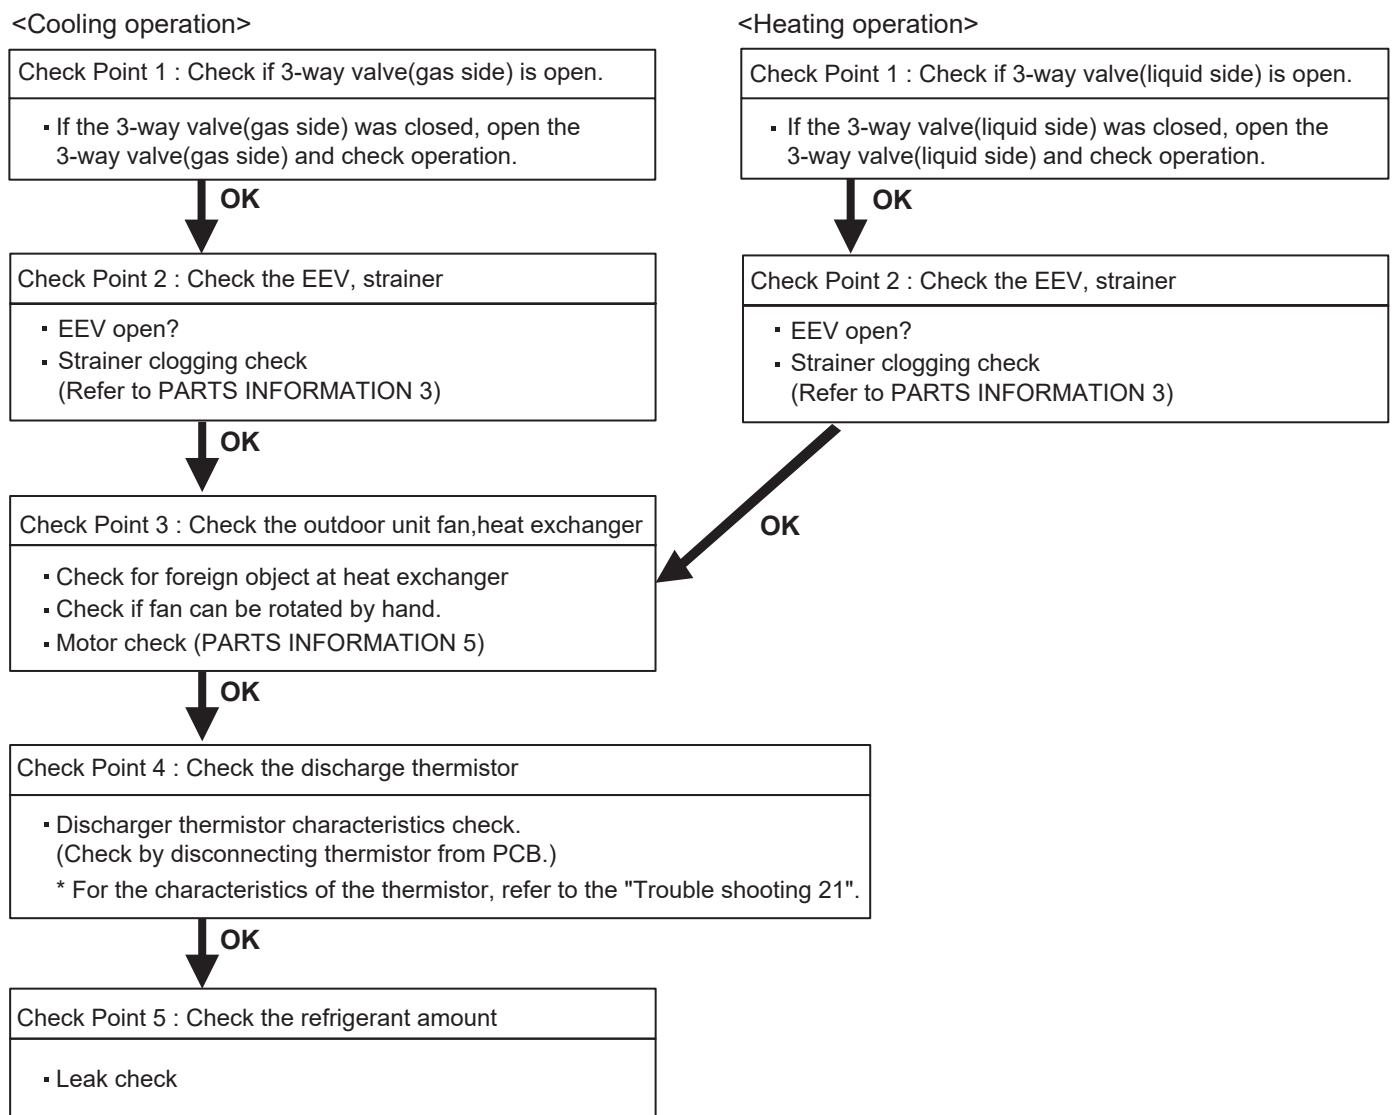

Trouble shooting 34 OUTDOOR UNIT Error Method: Compressor temp. error	Indicate or Display: Outdoor Unit : LED 1 : 19 time Flash (for Indoor unit A) Indoor Unit : Operation lamp: 10 time Flash, Timer lamp: 3 time Flash Economy lamp : Continuous flash. ERROR CODE : [E : A3]
--	---

Detective Actuators: Compressor temperature thermistor	Detective details: "Protection stop by "compressor temperature \geq 110°C (18,24type)/ 125°C (30type) during compressor operation"" generated 2 times within 24 hours.
--	--

Forecast of Cause : <ol style="list-style-type: none"> 1. 3-way valve not opened 2. EEV defective, strainer clogged 3. Outdoor unit operation failure, foreign matter on heat exchanger 4. Compressor temperature thermistor failure 5. Insufficient refrigerant 6. Main PCB failure

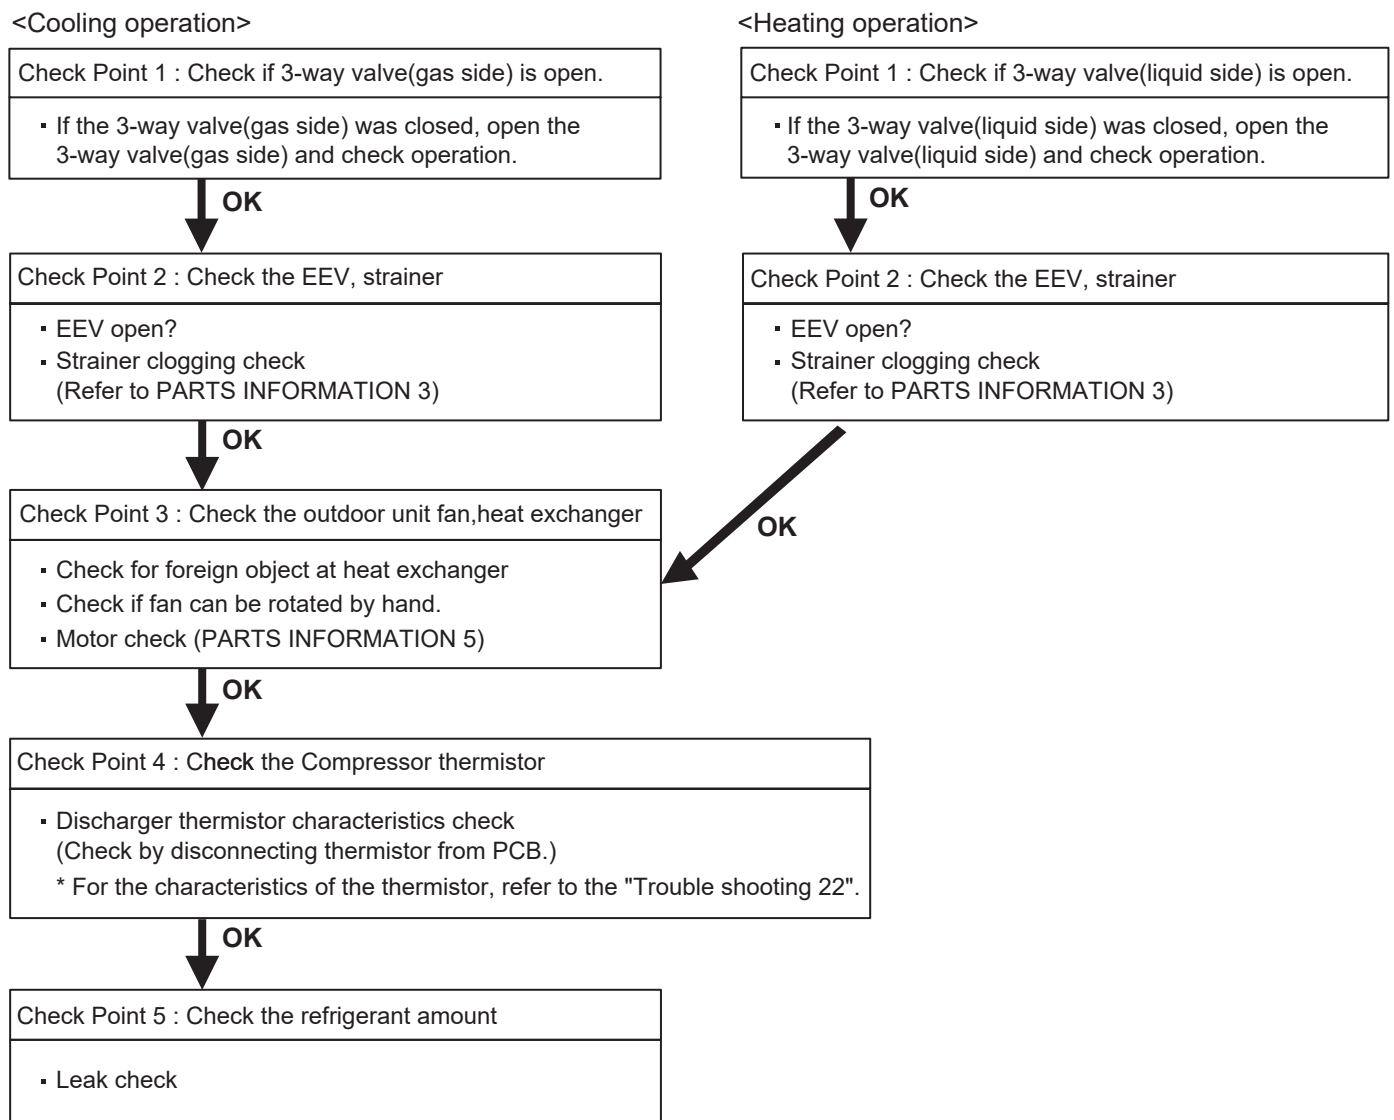

2-3 TROUBLE SHOOTING WITH NO ERROR CODE

Trouble shooting 35

Indoor Unit - No Power

Forecast of Cause:

1. Power supply failure
2. External cause
3. Electrical components defective

Check Point 1 : Check Installation condition

- Isn't the breaker down?
- Check loose or removed connection cable.
- >> **If abnormal condition is found, correct it by referring to Installation Manual or Data & Technical manual.**

↓
OK

Check Point 2 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line.
(Neon bulb or electric equipment that may cause harmonic wave)
Check the complete insulation of grounding.

↓
OK

Check Point 3 : Check Electrical components



- Check the voltage of power supply.
- >> **Check if AC198 - 264V appears at Outdoor Unit Terminal L - N.**

↓
YES

- Check Fuse of between of Terminal and Filter PCB.
- >> **If Fuse is open, check if the wiring between Terminal and Filter PCB is loose, and replace Fuse.**
- Check Varistor in Filter PCB.
- >> **If Varistor is defective, there is a possibility of an abnormal power supply. Check the correct power supply and replace Varistor. Upon checking the normal power supply, replace Varistor.**

↓
OK

Check Point 4 : Replace Filter PCB

- ▶ **If Check Point 1- 3 do not improve the symptom, replace Filter PCB.**

Trouble shooting 36

Outdoor Unit - No Power

Forecast of Cause:

1. Power supply failure
2. External cause
3. Electrical components defective

Check Point 1 : Check Installation Condition

- Isn't the breaker down?
- Check loose or removed connection cable.
- >> **If abnormal condition is found, correct it by referring to Installation Manual or Data & Technical manual.**

↓ OK

Check Point 2 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line.
(Neon bulb or electric equipment that may cause harmonic wave)
Check the complete insulation of grounding.

↓ OK

Check Point 3 : Check Electrical components



- Check the voltage of power supply.
- >> **Check if AC198 - 264V appears at Outdoor Unit Terminal L - N.**

↓ YES

- Check Fuse in Main PCB.
- >> **If Fuse is open, check if the wiring between Terminal and Main PCB is loose, and replace Fuse.**

↓ YES

- Check Active filter module. (PARTS INFORMATION 6)
- >> **If Active filter module is abnormal, replace it.**

↓ OK

Check Point 4 : Replace Main PCB

- ▶ **If Check Point 1- 3 do not improve the symptom, replace Main PCB.**

Trouble shooting 37

No Operation (Power is ON)

Forecast of Cause :

1. Setting / Connection failure.
2. External cause.
3. Electrical components defective.

Check Point 1 : Check indoor and outdoor installation condition

- Indoor Unit - Check incorrect wiring between Indoor Unit - Remote Control.
Or, check if there is an open cable connection.
- Are these Indoor unit, Outdoor unit, and Remote control suitable model numbers to connect?
>> If there is some abnormal condition, correct it by referring to Installation manual and Data & Technical Manual.

OK

Turn off Power and check/ correct followings.

- Is there loose or removed communication line of Indoor unit and Outdoor unit?

OK

Check Point 2 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line.
(Neon bulb or electric equipment that may cause harmonic wave)
Check the complete insulation of grounding.

OK

Check Point 3 : Check Wired Remote Controller and Controller PCB

DC



- Check Voltage at terminal 1-3 of Controller PCB or Communication PCB.
(Power supply to Remote Control)
Compact Cassette, Slim Duct, Universal Floor, Ceiling Type : CN14
Wall Mount : CN16
Compact Wall Mount Type : CNC01(UTY-TWBXF)

- >> If it is DC12V, Remote Control is failure. (Controller PCB is normal) >> Replace Remote Control**
- >> If it is DC 0V, Controller PCB is failure. (Check Remote Control once again)**
 - >> Check Indoor unit fan motor. (SERVICE PARTS INFORMATION 5)**
 - If it is normal, replace Controller PCB.
 - If it is abnormal, replace Indoor unit fan motor and Controller PCB.
- >> If the symptom does not change by above Check 1, 2, 3, replace Main PCB of Outdoor unit. (SERVICE PARTS INFORMATION 10)**

For AR* G07/09/12/14/18LSLAP

- Check Voltage at CN300 (terminal 1-3) of Controller PCB.(3 wire remote controller)
- Check Voltage at CN300 (terminal 1-2) of Controller PCB.(2 wire remote controller)
(Power supply to Remote control)
- >> If it is DC12V, Remote Control is failure. (Controller PCB is normal) >> Replace Remote Control**
 - If it does not operate properly after Remote Control exchange, replace Controller PCB
- >> If it is DC 0V, Controller PCB is failure. (Check Remote Control once again)**
 - >> Check Indoor unit fan motor. (PARTS INFORMATION 4)**
 - If it is normal, replace Controller PCB.
 - If it is abnormal, replace Indoor unit fan motor and Controller PCB.
- >> If the symptom does not change by above Check 1, 2, 3, replace Main PCB of Outdoor unit.**

Trouble shooting 38

No Cooling / No Heating

Forecast of Cause:

1. Indoor unit error
2. Outdoor unit error
3. Effect by Surrounding environment
4. Connection pipe / Connection wire failure
5. Refrigeration cycle failure

Check Point 1 : Check Indoor unit

- Does indoor unit fan run on high fan?
- Is air filter dirty?
- Is heat exchanger clogged?
- Check if energy save function is operated.



Check Point 2 : Check Outdoor unit operation

- Check if outdoor unit is operating
- Check any objects that obstruct the air flow route.
- Check clogged Heat exchanger.
- Is the valve open?



Check Point 3 : Check Site condition

- Is capacity of Indoor unit fitted to room size?
- Any windows open? Or direct sunlight ?




Check Point 4 : Check Indoor/ Outdoor installation condition

- Check connection pipe (specified pipe length & Pipe diameter?)
- Check any loose or removed communication line.
- >> **If there is an abnormal condition, correct it by referring to Installation Manual or Data & Technical manual.**





Check Point 5 : Check Refrigeration cycle

- Check if strainer is clogged (Refer to the figure at right).
- Measure gas pressure and if there is a leakage, correct it.
- >> **When recharging the refrigerant, make sure to perform vacuuming, and recharge the specified amount.**
- Check EEV (PARTS INFORMATION 3)
- Check Compressor (PARTS INFORMATION 1,2)



Attention

Strainer normally does not have temperature difference between inlet and outlet as shown in ①, but if there is a difference like shown in ②, there is a possibility of inside clogged. In this case, replace Strainer.

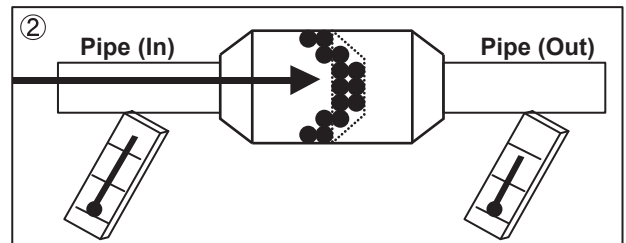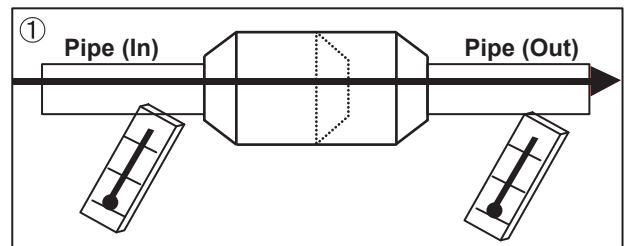


Trouble shooting 39

Abnormal noise

Forecast of Cause :

1. Abnormal installation (Indoor/ Outdoor)
2. Fan failure (Indoor/ Outdoor)
3. Compressor failure (Outdoor)

Diagnosis method when Abnormal noise is occurred

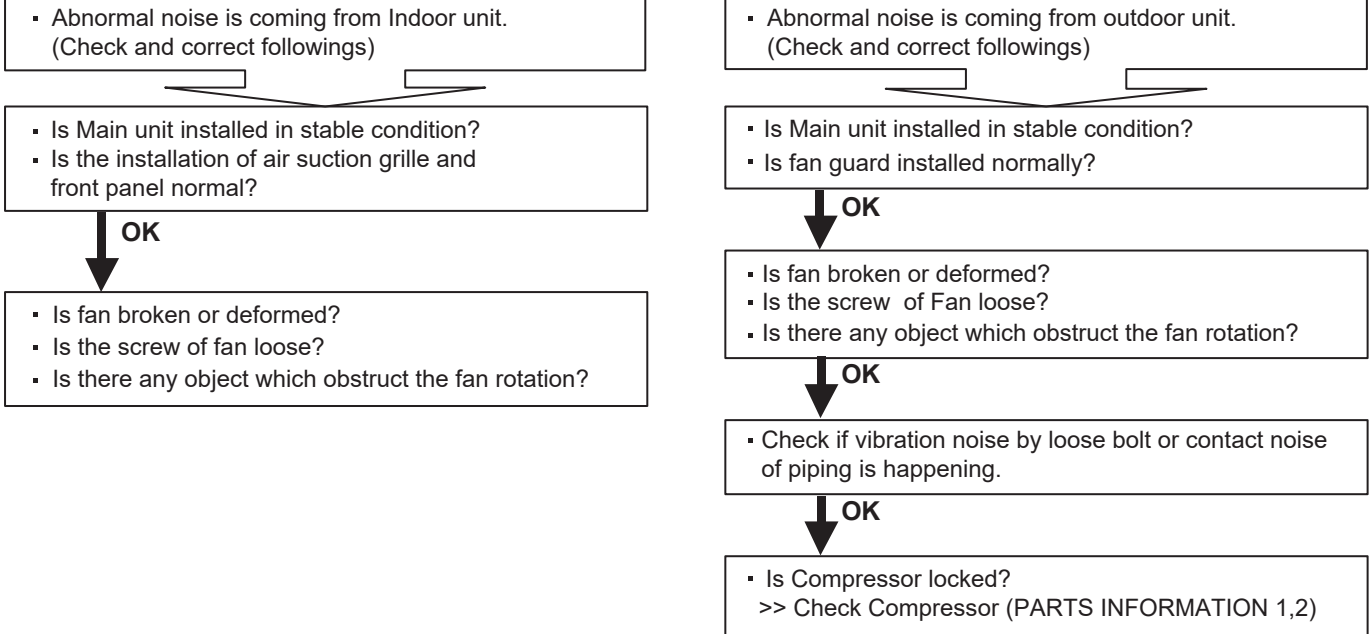


Trouble shooting 40

Water leaking


Forecast of Cause:

1. Erroneous installation
2. Drain hose failure


Diagnosis method when water leak occurs

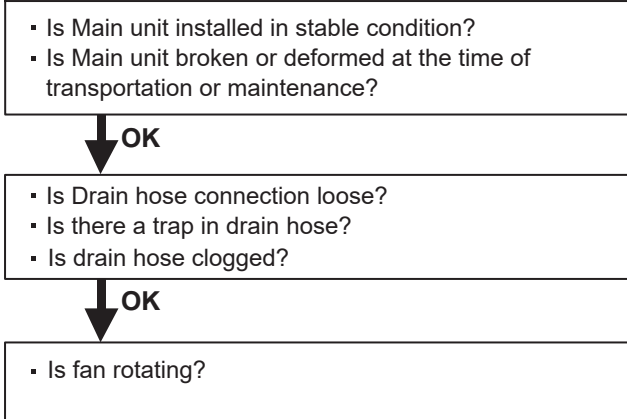

Diagnosis method when water is spitting out.

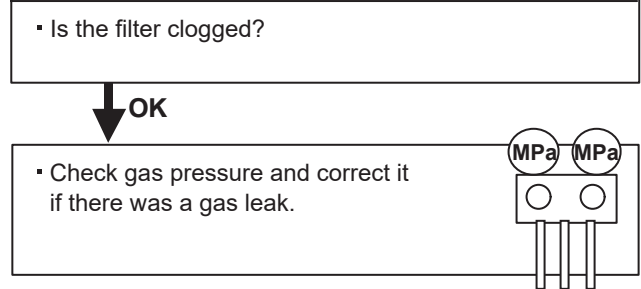

2-4 TROUBLE SHOOTING WITH ERROR CODE (For WIRELESS LAN ADAPTER)
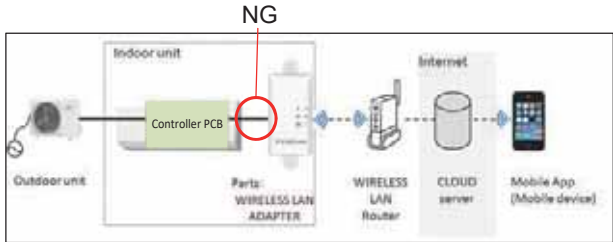
<p>Trouble shooting 41 INDOOR UNIT Error Method: External Communication Error (Communication Error of between Indoor Unit to Wireless LAN adapter)</p>	<p>Indicate of Display:</p> <table border="0"> <tr> <td style="vertical-align: top;"> <p>Indoor Unit : Operation lamp : 1 times Flash, Timer lamp : 8 times Flash ERROR CODE : [18]</p> </td> <td style="vertical-align: top;"> <p>Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : ON</p> </td> </tr> </table>	<p>Indoor Unit : Operation lamp : 1 times Flash, Timer lamp : 8 times Flash ERROR CODE : [18]</p>	<p>Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : ON</p>
<p>Indoor Unit : Operation lamp : 1 times Flash, Timer lamp : 8 times Flash ERROR CODE : [18]</p>	<p>Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : ON</p>		
<p>Detective Actuators: Wireless LAN adapter PCB Controller PCB</p>	<p>Detective details: After receiving a signal from the wireless LAN adapter, the same a signal has not been received for 15sec.</p> 		

Forecast of Cause:

1. Connection between A/C and Wireless LAN adapter failure
2. Wireless LAN adapter PCB failure
3. Controller PCB failure

Check Point 1 : Check the connection

- Check any loose or removed connection of between the Wireless LAN adapter PCB and Controller PCB
 >If there is abnormal condition, correct it.

Check the connection condition on the Controller PCB
 >If there is loose connector, open cable or miswiring, correct it.



Check Point 2 : Replace wireless LAN adapter


- ▶ If Check Point 1 do not improve the symptom, replace Wireless LAN adapter and
 Please cancel the air conditioner of the registration on the Mobile App.
 After the replace adapter, Please perform the pairing on the app.
- >>Air conditioning de-registration method, refer to page "02 - 60"
- >>Pairing method, refer to page "02 - 61"



Check Point 3 : Replace Controller PCB

- ▶ If Check Point 2 do not improve the symptom, replace controller PCB.

Trouble shooting 42 INDOOR UNIT Error Method: Wireless LAN adapter Error	Indicate of Display: <table border="0"> <tr> <td data-bbox="662 238 1052 358"> Indoor Unit : Operation lamp: No indication Timer lamp : No indication ERROR CODE : [No indication] </td> <td data-bbox="1062 238 1468 326" style="border-left: 1px dashed black;"> Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : Flashing Fast </td> </tr> </table>	Indoor Unit : Operation lamp: No indication Timer lamp : No indication ERROR CODE : [No indication]	Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : Flashing Fast
Indoor Unit : Operation lamp: No indication Timer lamp : No indication ERROR CODE : [No indication]	Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : Flashing Fast		

Detective Actuators: Wireless LAN adapter setting button Wireless LAN adapter PCB	Detective details: When the Setting button becomes ON for consecutive 60 or more seconds. <div style="text-align: right; margin-top: 20px;">  </div>
--	---


Forecast of Cause: <ol style="list-style-type: none"> 1. Wireless LAN adapter setting button failure 2. Wireless LAN adapter PCB failure

Check Point 1 : Check the setting button <ul style="list-style-type: none"> • Check if Setting button is kept pressed. > If the Settings button is held down by the foreign matter, <u>Please remove the foreign matter or remove the cause of the button press.</u>
--



Check Point 2 : Replace wireless LAN adapter <ul style="list-style-type: none"> ▶ If Check Point 1 do not improve the symptom, replace Wireless LAN adapter and <u>Please cancel the air conditioner of the registration on the Mobile App.</u> <u>After the replace adapter, Please perform the pairing on the app.</u> >>Air conditioning de-registration method, refer to page "02 - 60" >>Pairing method, refer to page "02 - 61"


Trouble shooting 43 INDOOR UNIT Error Method: Network Communication Error (Communication Error of between Wireless LAN Router to Wireless LAN adapter)	Indicate of Display: Indoor Unit : Operation lamp: No indication Timer lamp : No indication ERROR CODE : [No indication]	Wireless LAN adapter : LED 1 (Green) : ON LED 2 (Orange) : Flashing Fast
--	---	--

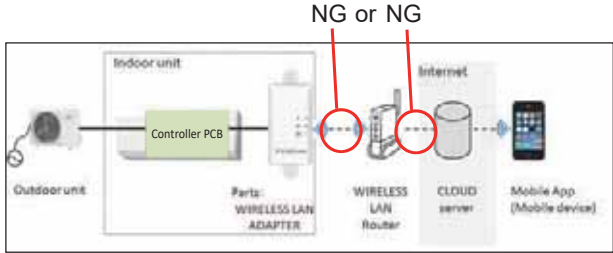Detective Actuators: Wireless LAN router Wireless LAN adapter PCB	Detective details: When the Not connection between Wireless LAN adapter and Wireless LAN router. <div style="text-align: center;">  </div>
--	---

Forecast of Cause: <ol style="list-style-type: none"> 1. Connection cable failure of Wireless LAN router. 2. Connection between Wireless LAN adapter and Wireless LAN router failure 3. Wireless LAN router failure 4. Wireless LAN adapter PCB failure
--

Check Point 1 : Check the connection cable • Check the connection cable on the Wireless LAN router. >If there is loose connector, open cable or miswiring, correct it.

↓ **OK**

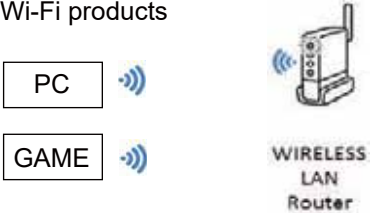Check Point 2-1 : Check the connection status • Check the connection status to the Internet and Wireless LAN router. >If the Wireless LAN Router is not connected to the Internet, <u>Please check the transmission between</u> <u>"Wi-Fi products of other than Air conditioner" and "Wireless LAN router".</u> <div style="float: right; text-align: center;"> Ex.) Wi-Fi products  </div>
--

↓ **OK**

↓ **NO**


Check Point 2-2 : Check the transmission state • Check the Wireless transmission state of Wireless LAN router.(LED status) >If the wireless transmission from the Wireless LAN router has not been outgoing, <u>Please the inquiry to "Wireless LAN router maker".</u>
--

Check Point 3 : Turn on power again of Air conditioner ▶ If Check Point 1,2 do not improve the symptom, <u>turn on power again</u> of the Air conditioner, please wait 60 seconds.
--

↓ **OK**

Check Point 4 : Replace Wireless LAN adapter ▶ If Check Point 3 do not improve the symptom, replace Wireless LAN adapter and <u>Please cancel the air conditioner of the registration on the Mobile App.</u> <u>After the replace adapter, Please perform the pairing on the app.</u> >>Air conditioning de-registration method, refer to page "02 - 60" >>Pairing method, refer to page "02 - 61"
--


<p>Trouble shooting 44 INDOOR UNIT Error Method: Communication Error ("Trou. 41" and "Trou. 43" are simultaneous Error)</p>	<p>Indicate of Display:</p> <table border="0"> <tr> <td data-bbox="662 238 1047 355"> Indoor Unit : Operation lamp: 1 time Flash Timer lamp : 8 time Flash ERROR CODE : [18] </td> <td data-bbox="1063 238 1485 355"> Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : Flashing Fast </td> </tr> </table>	Indoor Unit : Operation lamp: 1 time Flash Timer lamp : 8 time Flash ERROR CODE : [18]	Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : Flashing Fast
Indoor Unit : Operation lamp: 1 time Flash Timer lamp : 8 time Flash ERROR CODE : [18]	Wireless LAN adapter : LED 1 (Green) : Flashing Fast LED 2 (Orange) : Flashing Fast		
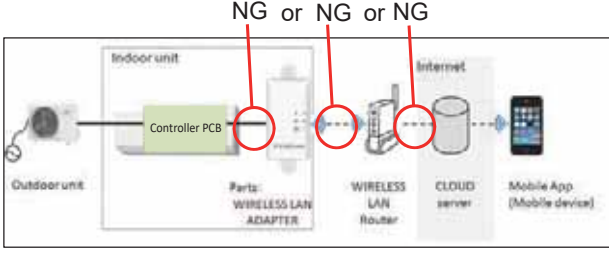
<p>Detective Actuators:</p> Wireless LAN router Wireless LAN adapter PCB Indoor unit Controller PCB	<p>Detective details:</p> <p>When the "External Communication Error" and "Network Communication Error" has occurred at the same time.</p> 
--	---

<p>Forecast of Cause:</p> <ol style="list-style-type: none"> 1. Connection cable failure of Wireless LAN router, 2. Wireless LAN router failure 3. Connection between A/C and Wireless LAN adapter failure 4. Connection between Wireless LAN adapter and Wireless LAN router failure 5. Wireless LAN adapter PCB failure, 6. Controller PCB failure

<p>Check Point 1 : Check the connection cable</p> <ul style="list-style-type: none"> • Check the connection cable on the Wireless LAN router. >If there is loose connector, open cable or miswiring, correct it.
--

OK
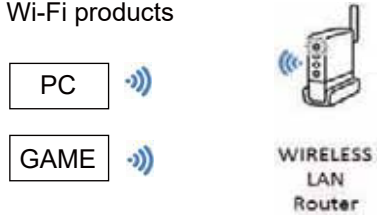
<p>Check Point 2 : Check the connection status and transmission state</p>	
<p>Check the connection status to the Internet and Wireless LAN router. >If the Wireless LAN Router is not connected to the Internet, <u>Please check the transmission between "Wi-Fi products of other than Air conditioner" and "Wireless LAN router".</u> > When there is no problem with Wi-Fi products >> <u>Refer to "Check Point 4".</u></p>	<p>Ex.) Wi-Fi products</p> 
<ul style="list-style-type: none"> • Check the Wireless transmission state of Wireless LAN router.(LED status) >If the wireless transmission from the Wireless LAN Router has not been outgoing, <u>Please the inquiry to "Wireless LAN router maker".</u> <p>Did the display pattern will change?</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> Wireless LAN adapter : LED 1 (Green) : Flashing Fast , LED 2 (Orange) :ON </div>	

YES

NO

<p>Check Point 3-1 : Turn on power again of Air conditioner</p> <ul style="list-style-type: none"> • If Check Point 1,2 do not improve the symptom, <u>turn on power again of the Air conditioner,please wait 60 seconds.</u> > When the flashing pattern of the LED 2(Orange) is "ON" >> <u>Refer to "Check Point 3-2".</u> > When the flashing pattern of the LED 2(Orange) is "Flashing Fast" >> <u>Refer to "Check Point 4".</u>

To NEXT PAGE

CONTINUATION

YES

Check Point 3-2 : Check the connection

- Check any loose or removed connection of between the Wireless LAN adapter PCB and Controller PCB
>If there is abnormal condition, correct it.
- Check the connection condition on the Controller PCB
>If there is loose connector, open cable or miswiring, correct it.

OK

Check Point 4 : Replace Wireless LAN adapter

- ▶ If Check Point 2,3 do not improve the symptom, replace Wireless LAN adapter and Please cancel the air conditioner of the registration on the Mobile App.
After the replace adapter, Please perform the pairing on the app.
>>Air conditioning de-registration method, refer to page "02 - 60"
>>Pairing method, refer to page "02 - 61"

OK

Check Point 5 : Replace Controller PCB

- ▶ If Check Point 4 do not improve the symptom, replace controller PCB.


Trouble shooting 45 INDOOR UNIT Error Method: Wireless LAN adapter Non-Energized	Indicate of Display: <table border="0"> <tr> <td data-bbox="662 236 1052 358"> Indoor Unit : Operation lamp: 1 time Flash Timer lamp : 8 time Flash ERROR CODE : [18] </td> <td data-bbox="1052 236 1508 358"> Wireless LAN adapter : LED 1 (Green) : OFF LED 2 (Orange) : OFF </td> </tr> </table>	Indoor Unit : Operation lamp: 1 time Flash Timer lamp : 8 time Flash ERROR CODE : [18]	Wireless LAN adapter : LED 1 (Green) : OFF LED 2 (Orange) : OFF
Indoor Unit : Operation lamp: 1 time Flash Timer lamp : 8 time Flash ERROR CODE : [18]	Wireless LAN adapter : LED 1 (Green) : OFF LED 2 (Orange) : OFF		

Detective Actuators: Indoor unit Controller PCB Wireless LAN adapter PCB	Detective details: When the does not output the DC12 voltage from Controller PCB.
---	---

Forecast of Cause: <ol style="list-style-type: none"> 1. Indoor unit Controller PCB failure 2. Wireless LAN adapter PCB failure 3. Wiring connection failure
--

Check Point 1 : Check the connection <ul style="list-style-type: none"> • Check any loose or removed connection of between the Wireless LAN adapter PCB and Controller PCB >If there is abnormal condition, correct it. <p>Check the connection condition on the Controller PCB >If there is loose connector, open cable or miswiring, correct it.</p>



Check Point 2 : Check the Wireless LAN adapter PCB and Controller PCB <ul style="list-style-type: none"> • Check Voltage at CN12 (terminal 1-2) of Controller PCB. >If it is DC 0V, Controller PCB is failure. ► <u>Replace Controller PCB.</u> >If it is DC12V, Wireless LAN adapter PCB failure. ► <u>Replace Wireless LAN adapter and please cancel the air conditioner of the registration on the Mobile App.</u> <u>After the replace adapter, Please perform the pairing on the App.</u> <p>>>Air conditioning de-registration method, refer to page “02 - 60” >>Pairing method, refer to page “02 - 61”</p>	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> DC  </div>
---	---

Air Conditioning De-registration Method

If you replace the Wireless LAN adapter, you will need to de-register all of the conditioner information on the App. Unregister method is as follows.

- 1 Launch the mobile app(FGL air).



- 2 Please long-push the registered "Device name" of Air Conditioner.



- 3 Then will display the "Unregister" button. Please tap the "Unregister" button.



- 4 Please tap the "Yes" .



- 5 Air Conditioner Unregister is complete.

Air conditioner registration Pairing Method

Choose from the following modes to connect your Air conditioner to your Wireless LAN router.

Note:

- Before starting this setting, wait for **60 seconds** or more after the power supply is connected to the air conditioner (via breaker or plug).
- Check that the smartphone or tablet PC is linked to the wireless router you are connecting the air conditioner.
The setting will not work if it is not connected to the same wireless router.
- The display screen design may differ depending on the version of the mobile app.
- To control 2 or more air conditioners with the same smartphone or tablet PC, repeat the setup of the chosen mode.

Button Mode

*Lighting pattern: ○ OFF ● ON ☀ Flashing

1 Launch the mobile app(FGL air).




2 Sign in with your Email address and password (as registered in “4.2. User registration”) following the screen on the mobile app.



3 Press the [+] button to add a new air conditioner.




4 Confirm that LED 2 is flashing.(On/off at 2-second intervals.) Then select [Button mode] on the screen.
If LED 1 and 2 are off, push the Setting button once.

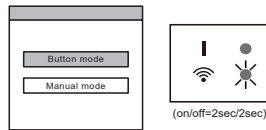


5 Press the WPS button on the wireless router that you are connecting to.
Refer to the operating manual of the wireless router for the location of the button and how to press it.



6 Confirm that LED 2 is flashing.
(On/off at 2-second intervals.)
Then press and hold the Setting button on the WLAN adapter for 3 seconds.




LED 2 lighting will change.
(on/off: 2sec/2sec → 2sec/0.5sec)

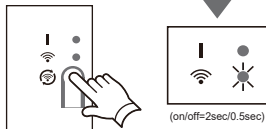


Confirm that the LED 1 and 2 is both on to proceed.



7 Press [Register] to start the connection with the wireless router.

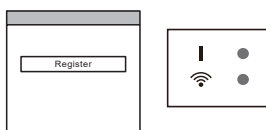

LED 1 and 2 will both flash 2 times, and a message will appear when setup is complete.

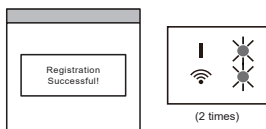


Manual mode

*Lighting pattern: ○ OFF ● ON ☀ Flashing

1~3 See steps 1 to 3 in “4.3.1. Button mode”


4 Select [Manual mode].

If LED 1 and 2 are off, push the Setting button once.

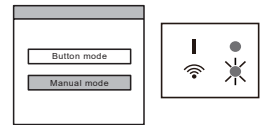


[For Android]

5 Select the SSID of the air conditioner you are connecting to.

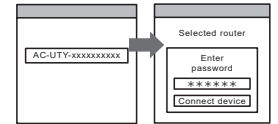


6 Input the PIN code written on the WLAN label.

7 Select the SSID of the wireless router you are connecting to.
Input the wireless router (WLAN access point) password then press [Connect device].

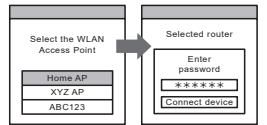


8 LED 1 and 2 will both flash 2 times, and a message will appear when setup is complete.

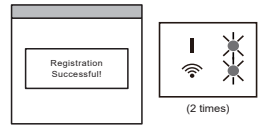


[For iOS]


5 Select [Open W-LAN setting] or activate the wireless LAN by pressing the Home button -> [Setting] -> [Wi-fi].
Select the SSID of the air conditioner you are connecting to.

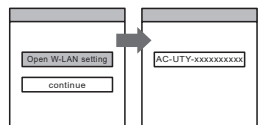


6 Input the PIN code written on the WLAN label.

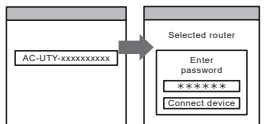

7 Select the SSID of the wireless router you are connecting to.
Input the wireless router (WLAN Access Point) password then press [Connect device].

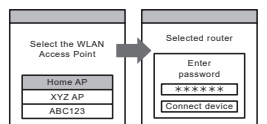

LED 1 and 2 will both flash 2 times, and a message will appear when setup is complete.

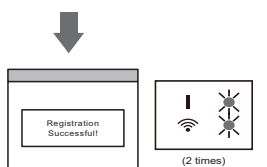


2-4 SERVICE PARTS INFORMATION

SERVICE PARTS INFORMATION 1

Compressor

Diagnosis method of Compressor (If outdoor Unit LED displays Error, refer to Trouble shooting)

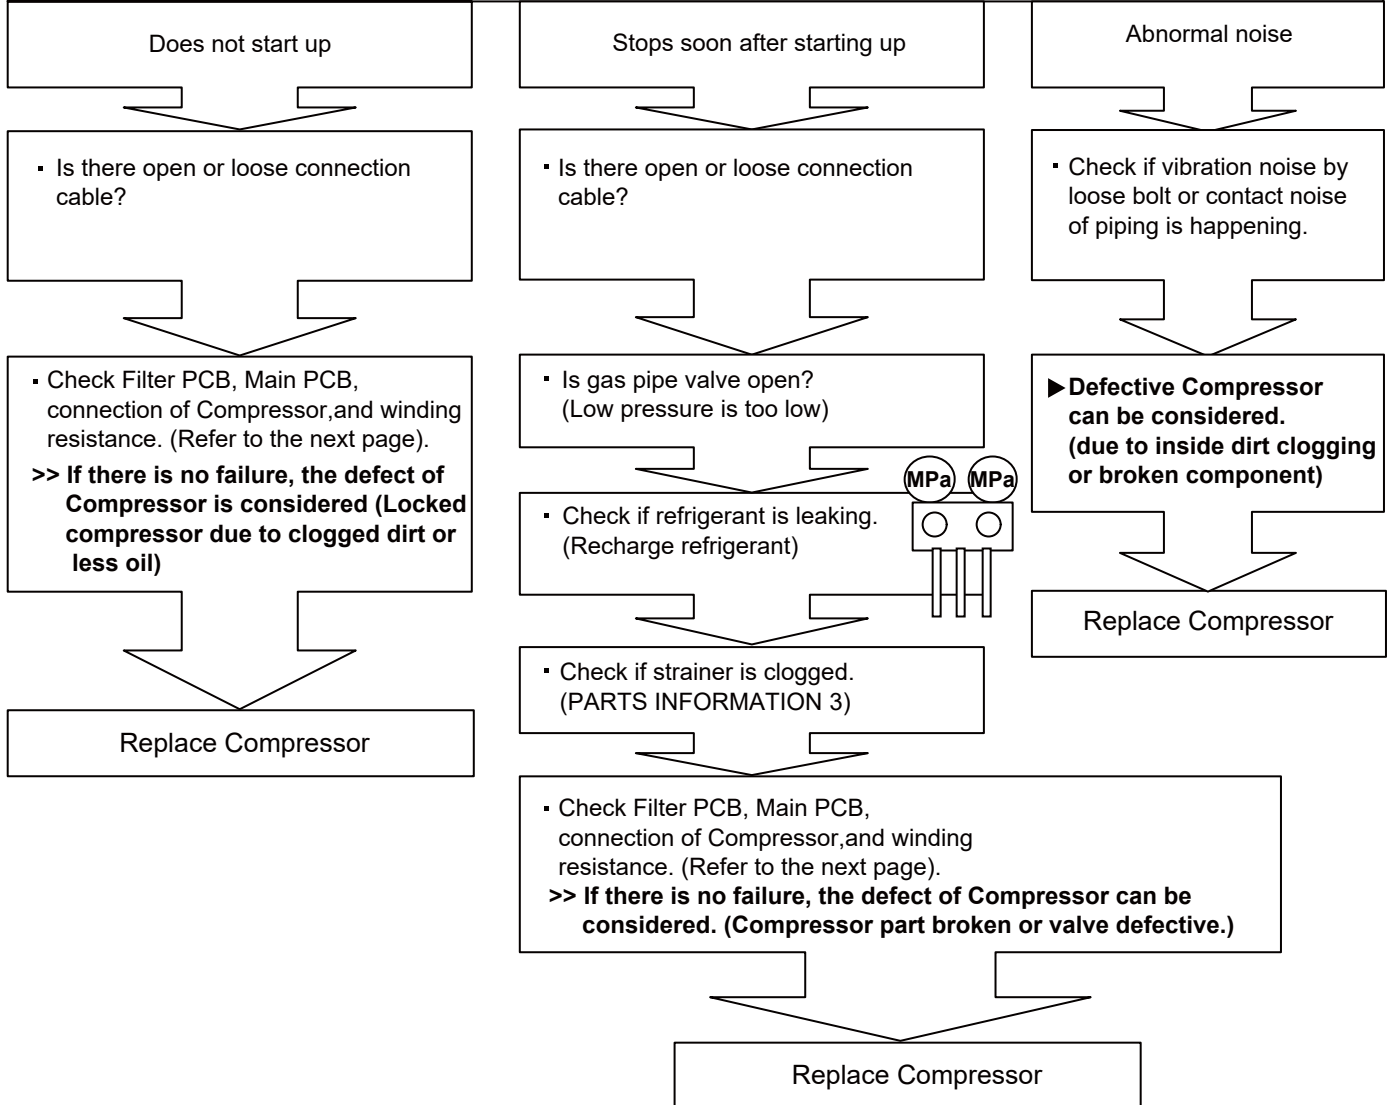


SERVICE PARTS INFORMATION 2

Inverter Compressor


Check Point 1 : Check Connection

- Check terminal connection of Compressor (loose or incorrect wiring)

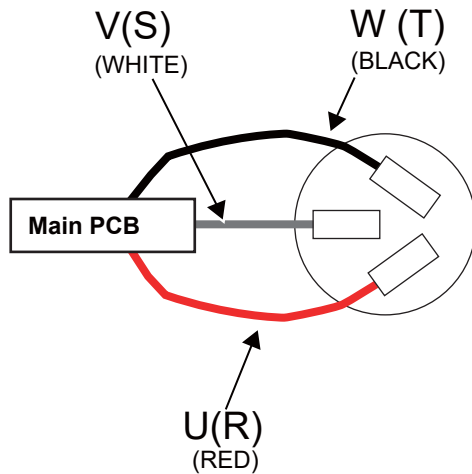

Check Point 2 : Check Winding Resistance

- Check winding resistance of each terminal
▶ **If the resistance value is 0Ω or infinite, replace Compressor.**

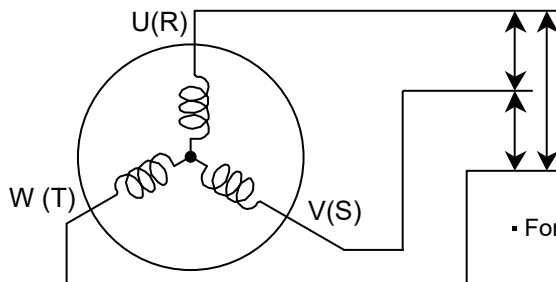

- For AO*G18/ 24LAT3
Resistance Value : 0.97 Ω at 20°C
- For AO*G30LAT4
Resistance Value : 0.88 Ω at 20°C

Check Point 3 : Replace Main PCB

- ▶ **If the symptom does not change with above Check 1, 2, replace Main PCB.**


SERVICE PARTS INFORMATION 3

Outdoor unit Electronic Expansion Valve (EEV)


Check Point 1 : Check Connections

- Check connection of connector (Loose connector or open cable)

For AO*G18/ 24LAT3

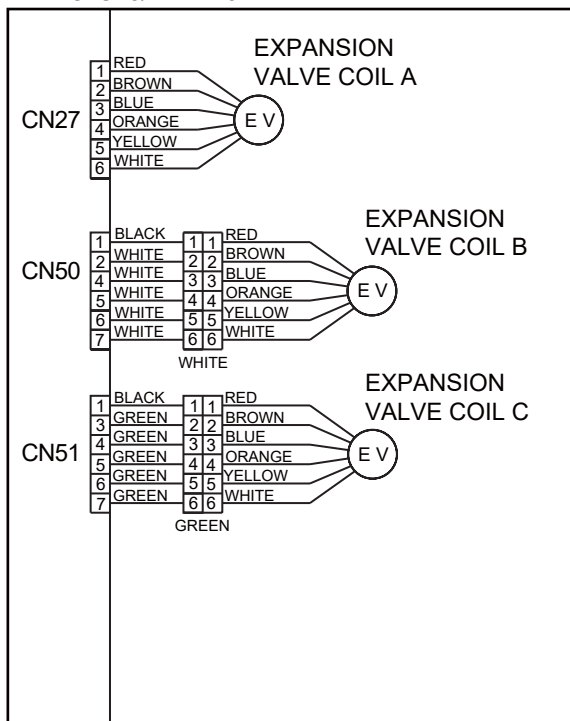


For AO*G30LAT4

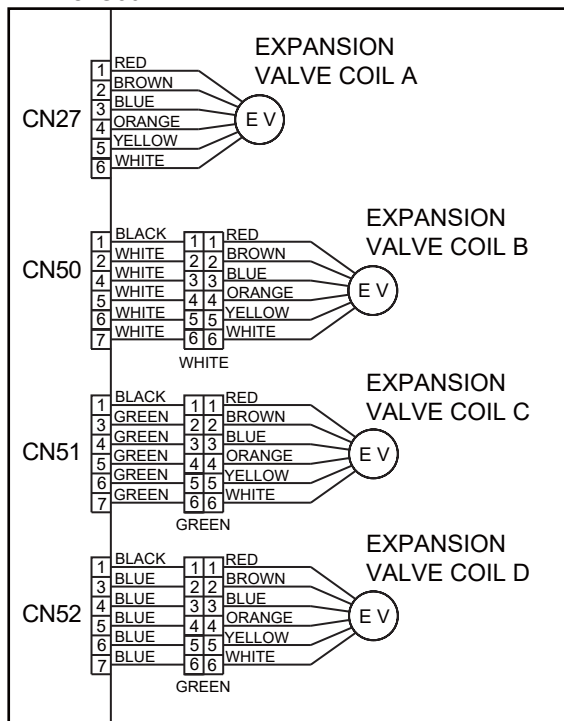

Check Point 2 : Check Coil of EEV

- Remove connector, check each winding resistance of Coil.

Read wire	Resistance value
White - Red	$46 \Omega \pm 4 \Omega$ at 20°C
Yellow - Brown	
Orange - Red	
Blue - Brown	

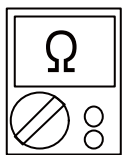

► **If resistance value is abnormal, replace EEV.**

Check Point 3 : Check voltage from Main PCB.

- Remove connector and check voltage (DC12V)
- **If it does not appear, replace Main PCB.**




Check Point 4 : Check noise at start up


- Turn on Power and check operation noise.
- **If an abnormal noise does not show, replace Main PCB.**

Check Point 5 : Check Opening and Closing operation of valve

When Valve is closed, it has a temp. difference between Inlet and Outlet.


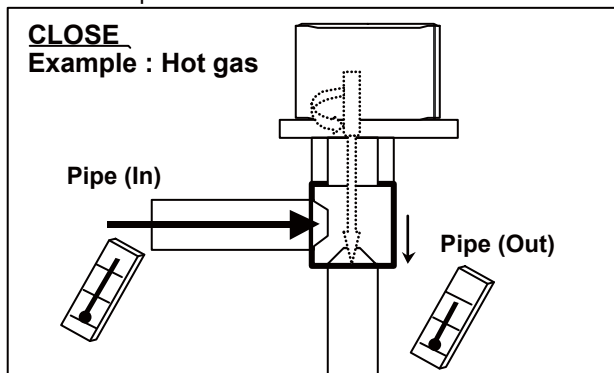


If it is open, it has no temp. difference between Inlet and Outlet.

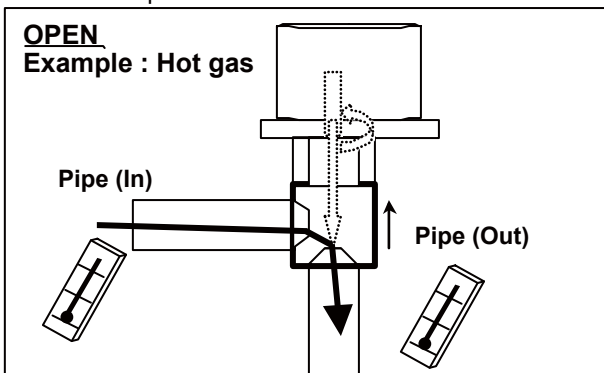

Check Point 6 : Check strainer

Strainer normally does not have temperature difference between inlet and outlet as shown in ①, but if there is a difference as shown in ②, there is a possibility of inside clogged. In this case, replace Strainer.

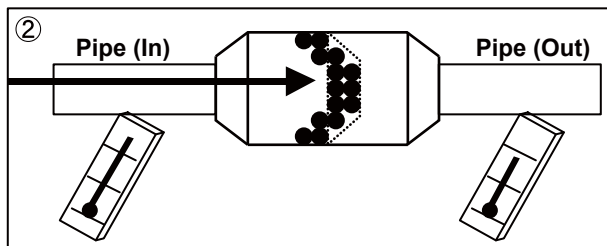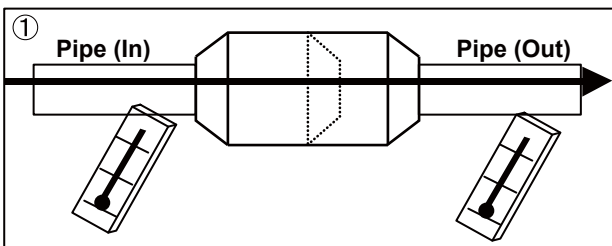

SERVICE PARTS INFORMATION 4

Indoor unit fan motor

Check Point 1 : Check rotation of fan

- Rotate the fan by hand when operation is off.
(Check if fan is caught, dropped off or locked motor)

>>If fan or bearing is abnormal, replace it.

Check Point 2 : Check resistance of indoor fan motor

- Refer to below. Circuit-test "Vm" and "GND" terminal.
(Vm: DC voltage, GND: Ground terminal)

>>If they are short-circuited (below 300 kΩ), replace Indoor fan motor and Controller PCB.

For Wall Mount, Compact Wall Mount, Floor Type

Pin number (wire color)	Terminal function (symbol)
1 (Blue)	Feed back (FG)
2 (Yellow)	Speed command (Vsp)
3 (White)	Control voltage (Vcc)
4 (Black)	Ground terminal (GND)
5	No function
6 (Red)	DC voltage (Vm)

For Cassette, Duct, Universal Floor/Ceiling Type

Pin number (wire color)	Terminal function (symbol)
1 (Brown)	Feed back (FG)
2 (Yellow)	Speed command (Vsp)
3 (White)	Control voltage (Vcc)
4 (Black)	Ground terminal (GND)
5	No function
6 (Red)	DC voltage (Vm)

SERVICE PARTS INFORMATION 5

Outdoor unit fan motor

Check Point 1 : Check rotation of fan

- Rotate the fan by hand when operation is off.
(Check if fan is caught, dropped off or locked motor)

>>If Fan or Bearing is abnormal, replace it.

Check Point 2 : Check resistance of outdoor fan motor

- Refer to below. Circuit-test "Vm" and "GND" terminal.
(Vm: DC voltage, GND: Ground terminal)

>>If they are short-circuited (below 300 kΩ), replace Outdoor fan motor and Main PCB.


Pin number (wire color)	Terminal function (symbol)
1 (Red)	DC voltage (Vm)
2	No function
3	No function
4 (Black)	Ground terminal (GND)
5 (White)	Control voltage (Vcc)
6 (Yellow)	Speed command (Vsp)
7 (Brown)	Feed back (FG)

SERVICE PARTS INFORMATION 6

Active filter module

Check Point 1 : Check Open or Short-circuit and Diode (D1)

- Remove connector, check the open or short-circuit and the diode in the module

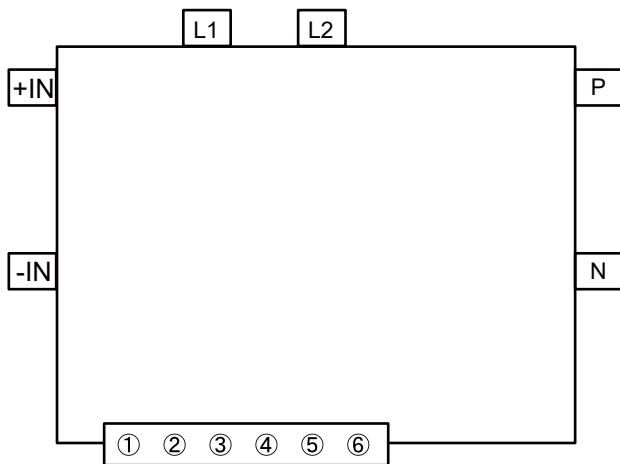

Check the open or short-circuit

Terminal		Resistance value
Tester(+)	Tester(-)	
(+IN)	(-IN)	360kΩ ± 20%
(-IN)	N	0 Ω
P	(+IN)	720kΩ ± 20%
L1	L2	1.40MΩ / 2.28MΩ (Ref. value 1) (Ref. value 2)
P	N	360kΩ ± 20%
L1,L2	Control box	∞ Ω
L2	N	1.69MΩ / 1.88MΩ (Ref. value 1) (Ref. value 2)

Check the diode

Terminal		Resistance value
Tester(+)	Tester(-)	
L2	P	1.32MΩ / 1.50MΩ (Ref. value 1) (Ref. value 2)
P	L2	1.40MΩ / 1.51MΩ (Ref. value 1) (Ref. value 2)

By kind of tester, the value may change significantly.

Ref. value 1
Specifications for Multimeter
 Manufacturer : HIOKI
 Model name : 3804
 Power source : DC9V.

Ref. value 2
Specifications for Multimeter
 Manufacturer : YOKOGAWA
 Model name : 7534
 Power source : DC3V.

► **If it is abnormal,replace Active filter module.**

Check Point 2 : Check the Output DC voltage (between P and N)


- Check the output DC voltage (between P and N) of compressor stopping and operating.
 - >> If the output voltage of compressor operating is less than the output voltage of compressor stopping, Active filter module is defective. >> **Replace Active filter module.**


***Universal Floor / Ceiling
Slim Duct / Compact Cassette
Compact Wall Mounted /
Wall Mounted / Floor type
INVERTER (MULTI)***

3 . REPLACEMENT PARTS

3-1 AO*G18/ 24LAT3

3-1-1 PARTS LAYOUT DRAWING

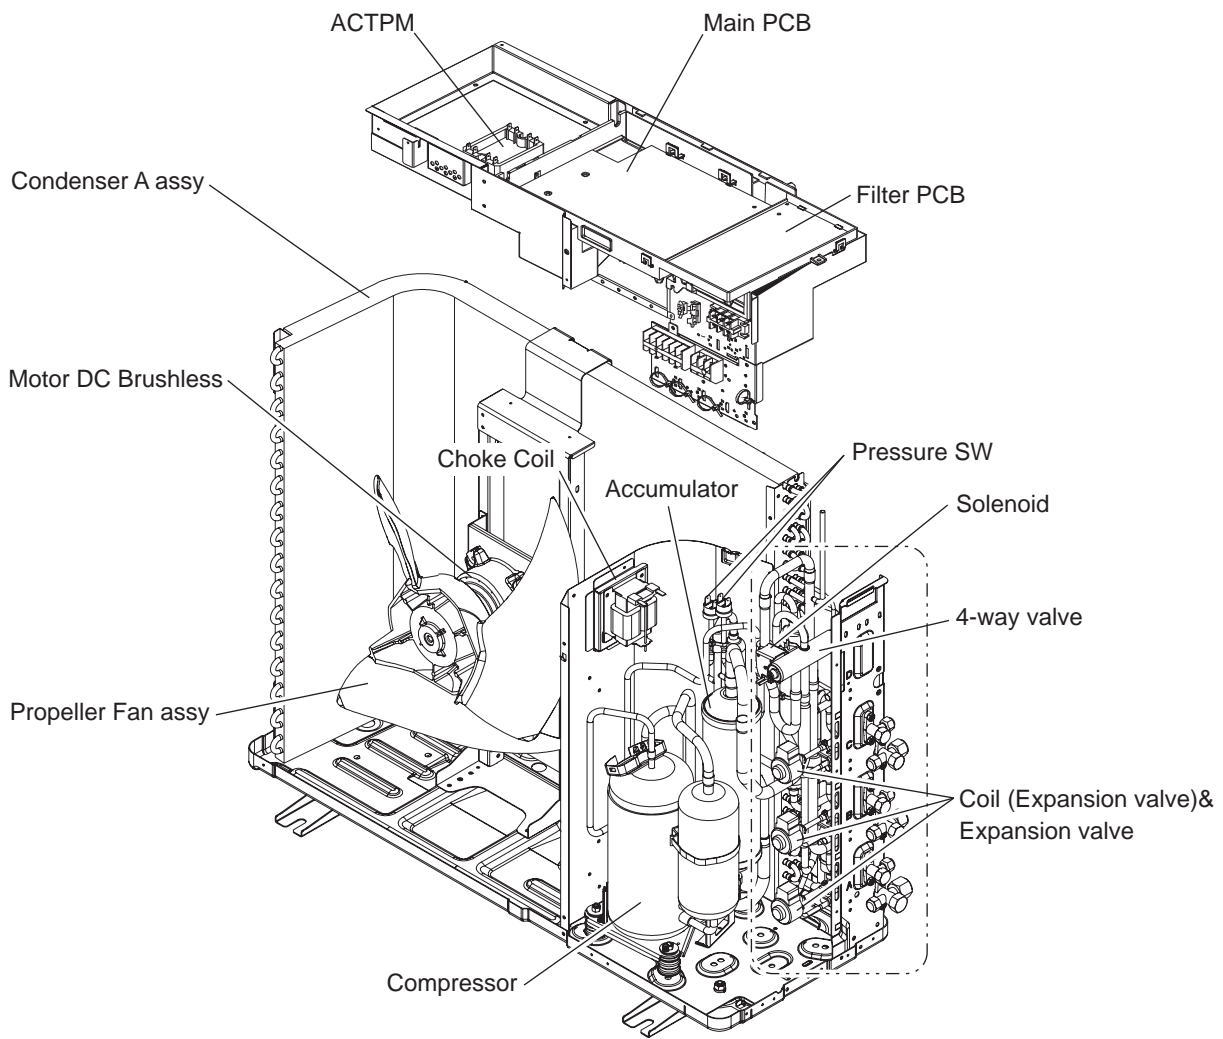


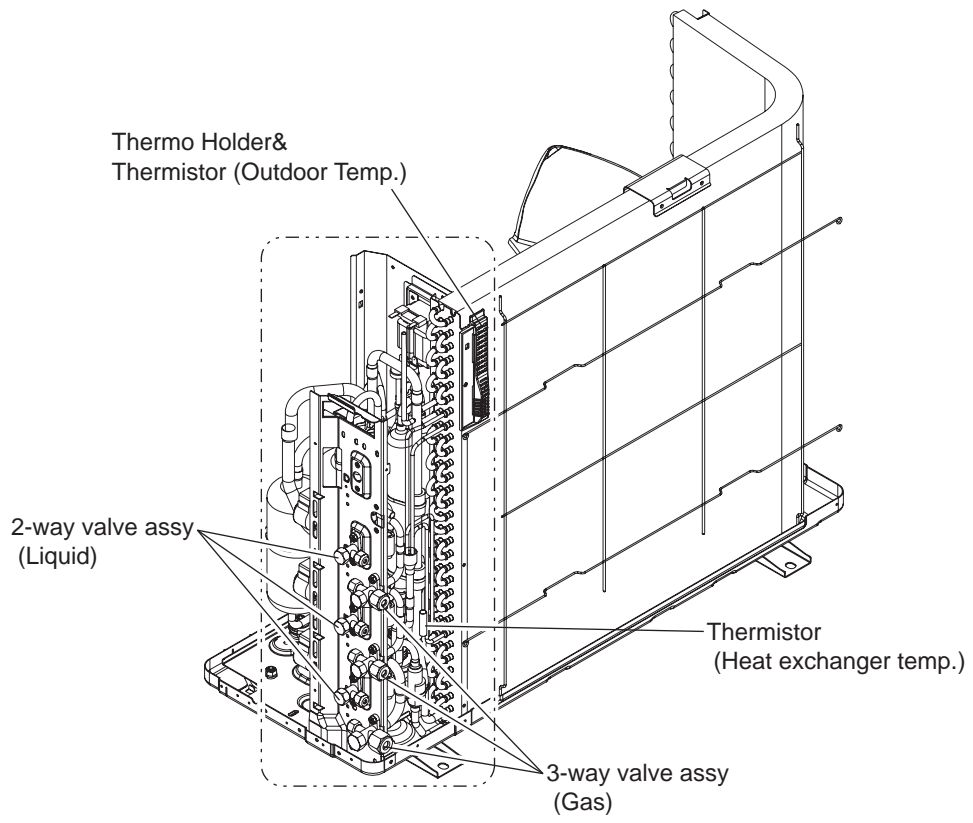

3-1-2 DISASSEMBLY PROCESS (AO*G18/ 24LAT3)

1. Service Panel sub assy removal

- Remove the 2 mounting screws.
- Remove the Service Panel sub assy by sliding downward.

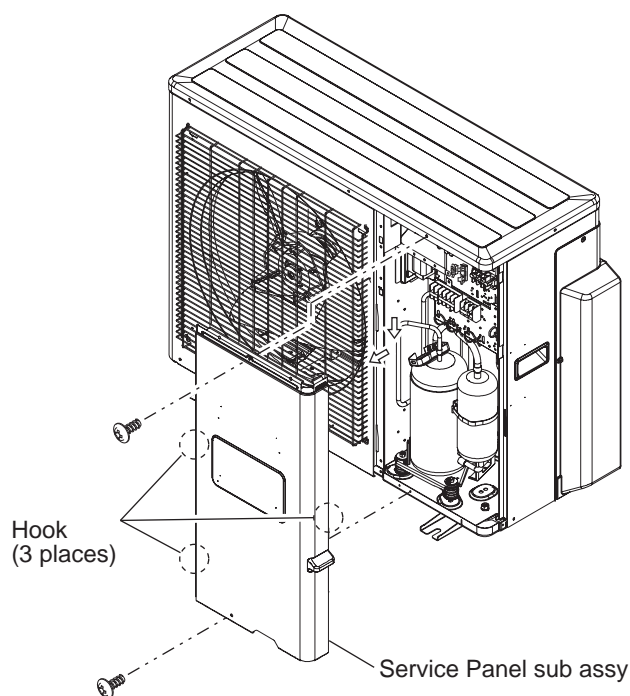


Replaceable Component


Compressor
Accumulator
4-way valve
Solenoid
Thermistor (Compressor temp.)
Thermistor (Discharge temp.)
Thermistor (Outdoor temp.)
Thermistor (Heat exchanger temp.)
Thermistor (2/3-way valve temp.)
Pressure SW
Coil (Expansion valve)

2. Top Panel sub assy removal

- Remove the 7 mounting screws.
- Remove the Top Panel sub assy upward.

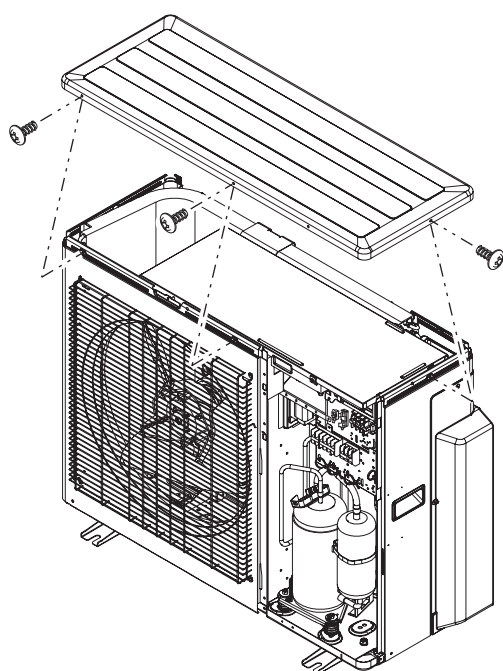



FRONT VIEW

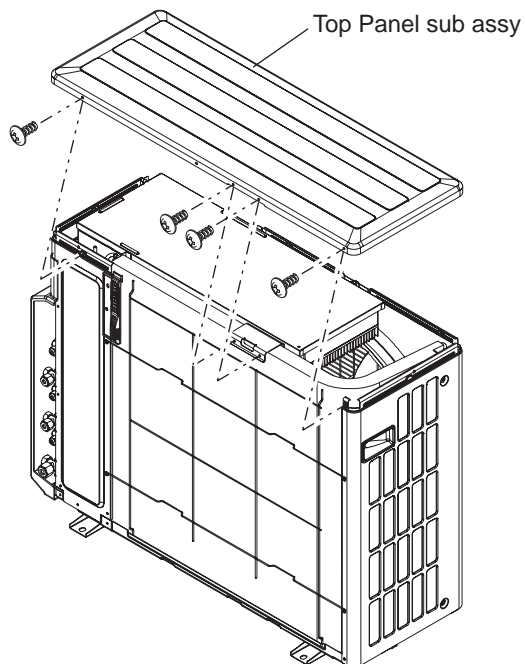

REAR VIEW


3. Inverter Box removal

- Remove the 6 mounting screws.
- Remove the power supply & connection cord.
- Remove the connectors connected to Main PCB. (Thermistor, EEV, and so on)
- Remove the Inverter Box upward.

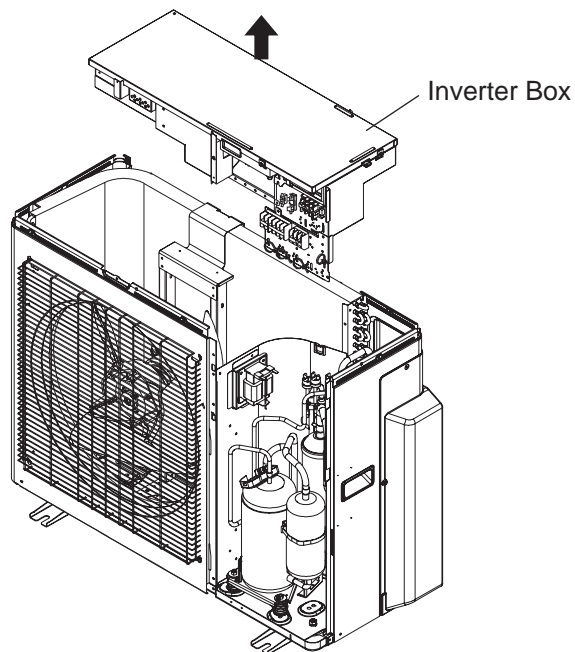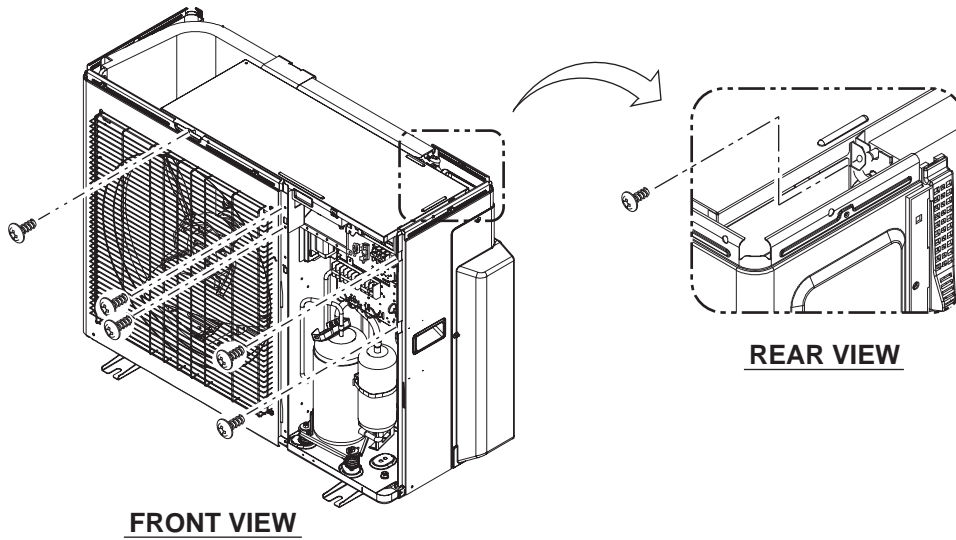




4. Inverter Box Cover removal

- Remove the 1 mounting screw.
- Remove the Inverter Box Cover upward.

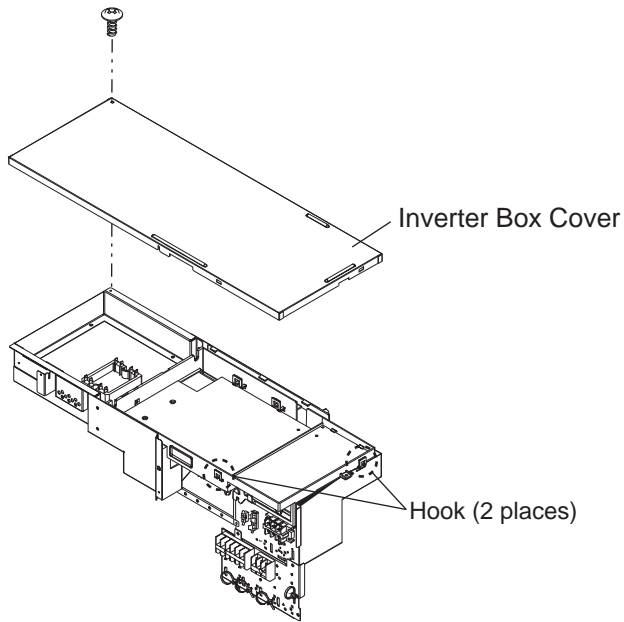


5. Main PCB removal

- Remove the 4 mounting screws. (Refer to VIEW -A)
- Remove the wires from terminal. (Refer to VIEW -B)
- Remove the wires. (Refer to VIEW -C, -D)
- Remove the Main PCB.

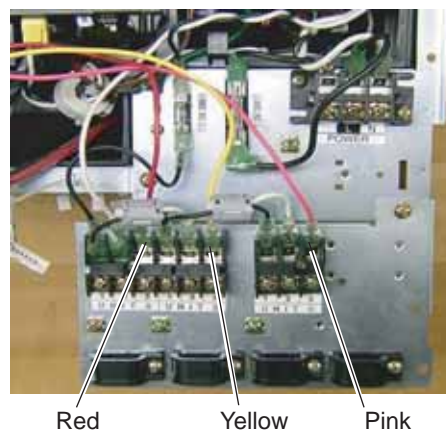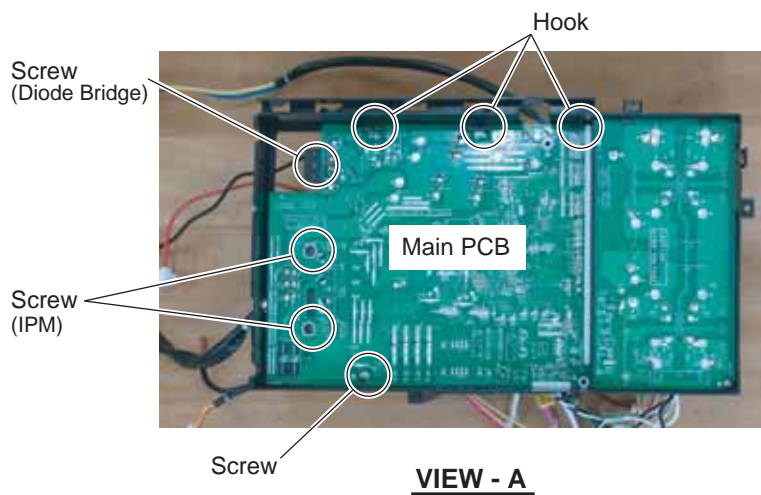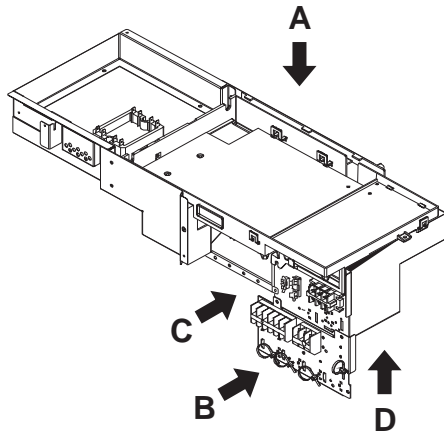


CN34(Yellow)

CN1(White)

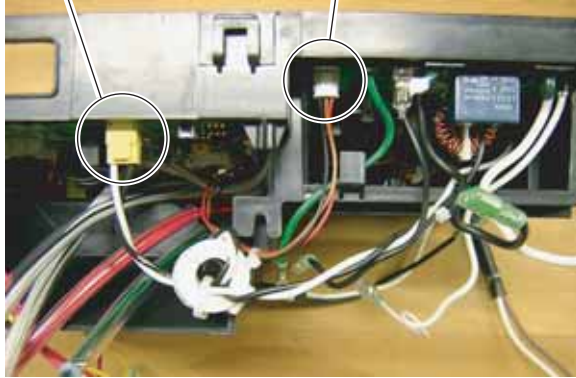

VIEW - C



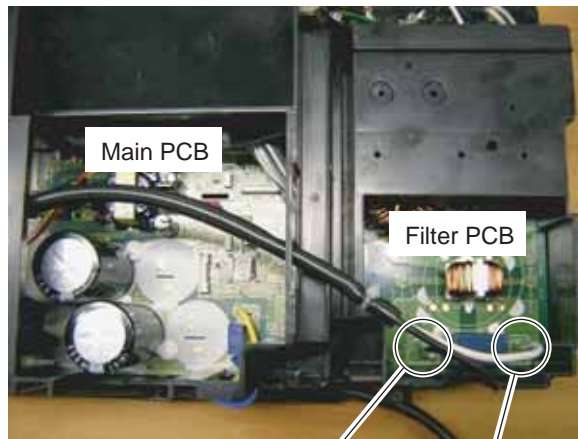


TM101(Black)

TM102(White)

VIEW - D

Precautions for exchange of Main PCB

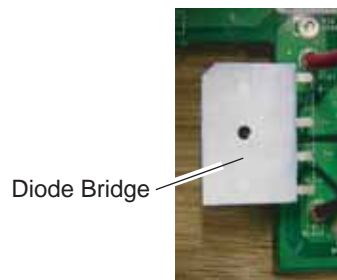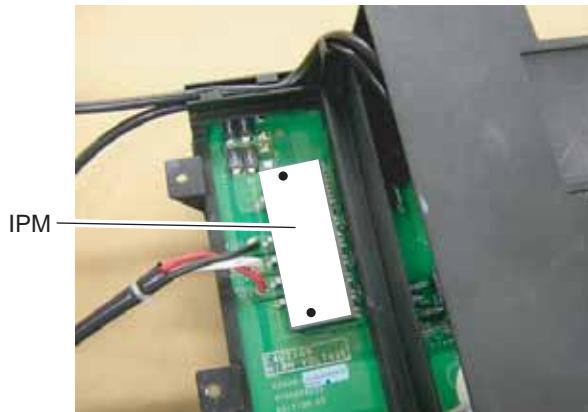
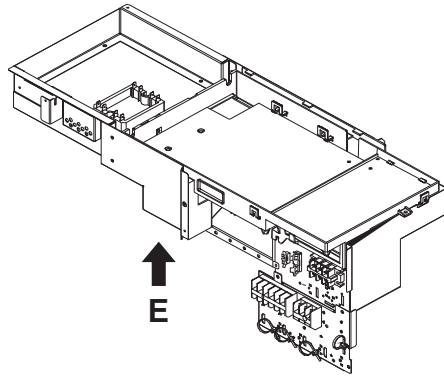


Spread the heat dissipation compound on the other side of IPM and Diode Bridge, when you exchange Main PCB by the repair.


VIEW - E

6. Filter PCB removal

- Remove the 2 mounting screws. (Refer to VIEW -A)
- Remove the wires from terminal and fuse holder. (Refer to VIEW -B)
- Remove the Filter PCB.

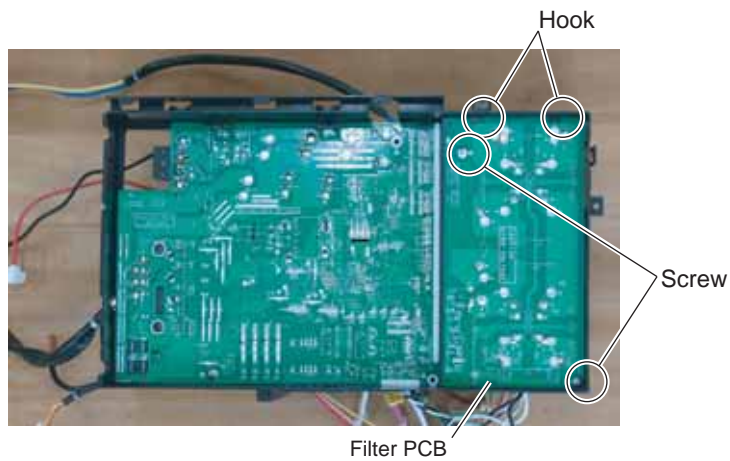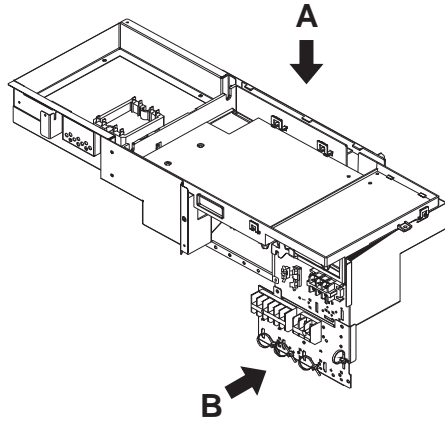




VIEW - A

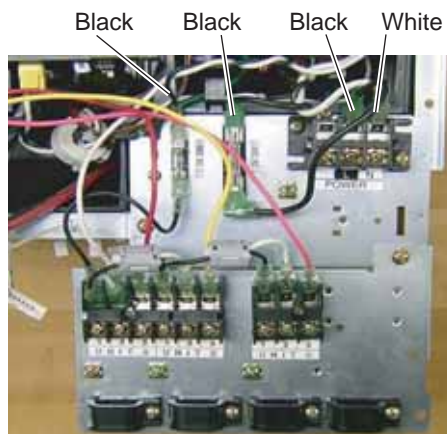

VIEW - B

7. ACTPM removal

- Remove the connectors and cords. (Refer to VIEW -F)
- Remove the 2 mounting screws. (Refer to VIEW -F)
- Remove the ACTPM (Active Filter Module).

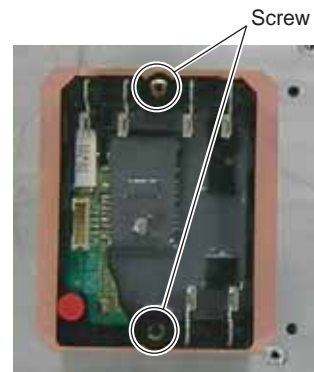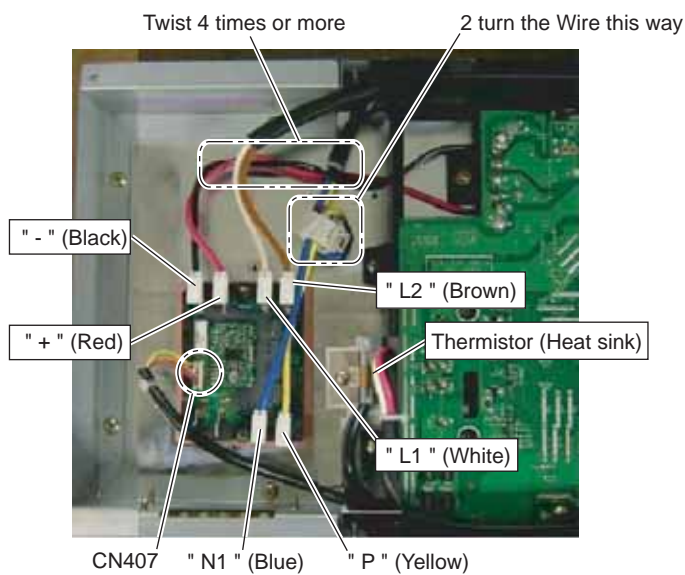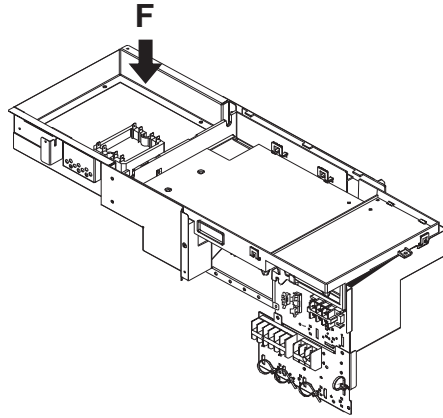


Spread the heat dissipation compound on the other side of ACTPM, when you exchange ACTPM by the repair.

VIEW - F


8. Valve Cover sub assy removal

- Remove the 3 mounting screws.
- Remove the Valve Cover sub assy.

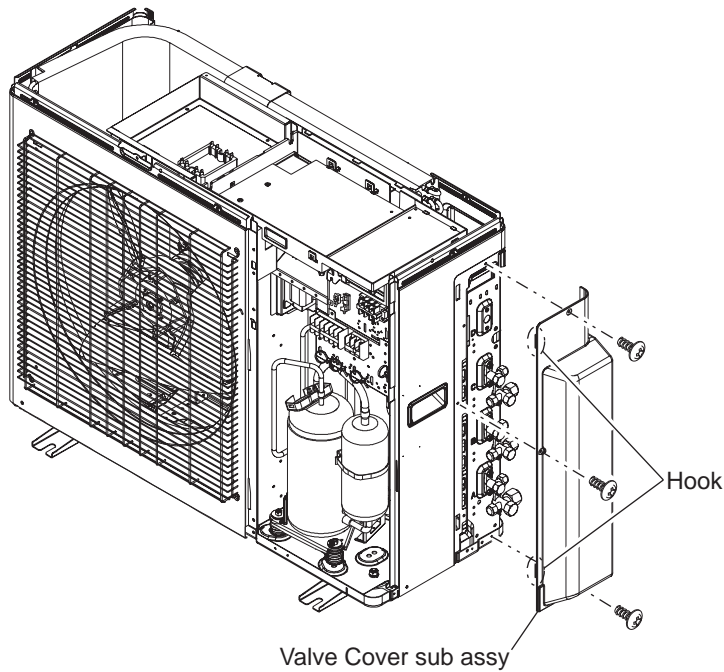


9. Thermo Holder removal

- Remove the 1 mounting screw.
- Remove the Thermo Holder by sliding upward.

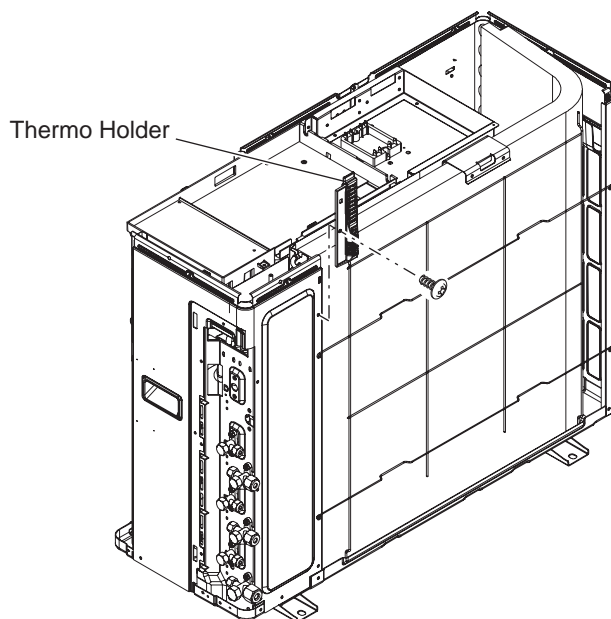


10. Right Panel sub assy removal

- Remove the 13 mounting screws.

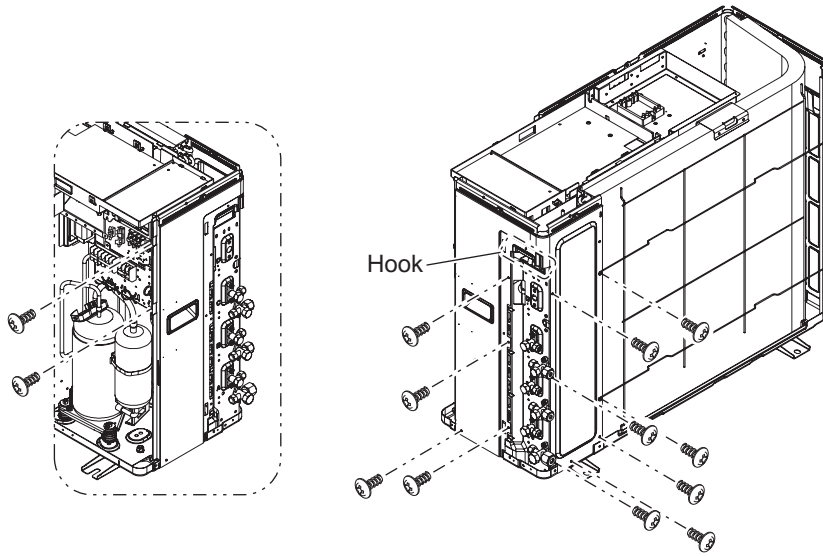



- Remove the Right Panel sub assy by sliding upward.

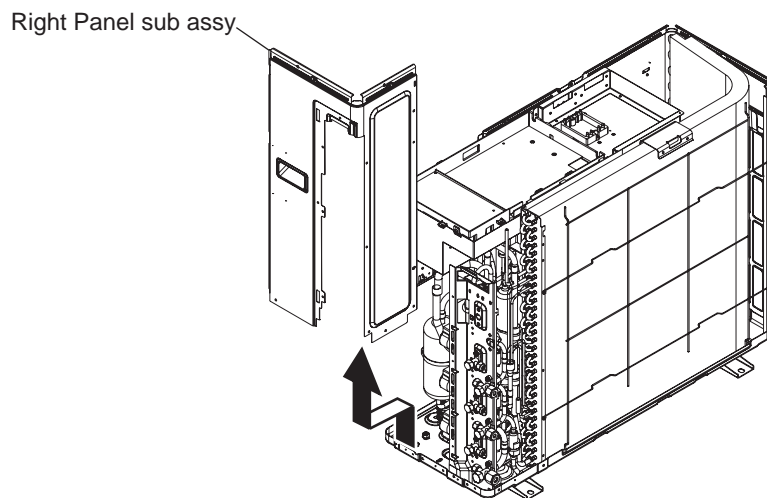

3-2 AO*G30LAT4

3-2-1 PARTS LAYOUT DRAWING

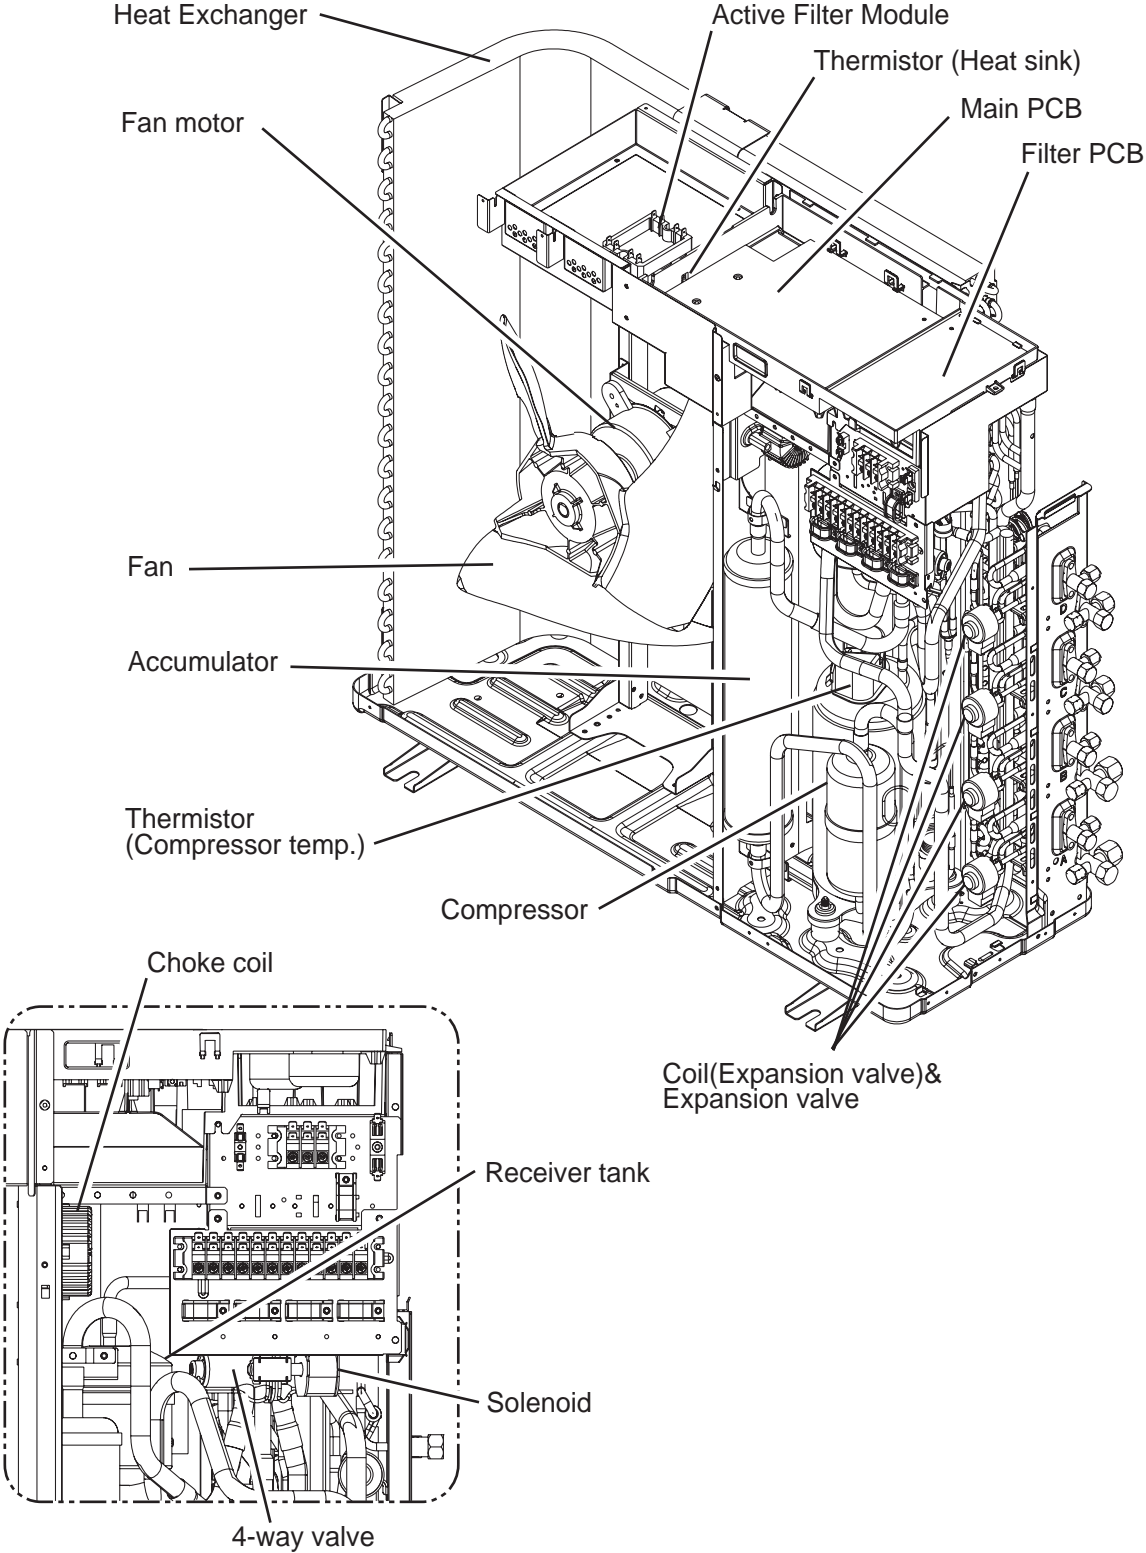


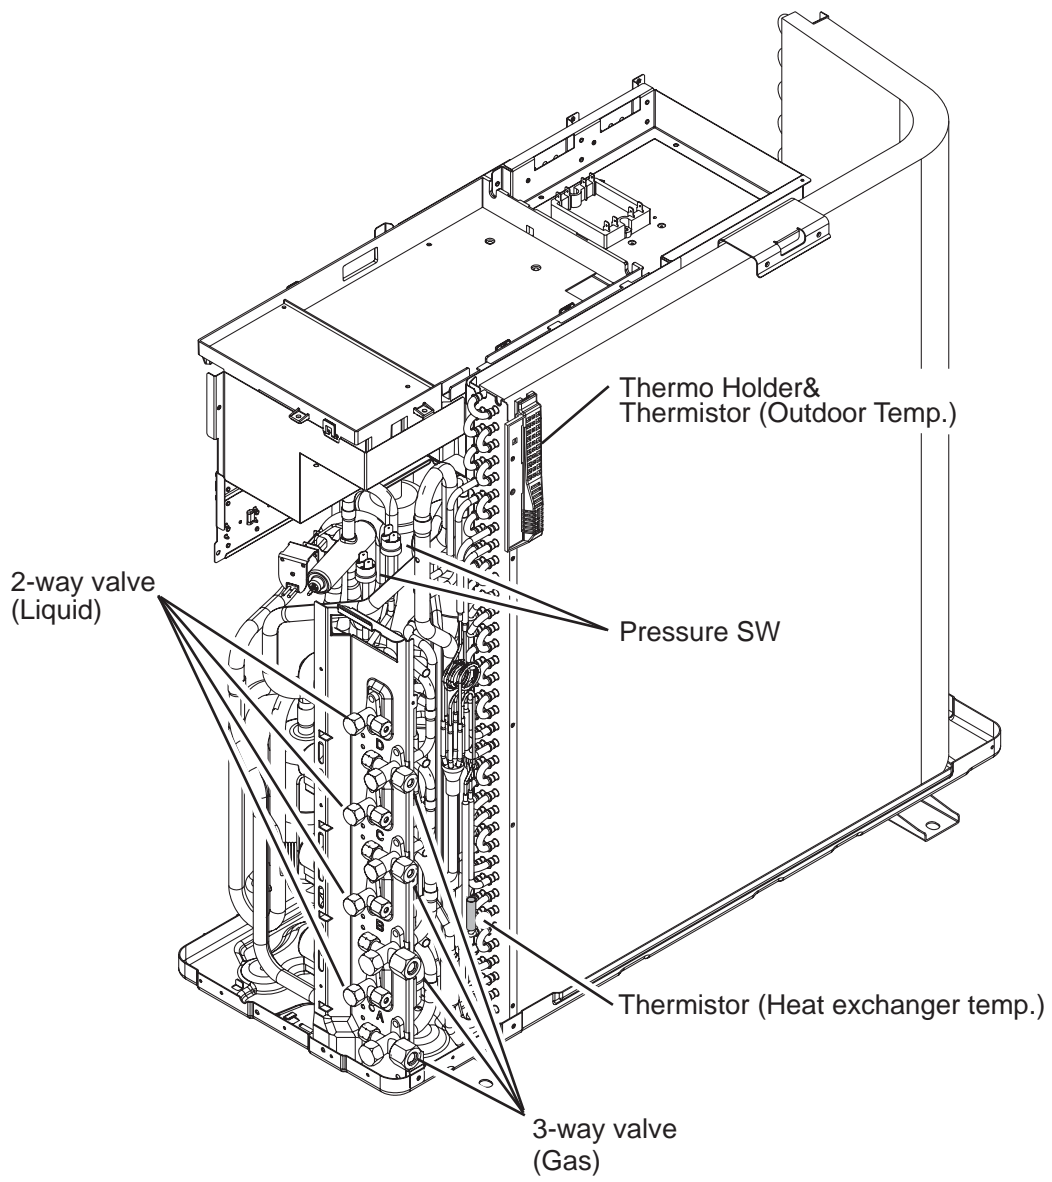

3-2-2 DISASSEMBLY PROCESS (AO*G30LAT4)

1. Service Panel sub assy removal

- Remove the 2 mounting screws.
- Remove the SERVICE PANEL by sliding downward.

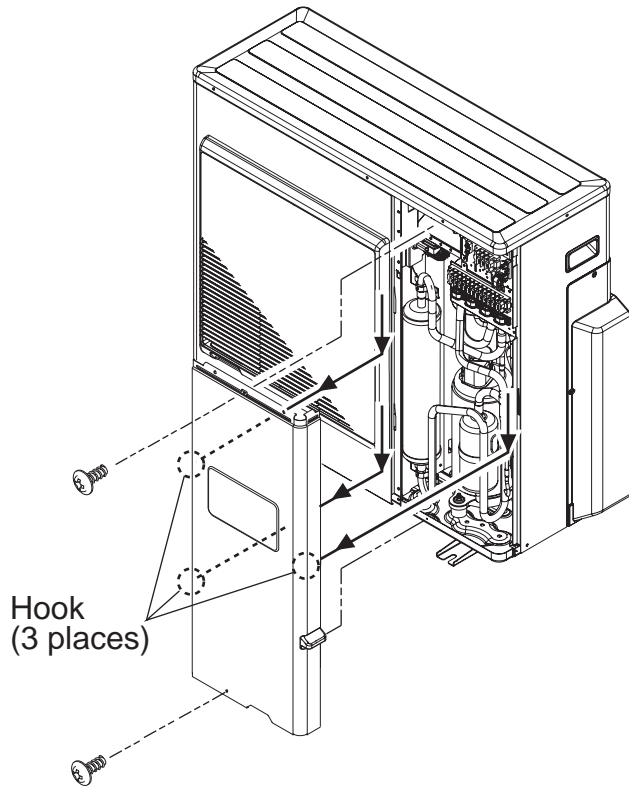


Replaceable Component


Compressor
Accumulator
4-way valve
Solenoid
Thermistor (Compressor temp.)
Thermistor (Discharge temp.)
Thermistor (Outdoor temp.)
Thermistor (Heat exchanger temp.)
Thermistor (2/3-way valve temp.)
Pressure SW
Coil (Expansion valve)

2. Top Panel sub assy removal

- Remove the 7 mounting screws.
- Remove the TOP PANEL upward.

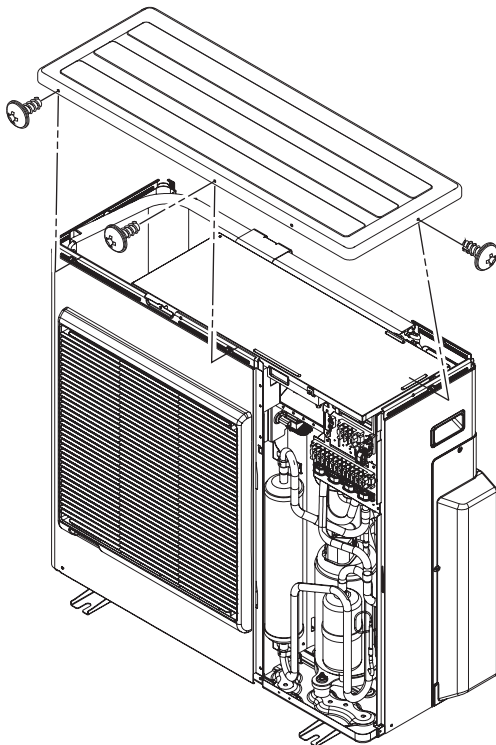



FRONT VIEW

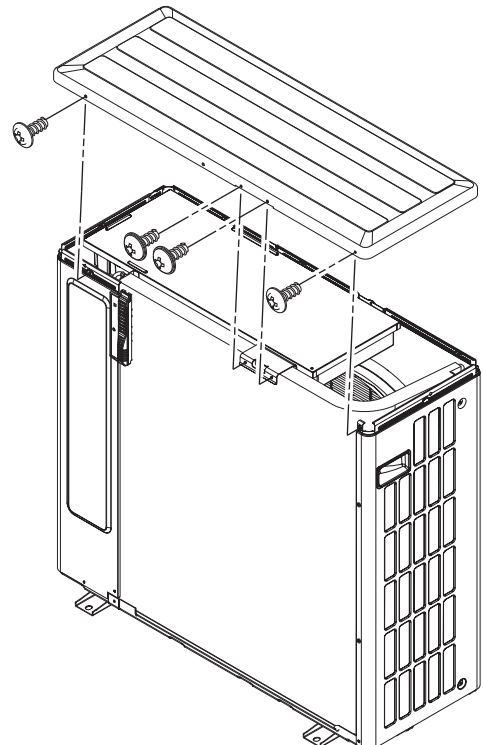

REAR VIEW


3. Inverter Box removal

- Remove the 6 mounting screws.
- Remove the power supply & connection cord.
- Remove the connectors connected to Main PCB. (Thermistor, EEV, and so on)
- Remove the Inverter Box upward.

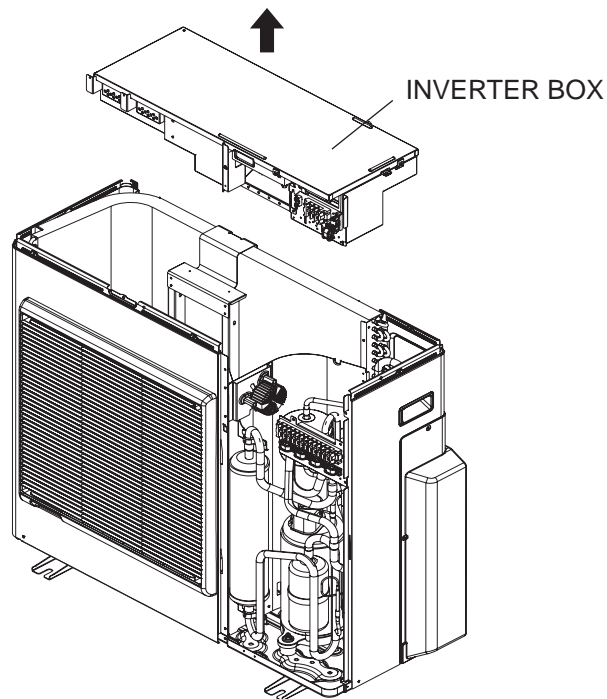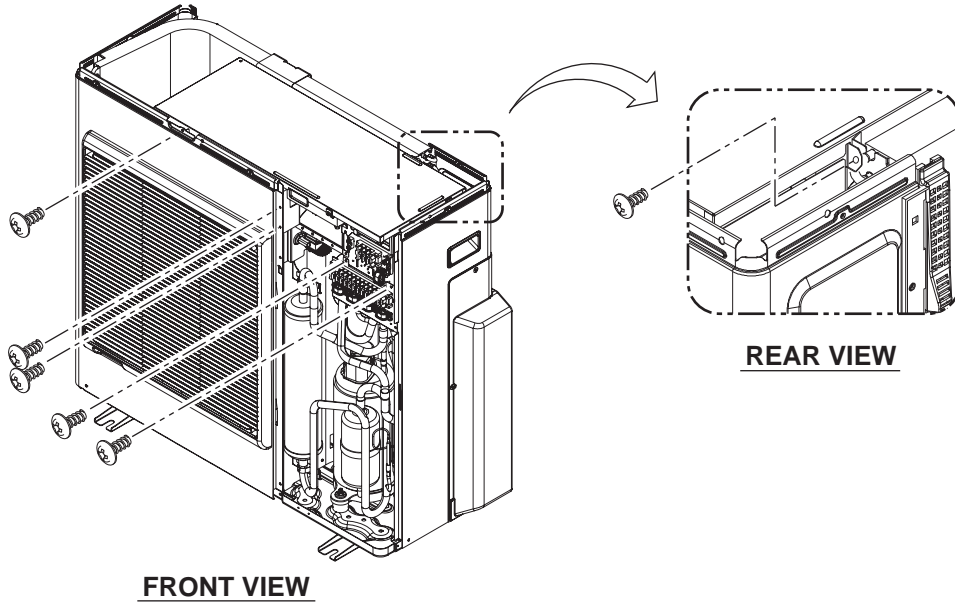



4. Inverter Box Cover removal

- Remove the 1 mounting screw.
- Remove the Inverter Box Cover upward.

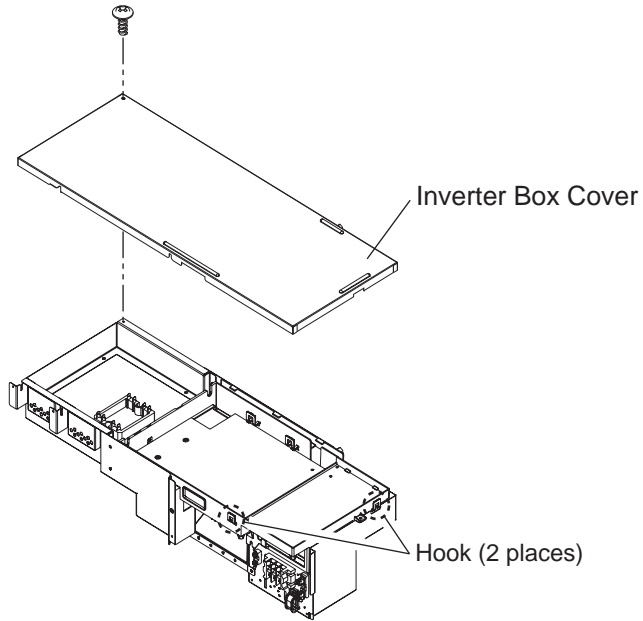


5. Main PCB removal


- Remove the 4 mounting screws. (Refer to VIEW -A)
- Remove the wires from terminal. (Refer to VIEW -B)
- Remove the wires. (Refer to VIEW -C, -D)
- Remove the Main PCB.

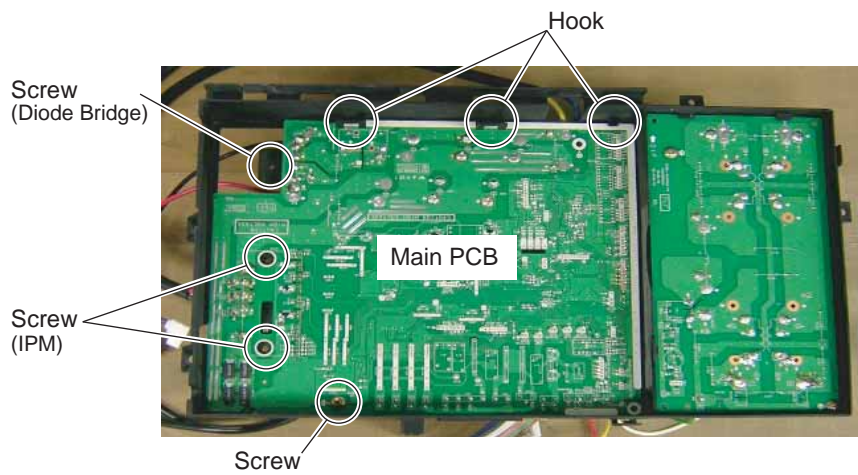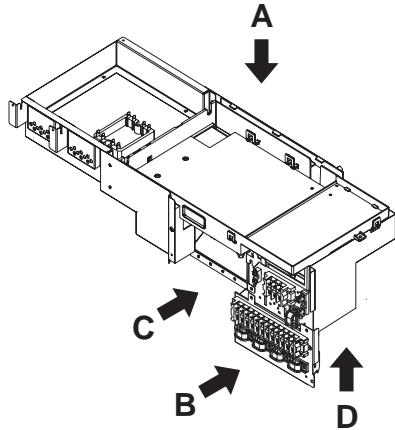


VIEW - A

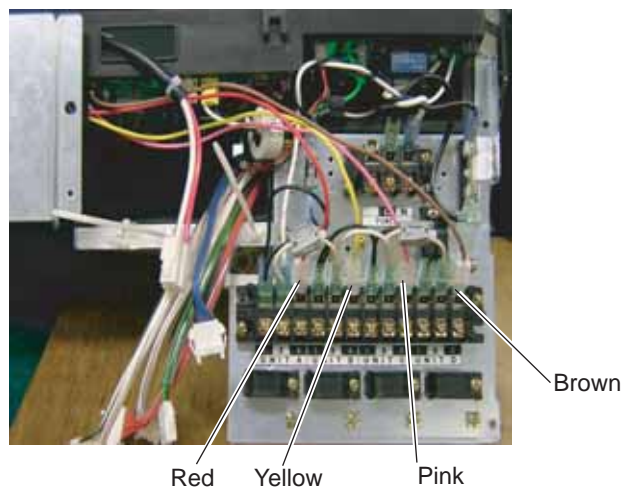

VIEW - B



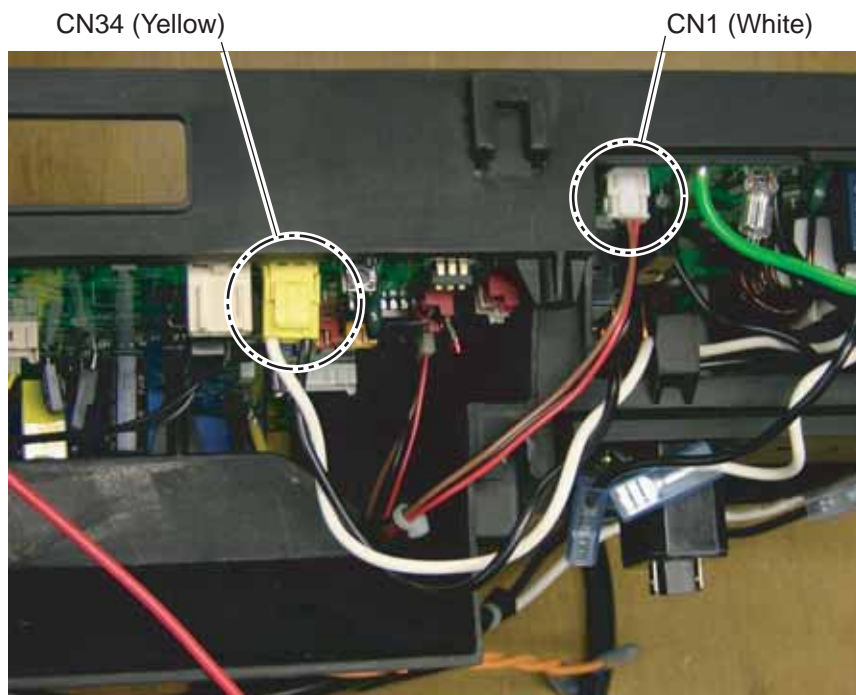


VIEW - C

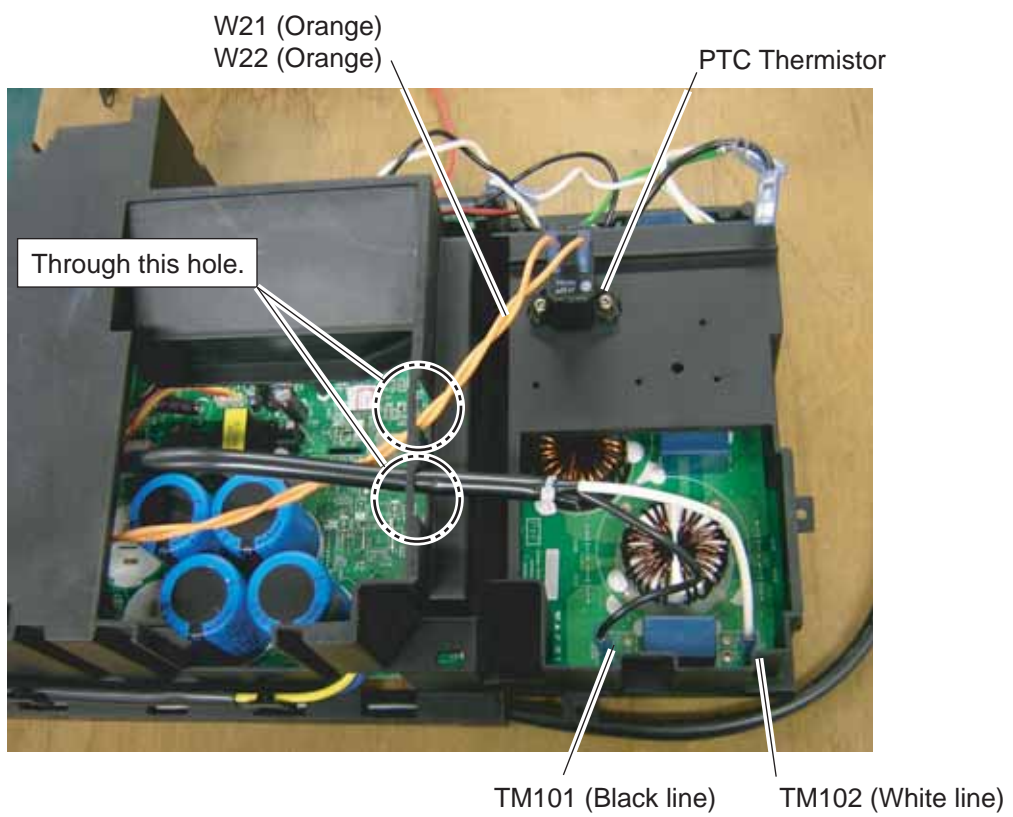

VIEW - D

Precautions for exchange of Main PCB

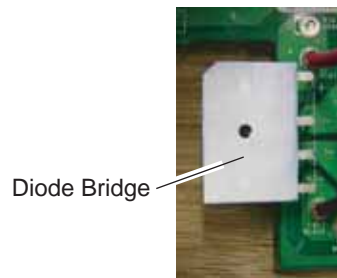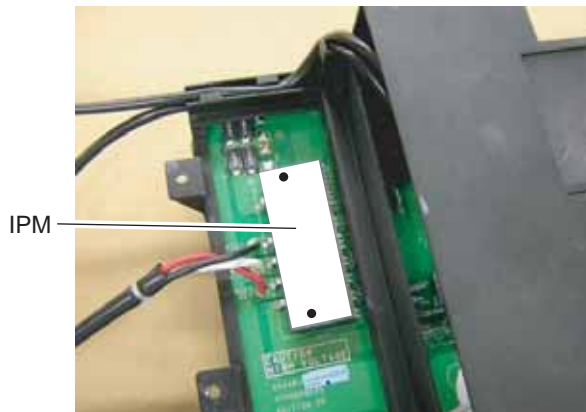
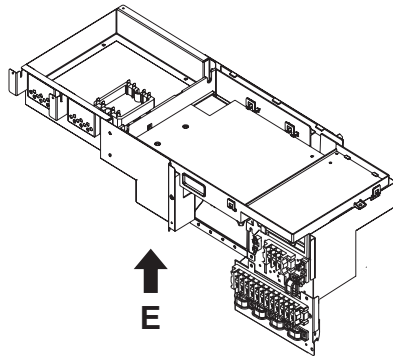


Spread the heat dissipation compound on the other side of IPM and Diode Bridge, when you exchange Main PCB by the repair.


VIEW - E

6. Filter PCB removal

- Remove the 2 mounting screws. (Refer to VIEW -A)
- Remove the wires from terminal and fuse holder. (Refer to VIEW -B)
- Remove the Filter PCB.

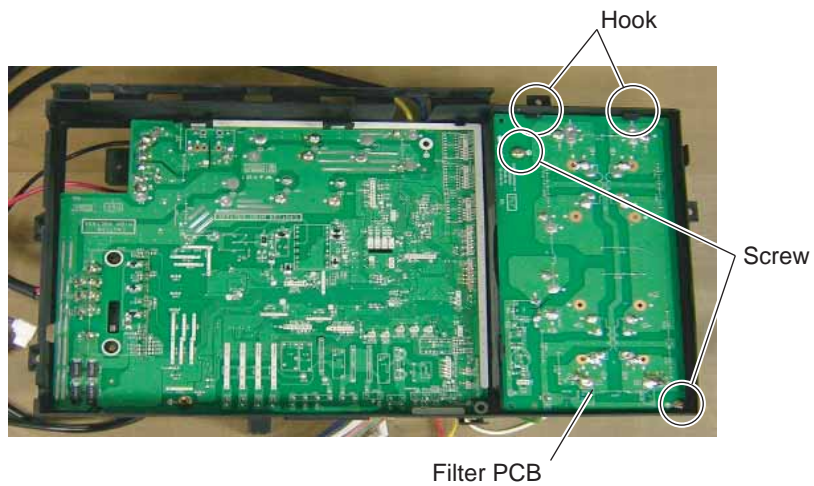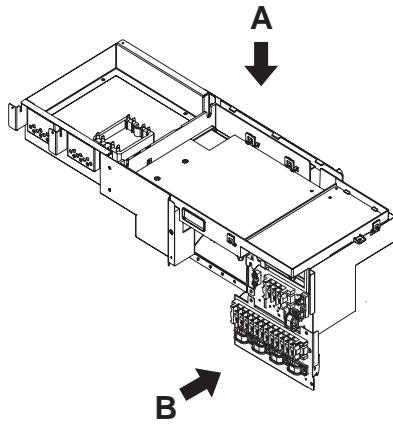




VIEW - A

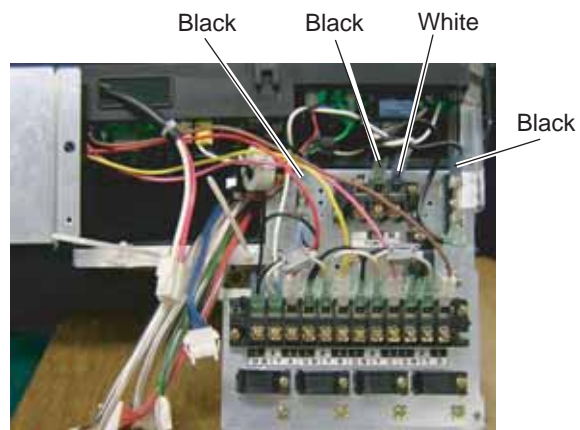

VIEW - B

7. ACTPM removal

- Remove the connectors and cords. (Refer to VIEW -F)
- Remove the 2 mounting screws. (Refer to VIEW -F)
- Remove the ACTPM (Active Filter Module).

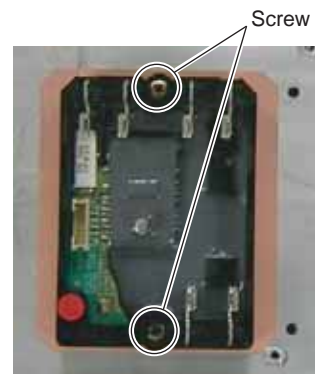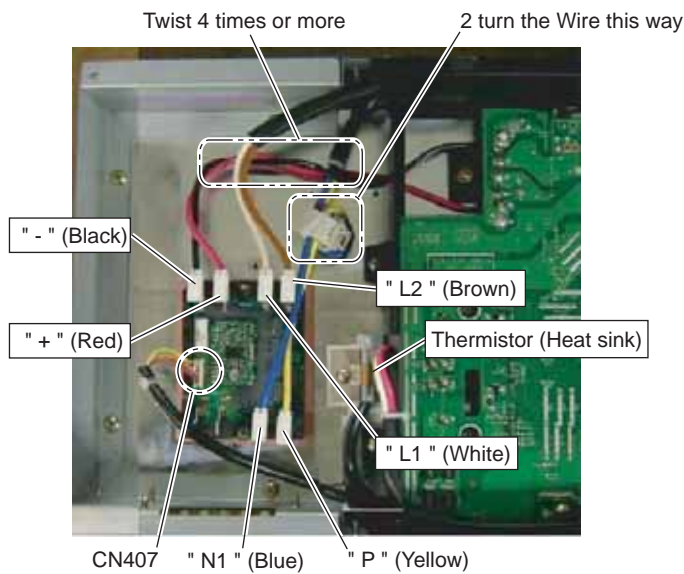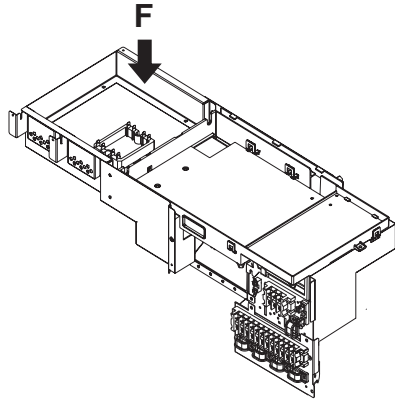


Spread the heat dissipation compound on the other side of ACTPM, when you exchange ACTPM by the repair.

VIEW - F


8. Valve Cover sub assy removal

- Remove the 3 mounting screws.
- Remove the Valve Cover sub assy.

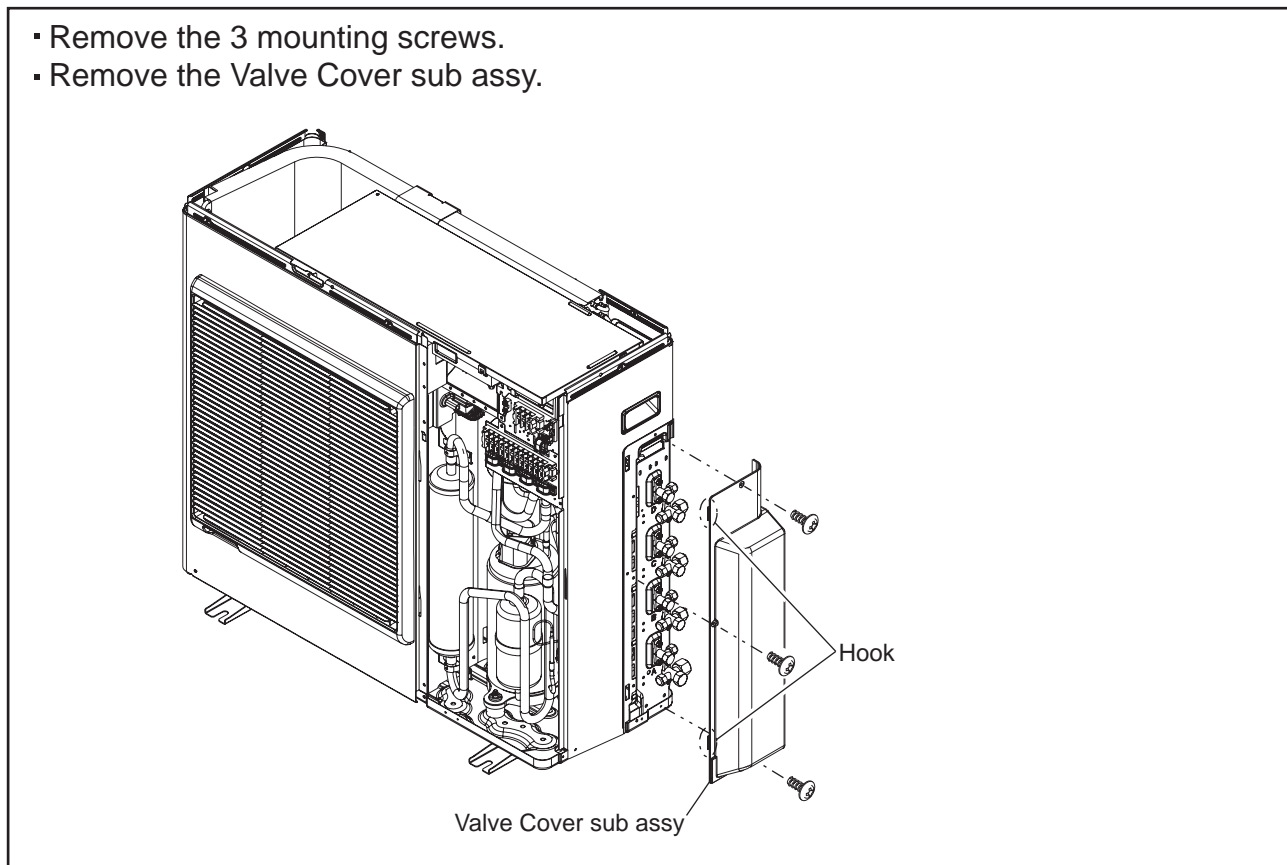


9. Thermo Holder removal

- Remove the 1 mounting screw.
- Remove the Thermo Holder by sliding upward.

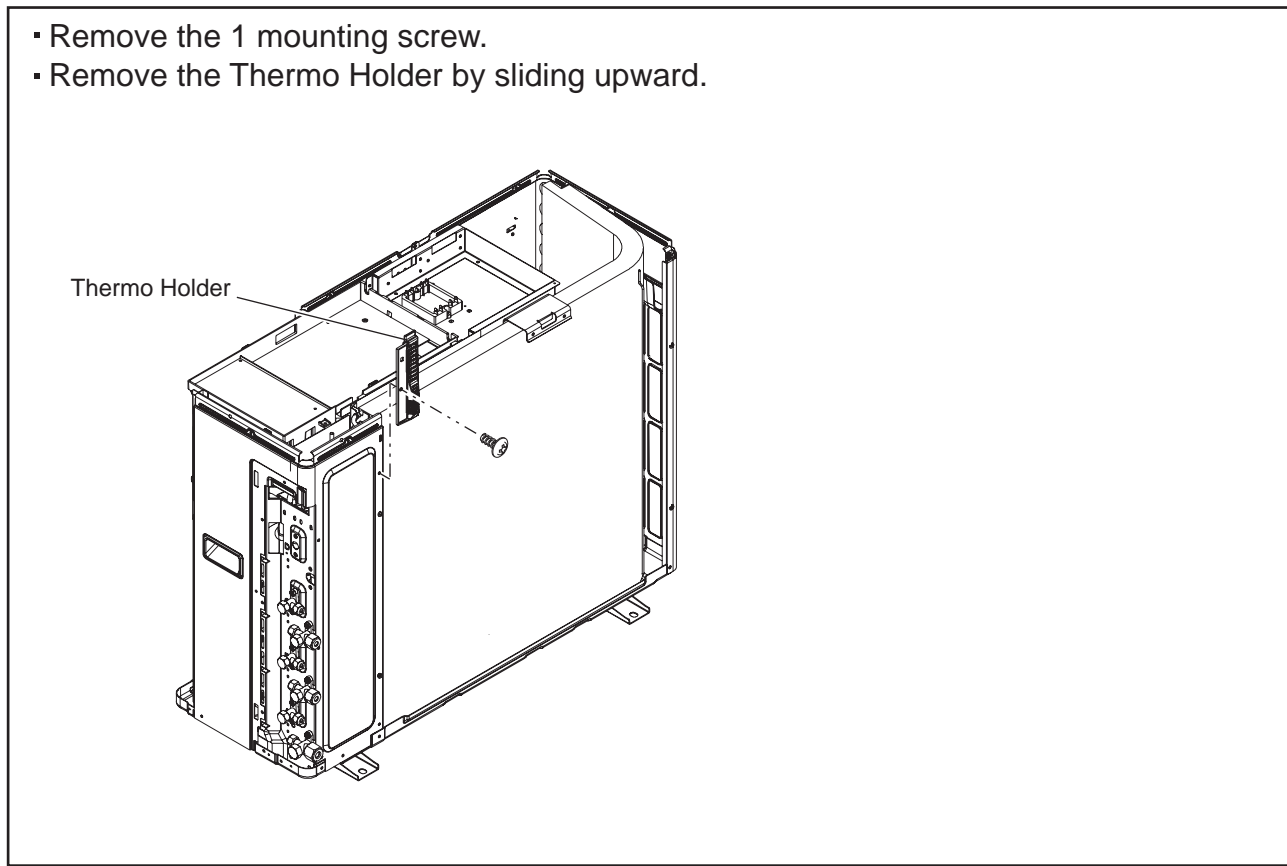



10. Right Panel sub assy removal

- Remove the 13 mounting screws.

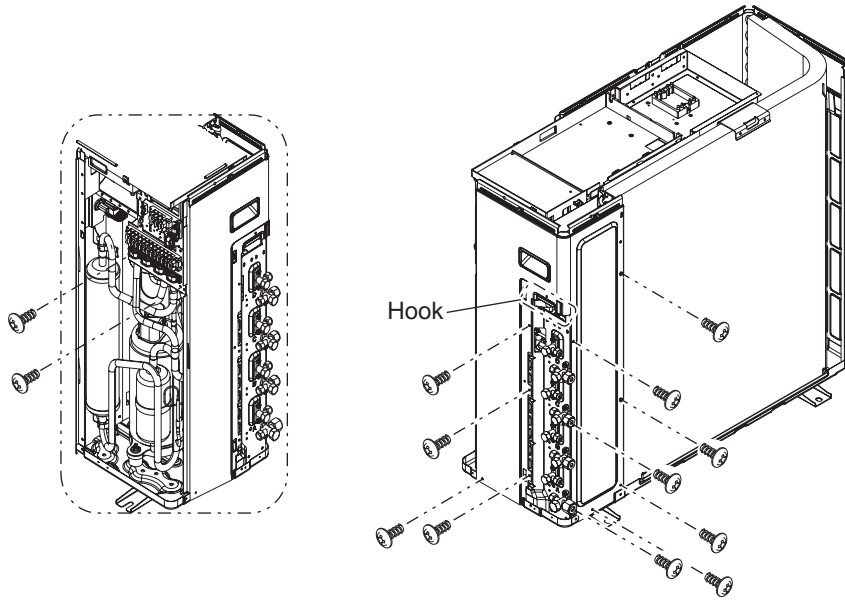

- Remove the Right Panel sub assy by sliding upward.

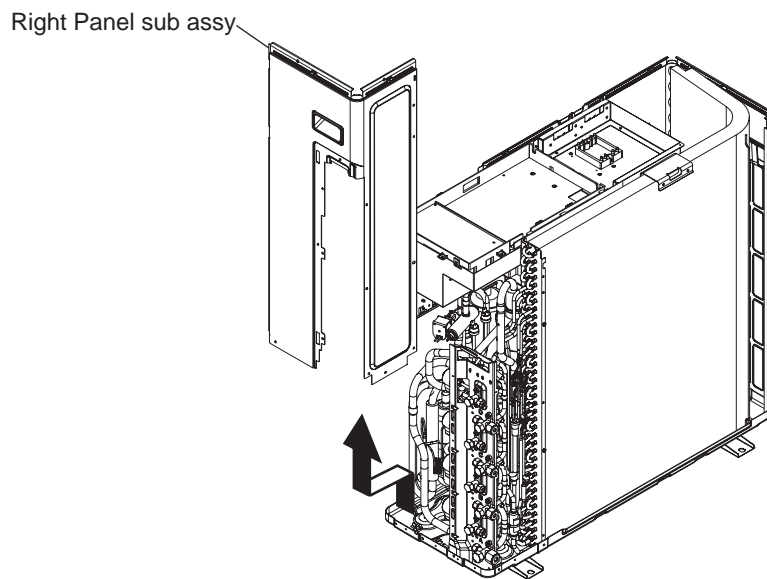

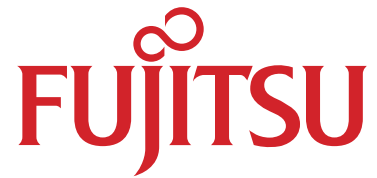

FUJITSU GENERAL LIMITED

3-3-17, Suenaga, Takatsu-ku, Kawasaki 213-8502, Japan